



# Theme Series

## M87 User Manual

### Introduction

Thank you for choosing Mechanical Rechargeable Keyboard. For the best results, please read the user manual carefully before using this product.

### RGB Backlit Modes

FN+ Scr : Adjust 19 LED backlit modes

FN+Pause: Adjust lighting color, 9 levels

FN+ ↑ : Increase brightness

FN+ ↓ : Decrease brightness

FN+ → : Increase speed

FN+ ← : Decrease speed

### XVX Gaming Interaction Mode

FN+DEL	First mode:FPS --- WASD R←→↑↓ ESC blocks light up
	Second mode:COD --- QWERTASDFGCV 1-7 Ctrl Shift blocks light up
	Third mode:Car --- WASDR Ctrl Shift Alt ←→↑↓ blocks light up
	Fourth mode:LOL --- QWER DGFCV Ctrl Alt Tab ~ 1-6 Esc blocks light up

Note: The lighting of the 4 preset game modes can be recorded.

1

★Recording steps:

Set the individual keys first, then adjust to the color (red, orange, yellow, green, blue, purple, white, pink).

After entering any game mode, press FN+HOME to start recording, the key has no output function at this time, the indicator light flashes, click the key to be recorded, adjust the light color. To finish recording, press FN+HOME to finish recording .

### Multimedia Function

FN+F1 : Home

FN+F2 : My Computer

FN+F3 : Mail

FN+F4 : Music

FN+F5 : Previous Playlist

FN+F6 : Next Playlist

FN+F7 : Play/Pause

FN+F8 : Stop

FN+F9 : Mute

FN+F10 : Volume down

FN+F11 : Volume up

FN+F12 : Lock/Unlock the keyboard

2

### Multimedia Function

FN+Esc : Hold for 3 seconds to restore factory settings

FN+WIN : WIN lock/unlock

FN+W : W S A D is interchanged with ↑ ↓ ←→, click FN+W again to restore to normal

### Package Contents

- 1 x Mechanical Rechargeable Keyboard
- 1 x USB Nano Receiver
- 1 x Type-C Cable
- 1 x User Manual
- 1 x Keycap Puller
- 1 x Switch Puller

### Features:

- TKL Mechanical keyboard
- 2.4G Wireless + Wired dual modes
- Rechargeable battery:3000 mA
- RGB backlit, 19 kinds of lighting modes
- USB Full Speed 2.0 (12Mbps)
- N-key rollover

3

### Installation, Connection and Use

1. Wired mode

Toggle the switch to the left (the color card shows red) for wired mode. Connect the USB charging cable to your computer.

2. 2.4G Wireless mode

Charge the battery. Toggle the switch to the right (the color card shows green) for wireless mode

Plug the USB nano receiver into the USB port of your computer. Once the computer recognize the keyboard, you're ready to use.

In 2.4G Wireless mode, If not use for more than 60 seconds, the RGB backlit will turn off automatically and keyboard enter power-saving mode.It is better turn off the keyboard when not use for long time.

### Build the connection between the USB receiver and keyboard

Toggle the power switch to the right (the color card shows green), press FN+P for 5 seconds, now the key"P" is flashing. Plug the USB nano receiver into the USB port of your computer. Key"P" stop flashing after building connection successfully.

4

### Charge the keyboard

The battery should be charged for at least 6~8 hours before being used for the first time.

When the battery is low, the FN key red light flashes. Connect the USB charging cable to your computer or adapter.The charging indicator is located on the left side of the space bar, the charging status lights up, and it turns off when fully charged.

(charging time: around 6~8 hours).  
NOTE: If you want to use the keyboard when charging, you should choose wired mode, the power switch must be toggled to the left position.

### Troubleshooting Tips

If you experience problems while using the keyboard, here are some helpful troubleshooting tips:

Check the battery is charged

Check the receiver is properly connected to the USB port

Try reducing the distance between the keyboard and the computer

Remove any large metal objects located between the keyboard and the computer that could interrupt the signal

Product picture are for reference only.

5


### Pro software download link

<https://www.vvxchannel.com>

★ Please note the macro software is only available for Windows PC at this time.

★ The software can only be used in wire mode .

### Standard layer

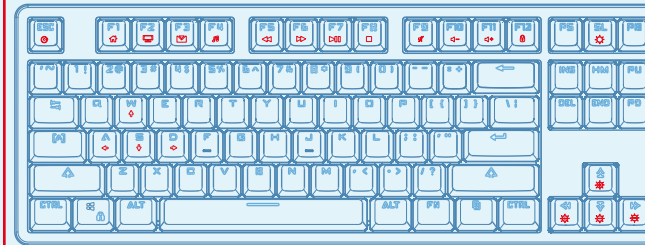

6



<https://www.vvxchannel.com>

[instagram.com/vvx\\_keyboard](https://www.instagram.com/vvx_keyboard)

[facebook.com/vvxkeyboard](https://www.facebook.com/vvxkeyboard)



## M87ゲーミング キーボード

### 取扱説明書

### 製品紹介

このたびは、XVXゲーミングキーボード「M87」をお買い上げいただき誠にありがとうございます。本製品は、最新の2.4G無線/有線モードキーボードです。  
※本製品をご使用になる前に必ずこの取扱説明書をよくお読みください。

### RGBバックライト モード

FN+Scr: 19個のバックライトモードを調整する

FN+Pause: バックライトの色を調整する、9色

FN+↑: バックライトの明るさを明るくなります。

FN+↓: バックライトの明るさをと暗くなります

FN+→: LEDの点滅（移動）の速度を速くできます

FN+←: LEDの点滅（移動）の速度を遅くできます

### XVX キー 切り替えモード

FN+DEL	モード①: FPS---WASD R↑↓←→ESCブロックが点灯する
	モード②: COD-QWERTASDFGCV 1-7Ctrl Shiftブロックが点灯する
	モード③: Car--WASDR Ctrl Shift Alt←→↑↓ブロックが点灯する
	モード④: LOL-QWER DGFCV Ctrl Alt Tab~1-6 Escブロックが点灯する

ご注意: 4つのプリセットゲームモードの照明を記録できます。

1

### \*記録手順:

最初に個々のキーを設定してから、色に合わせて調整します(赤、オレンジ色、黄色、緑、青、紫、白、ピンクの色に変更します)。ゲームモードに入った後、FN + HOMEを押して記録を開始します。この時点では、インジケータライトが点滅し、記録するキーをクリックして、ライトの色を調整します。記録を終了するには、FN+HOMEを押して記録を終了します。

### マルチメディア機能

FN+F1: ホーム

FN+F2: コンピューター

FN+F3: メール

FN+F4: 音楽

FN+F5: 前の曲

FN+F6: 次の曲

FN+F7: 音楽を再生/音楽を停止する

FN+F8: 止まる

FN+F9: ミュート

FN+F10: ボリュームダウン

FN+F11: ボリュームアップ

FN+F12: キーボードをロック / アンロックする

2

### マルチメディア機能

FN+Esc: 3秒間押し続けると、工場出荷時の設定に戻ります

FN+WIN: WINロック/アンロック

FN+W: W S A Dキーは「↑」「↓」「←」「→」の入れ替え、FN+W同時に押すと通常に戻す

### パッケージ内容

- 1 x ゲーミングキーボード
- 1 x USB ワイヤレスレシーバー
- 1 x Type C ケーブル
- 1 x 取扱説明書
- 1 x キートップ引抜工具
- 1 x 軸引抜工具

### 特徴

- TKLゲーミングキーボード
- 2.4G ワイヤレス+Type C ケーブル接続
- 消費電流: 3000mA
- RGBバックライト、19個のプリセットバックライトモード
- USB最大スピード 2.0 (12Mbps)
- N-key ロールオーバー

3

### インストール、接続、使用

#### 1.有線モード

電源スイッチをオフの位置に切り替えます(オン/オフスイッチはキーボードの下部にあります)。USB充電ケーブルをコンピューターに接続します。コンピューターがキーボードを認識すると、準備が整います。

#### 2.2.4Gワイヤレスモード

バッテリーを充電する時、電源スイッチをオンの位置に切り替えます(オン/オフスイッチはキーボードの下部にあります)。使用する準備ができたキーボードをコンピューターが認識したら、USBワイヤレスレシーバーをコンピューターのUSBポートに接続します。

2.4Gワイヤレスモード、60秒以上使用しないと、RGBバックライトが自動的にオフになり、キーボードが入力されます。省電力モード: 長期間使用しない時、キーボードの電源を切ることをお勧めします。

### USBレシーバーとキーボード間の接続を確立します

電源スイッチをオンの位置に切り替えます。FN+キー「P」を5秒間押しします。これで、キー「P」が点滅します。USBワイヤレスレシーバーを挿入します。レシーバーはコンピューターのUSBポートに接続します。接続が成功すると、キー「P」バーディングの点滅が停止します。

4

### キーボードを充電する

バッテリーは、最初に使用する前に少なくとも6~8時間充電する必要があります。

バッテリー残量が少なくなると、FNボタンの赤いライトが点滅します。USB充電ケーブルをコンピューターまたはアダプターに接続します。充電インジケータはスペースバーの左側にあり、完全に充電される場合、充電状態が消灯します。(充電時間: 約6~8時間)  
ご注意: 充電中にキーボードを使用する場合、有線モードを選択する必要があります電源スイッチを正しい位置に切り替える必要があります。り替える必要があります。

### トラブルシューティングのヒント:

キーボードの使用に問題がある場合は、トラブルシューティングに役立つヒントを次に示します。電源スイッチがオンの位置にあることを確認してください。バッテリーが充電されていることを確認してください。受信機がUSBポートに正しく接続されていることを確認してください。キーボードとコンピューター間の距離をできるだけ短くしてください。キーボードとコンピューター間の信号を妨げる可能性のある大きな金属物体を取り除きます。製品の写真は参照用です。

5


### ソフトウェアダウンロードリンク:

<https://www.vvxchannel.com>

#### ★ご注意

現在、ソフトウェアはWindows PCのみ使用できます  
\*このソフトウェアは、オンライン中に電源スイッチがオフの位置に調整されている場合にのみ使用できます。

### 標準レイヤー

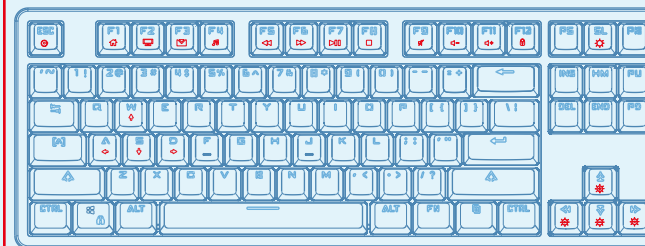

6

当社の製品を受け取ったら、包装内の商品及び付属品をチェックして、すべてを確認してください。  
部品が不足、商品が破損している場合、お気軽に弊店のアフターサービスに連絡ください。  
当社の製品は1年品質保証があります、保証期間内に正常な使用状態でご使用の場合に限り品質を保証しております。万一保証期間内で故障がありました場合は、下記保証書の内容を文字で当店のアフターサービス(注文履歴、ins、Face)に連絡してください。

保証書	
品番	M87
シリアルナンバー	
お客様 お名前 ご住所	郵便番号
販売店 販売店名称:	
保証期間	1年 お買い上げ年月日 年 月 日

※必要事項をご記入の上、大切に保管してください。

<https://www.vvxchannel.com>

[instagram.com/vvx\\_keyboard](https://www.instagram.com/vvx_keyboard)

[facebook.com/vvxkeyboard](https://www.facebook.com/vvxkeyboard)

