



# IT ISTRUZIONI PER L'USO DI CLOUDBOX

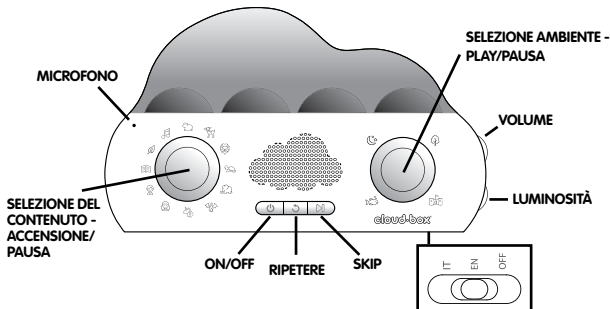


## Avvio


CloudBox viene fornito con un cavo di ricarica USB. Collegare il connettore USB-C al retro di CloudBox e l'altro connettore a una fonte di alimentazione USB. Il LED sopra il connettore USB-C si accende in ROSSO per indicare che l'unità è in carica. Quando la batteria interna è completamente carica, il LED diventa VERDE. (Nota: l'unità non funziona mentre è in carica o collegata).


Sulla parte inferiore dell'unità è presente un interruttore a tre posizioni. Fai scorrere l'interruttore da "OFF" alla lingua desiderata. (Nota: se l'unità non viene utilizzata per un periodo di tempo prolungato, riportare l'interruttore in posizione "OFF").

Premere il pulsante  sul pannello frontale per accendere la CloudBox. Le due grandi manopole consentono di selezionare le modalità sonore, i personaggi e le diverse ambientazioni.

## Selezioni della manopola di sinistra :

 : riproduce 8 melodie

 : riproduce 8 suoni della natura


 : consente di effettuare registrazioni personalizzate.

         : seleziona un personaggio


Personaggi: Pecora, Cerbiatto, Leone, Tartaruga, Elefante, Drago, Unicorno, Bambina, Bambino.

## Selezioni della manopola di destra:

 : proiezione color ambra, ambientazione stellare.

 : proiezione verde, ambientazione della foresta.

 : proiezione blu, ambientazione dell'oceano.

 : proiezione rossa, ambientazione del villaggio.



**Nota: anche se si seleziona l'ambiente principale, la luce cambierà automaticamente per adattarsi al mondo di ogni storia.**

**A causa della forma unica del CloudBox, si potrebbero notare alcune distorsioni nelle proiezioni.**



## Ascoltare le storie



Usare la manopola sinistra per selezionare uno dei 9 personaggi. Utilizzare la manopola destra per selezionare l'ambiente del personaggio. Premere il centro di una delle manopole per ascoltare la storia. Se si desidera mettere in pausa la storia in qualsiasi momento, premere nuovamente una delle manopole.

Cloudbox offre 4 storie per personaggio. Per ascoltare la storia dello stesso personaggio nell'ambiente successivo, premere il pulsante  in basso a destra o ruotare la manopola destra per selezionare un ambiente. Per ricominciare la storia in corso, premere il pulsante  in basso al centro. Al termine della storia, la proiezione rimane accesa per 15 minuti e poi si spegne.



Sul lato destro del CloudBox sono presenti due selettori rotanti. Ruotare il selettore superiore per regolare il volume. Ruotare il selettore al minimo per disattivare il suono.

Ruotare il selettore inferiore per regolare la luminosità delle proiezioni. Ruotare il selettore al minimo per spegnere i LED di proiezione.



## **Ascolto e selezione dei brani**

Selezionare l'icona  con la manopola sinistra per ascoltare le melodie, quindi selezionare uno dei 4 ambienti con la manopola destra. Ogni ambiente riproduce 2 melodie. Premere la manopola destra per avviare la riproduzione della prima melodia. Premere il pulsante  per passare alla seconda melodia, oppure ruotare la manopola destra per cambiare ambiente. Ogni melodia ha una durata di 20 minuti.


## **Ascolto e selezione dei suoni della natura**

Selezionare l'icona  con la manopola sinistra per ascoltare i suoni della natura, quindi selezionare uno dei 4 ambienti con la manopola destra. Ogni ambiente riproduce 2 suoni della natura. Premere la manopola destra per iniziare ad ascoltare il primo suono della natura. Premere il pulsante  per passare al secondo suono o ruotare la manopola destra per cambiare ambiente. Ogni suono viene riprodotto per 20 minuti.

## **Ripetere**


Premere il pulsante  per ricominciare una storia dall'inizio. Se si preme il pulsante  mentre si ascoltano melodie o suoni della natura, il timer viene azzerato.

## **Modalità di ripetizione**

Se si desidera ascoltare le 4 storie di un personaggio, selezionare il personaggio, selezionare un ambiente qualsiasi e premere il pulsante . CloudBox racconterà le 4 storie del personaggio selezionato, a partire dall'ambiente selezionato. Se si utilizza la modalità di ripetizione con melodie o suoni della natura, CloudBox riprodurrà entrambi i suoni nell'ambiente selezionato.




## Registrazione di una storia personalizzata

Selezionare l'icona  sulla manopola sinistra. Selezionare uno dei 4 ambienti sulla manopola destra. Premere contemporaneamente le due manopole di sinistra e di destra. CloudBox emetterà un segnale acustico per confermare l'avvio della registrazione; è quindi possibile rilasciare entrambi i pulsanti e la registrazione continuerà. In alto a sinistra del pannello frontale si trova un microfono. Parlare chiaramente posizionando il microfono a 12-15 cm dalla bocca. Al termine della registrazione, premere una delle due manopole per interromperla.

È possibile registrare una storia per ciascuna delle 4 ambientazioni. Le storie possono durare fino a 8 minuti. All'approssimarsi della fine del tempo di registrazione, i LED di proiezione si accendono e poi si spengono uno alla volta per indicare che il tempo di registrazione sta per terminare. Per cancellare una storia registrata, premere contemporaneamente le due manopole a sinistra e a destra. Quando la CloudBox emetterà un segnale acustico per confermare l'avvio della registrazione, premere nuovamente queste due manopole senza fare rumore e la vecchia registrazione verrà cancellata. Il CloudBox emette due segnali acustici per confermare l'interruzione della registrazione.

## Ascoltare una storia personalizzata

Selezionare l'icona  e poi selezionare uno dei 4 ambienti in cui è stata registrata una storia. Premere una delle due manopole per avviare la storia e la proiezione corrispondente. Una volta terminata la storia, CloudBox terrà accesa la proiezione come luce notturna rilassante per 5 minuti.



## Jack per le cuffie

CloudBox dispone di una presa per cuffie da 3,5 mm sul pannello sinistro. Le cuffie non sono incluse.



## Ricarica della CloudBox

Se il volume del suono o la luminosità della luce LED diminuisce, ricaricare il dispositivo. La spia di carica diventa verde quando la batteria è completamente carica. Nota: se Cloudbox si spegne a causa della batteria scarica, deve essere riavviato per ripristinare le funzioni iniziali. Per riavviare il dispositivo, spostare l'interruttore a scorrimento sul fondo su "OFF" e poi sulla lingua desiderata.

## RIQUADRO INFERIORE – NOTE LEGALI

Nota per adulti: Leggere le istruzioni e le avvertenze prima dell'uso. Il prodotto è accompagnato da un libro di favole. Il prodotto è pensato per l'uso nella culla. Non lasciare il bambino da solo con il prodotto. Conservare l'imballaggio e il foglio di istruzioni per riferimenti futuri e informazioni di contatto. Rimuovere gli adesivi o le parti in plastica ed eliminare tutti i pezzi piccoli in modo sicuro. Eliminare tutti i giocattoli rotti. Nel tentativo di migliorare continuamente i nostri prodotti, il contenuto potrebbe variare leggermente rispetto a quello mostrato sulla confezione. Visita [www.cloudb.com](http://www.cloudb.com) per ulteriori informazioni e suggerimenti su garanzia e sicurezza.

**⚠ AVVISIO:** La batteria non è sostituibile. Per evitare il rischio di incendio, il prodotto Cloudbox deve essere caricato solo tramite una sorgente di alimentazione USB esterna, con un'uscita da 5,0 V e 0,5 A. Le batterie devono essere ricaricate solo sotto la supervisione di un adulto. Lo smaltimento di una batteria nel fuoco o in un forno caldo, oppure la frantumazione o il taglio meccanico di una batteria possono provocare un'esplosione. Lasciare la batteria in un ambiente con temperature estremamente elevate può provocare un'esplosione o la fuoriuscita di liquidi o gas infiammabili. Non posizionare materiali infiammabili al di sopra delle batterie agli ioni di litio durante la ricarica, altrimenti potrebbero verificarsi surriscaldamento, esplosioni o incendi. Non lanciare o far cadere il dispositivo elettrico CloudBox da un posto alto. Non piantare un chiodo nella batteria agli ioni di litio, non colpirla con un martello e non calpestarla con i piedi. Non versare liquidi sul dispositivo elettrico CloudBox. Non smontare le batterie agli ioni di litio. Ispazia regolarmente il prodotto per individuare eventuali danni al cavo di alimentazione, alla spina e ad altri componenti; in presenza di danni, non utilizzarlo più fino a quando il danno non sarà stato riparato.

**⚠ AVVISIO:** Il cavo di ricarica fornito con questo prodotto non è un giocattolo e deve essere utilizzato solo da un adulto. Tenere lontano dalla portata dei bambini.

**⚠ AVVISIO:** Quando si ricarica la batteria, utilizzare solo l'alimentatore staccabile specificato (5,0 V, 0,5 A). La perdita dell'acido della batteria può causare lesioni personali e danni al prodotto Cloud b e agli oggetti circostanti. Se si dovessero verificare perdite, sciagquare accuratamente la pelle interessata, assicurandosi di tenere l'acido lontano da occhi, orecchie, naso e bocca. Sciagquare immediatamente gli abiti o le altre superfici che entrano in contatto con l'acido della batteria fuoriuscito. Lavare immediatamente qualsiasi indumento o altra superficie che venga a contatto con l'acido fuoriuscito della batteria. Le batterie che perdono possono emettere un suono "schioccante".

Conforme con gli standard di sicurezza degli Stati Uniti e di sicurezza internazionale EN71, ASTM F-963, le norme canadesi sui prodotti pericolosi (giocattoli), CRC c931. Conforme con la direttiva EMC. Il copyright copre la grafica 3D e 2D, il testo e le fotografie. Prodotto in Cina.

Il copyright copre la grafica 3D e 2D, il testo e le fotografie. Prodotto in Cina.


BTL Diffusion, SARL, MERE, 78490 FRANCE. © 2023 BTL Diffusion, SARL. Tutti i diritti riservati. "Finley Fawn," "Drake the Dragon," "Lily the Unicorn," "Sleep Sheep", "Louis Lion", "Elliot Elephant", y "CloudBox" sono marchi commerciali di BTL Diffusion, SARL.

## Cura del CloudBox

Per pulire il CloudBox, scollegarlo da qualsiasi fonte di alimentazione e far scorrere l'interruttore sul fondo in posizione OFF. Evitare di versare liquidi sui comandi o nelle porte. Pulire delicatamente le superfici esterne con un panno morbido e privo di pelucchi, asciutto (o leggermente umido). Non utilizzare detergenti contenenti solventi, cloruri, sostanze chimiche o abrasivi. Assicurarsi che il CloudBox sia completamente asciutto prima di utilizzarlo o collegarlo a una fonte di alimentazione.




# EN CLOUDBOX UNIT INSTRUCTIONS

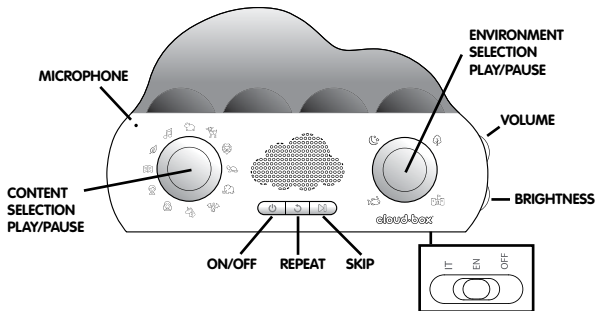


## Getting Started

Your CloudBox Storyteller includes a USB charging cable. Plug the smaller connector (USB-C) into the back of the CloudBox. Plug the larger, rectangular USB connector into a USB power source. The LED above the USB-C connector will illuminate in RED to let you know the unit is charging. When the internal battery is fully charged, the LED will turn GREEN. (Note: unit will not operate while charging or if plugged in).

On the bottom of the unit is a 3-position slide switch. Slide the switch from "Off" to the desired language. (Note: if the unit will not be used for a long period of time, slide the bottom switch to the OFF position.)

Press the  button on the front panel to turn on the CloudBox. The 2 large knobs allow you to select sound modes, characters and environments.

## Left Knob Selections

 : play 8 melodies

 : play 8 Nature Sounds

 : make custom recordings

         : select a character

Characters: Sheep, Fawn, Lion, Turtle, Elephant, Dragon, Unicorn, Little Girl, Little Boy.

## Right Knob Selections

 : Amber projection, Star pattern

 : Green projection, Forest pattern



 : Blue projection, Ocean pattern

 : Red projection, Village pattern

**Note: although you select the primary environment, the light patterns automatically change to match the action in each story. Due to the unique shape of the CloudBox, you might notice some distortions in the projections.**

## Listening to Stories

Use the left knob to select one of the 9 characters. Use the right knob to select the Environment. Press the center of either knob to play the story. If you want to pause the story at any point, press either knob again.



Each character has 4 stories. To hear the same character in the next environment, press the  button on the bottom right or turn the Right Knob. To start the current story over again, press the  button in the center bottom. After your story ends, the projection will illuminate for 15 minutes, then shut off.





There are 2 rotating dials on the right side of the CloudBox. Turn the top dial to adjust volume. Turning the dial to the lowest setting turns the sound OFF.

Turn the lower dial to adjust the brightness of the projections. Turning the dial to the lowest setting turns the projection LEDs OFF.



## **Playing and Selecting Melodies**

Select the  icon to listen to melodies; then select one of the 4 environments. There are 2 melodies in each environment. Press the Right Knob to begin playing the first melody. Press the  button to go to the second melody, or turn the knob to change environments. Each melody will play for 20 mins.


## **Playing and Selecting Nature Sounds**

Select the  icon to listen to Nature Sounds; then select one of the 4 environments. There are 2 Nature Sounds in each environment. Press the Right Knob to begin playing the first Nature Sound. Press the  button to go to the second sound or turn the knob to change environments. Each sound will play for 20 mins.

## **Repeat**


Pressing the  button will restart any story at the beginning. Pressing the  button while listening to Melodies or Nature Sounds will reset the timer.

## **Repeat Mode**

If you would like to hear all 4 stories for any one character, select the character, select any environment, then press the  button instead of the Play buttons. The CloudBox will play all 4 character stories in a row, starting with the environment you have selected. If you use Repeat Mode with Melodies or Nature Sounds, the unit will play both sounds in the selected environment.




## Recording a Custom Story

Select the  icon on the left knob. Select one of the 4 environments on the Right Knob. PRESS the left knob and the right knob at the same time and then release them. The CloudBox will “beep” to confirm that it has started to record. There is a microphone behind the small opening on the top left of the front panel. Speak clearly with the microphone 12-15 cm from your mouth. When you have finished your story, press either knob to stop recording. The CloudBox will beep twice to confirm that it has stopped recording.

You can record a story for each of the 4 environments. Your stories must be shorter than 8 minutes. If you get near the end of the recording time, the projection LEDs will illuminate and then go off one at a time to indicate the recording time is over. To erase a recorded story, press the Left knob and Right knob simultaneously then release. When the CloudBox “beeps” to confirm recording has started, press both buttons again without making any sound and the old recording will be erased.

## Playing a Custom Story

Select the  icon then select one of the 4 environments where you saved a story. Press Play to start your story and the matching projection. After your story ends, the CloudBox will keep the projection on to serve as a soothing nightlight for 15 minutes.



## Headphone Jack

Your CloudBox includes a 3.5 mm headphone jack on the left panel. Headphones not included.





## Recharging the CloudBox


If the sound volume or LED brightness diminish, re-charge the unit. The charge indicator LED turns green when the batteries are fully recharged. Note: If the Cloudbox shuts down due to a low battery, it must be restarted to restore its initial functions. To restart the device, move the slide switch on the bottom to “OFF” and then to the desired language.

## LEGAL

Adult Note: Read the instructions and warnings before use. A story book is provided with the product. Product is not intended for use in crib. Do not leave infant unattended with product. Please retain packaging and instruction sheet for future reference and contact information. Remove any stickers or plastic attachments and discard all small pieces safely. Discard all broken toys. In an effort to continually improve our products, contents may vary slightly from that shown on packaging. Visit [www.cloudb.com](http://www.cloudb.com) for warranty information and more safety tips.

 **WARNING:** Battery is not replaceable. To avoid risk of fire, the CloudBox product must only be charged by an external USB power source with an output of 5.0V, 0.5A. Batteries should only be recharged under adult supervision. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting a battery can result in an explosion. Leaving the battery in an extremely high temperature environment can result in an explosion or the leakage of flammable liquid or gas. Do not place flammable materials on top of the Li-ion batteries when charging or it may result in overheating, explosion or fire. Do not throw or drop the CloudBox electrical device from a high place. Do not drive a nail into the Li-ion battery, or hit it with a hammer, or step on it with your feet. Do not spill any liquids on the CloudBox electrical device. Do not disassemble Li-ion batteries. Regularly examine the supply cord, plug, enclosure and all other parts for damage. In the event of damage, do not use product until any damage is repaired.

 **WARNING:** The charging cable provided with this product is not a toy and is only to be used by an adult. Keep away from children.

 **WARNING:** When recharging battery, only use the specified detachable supply unit (5.0v,0.5A). Battery acid leakage can cause personal injury and cause damage to your Cloud b product and surrounding property. If battery leakage occurs, thoroughly wash any affected skin, making sure to keep battery acid away from eyes, ears, nose and mouth. Immediately wash any clothing or other surface that comes into contact with leaked battery acid. Leaking batteries may make "popping" sounds.

Complies with U.S. and International safety standards EN71, ASTM F-963, Canadian Hazardous Products (Toys) Regulations, CRC c931. Complies with EMC directive.

Copyright covers 3D and 2D artwork, text and photographs. Made In China.

BTL Diffusion, SARL, MERE, 78490 FRANCE. © 2023 BTL Diffusion, SARL. All Rights Reserved. "FinleyFawn", "Drake the Dragon", "Lily the Unicorn", "Sleep Sheep", "Louis Lion", "Elliot Elephant", "CloudBox" are trademarks of BTL Diffusion, SARL.

## FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

## Caring for the CloudBox

To clean your CloudBox, disconnect it from any power source and slide the switch on the bottom to the OFF position. Avoid getting any liquids or moisture on the controls or in the ports. Wipe exterior surfaces gently with a soft, lint-free dry (or slightly damp) cloth. Do not use cleaning agents that contain solvents, chlorides, chemicals or abrasives. Be sure the CloudBox is completely dry before using or connecting to any power source.