

175mm

64mm


ES Gracias por comprar el Set Thor Molinillos Eléctricos USB inalámbricos.

ANTES DE USAR POR PRIMERA VEZ

Para garantizar la seguridad y mantener la alta calidad del producto, le recomendamos leer y seguir las instrucciones atentamente.


- No sumerja el aparato en agua ni en ningún otro líquido para evitar daños a las personas o al producto.
- Úselo solo para pimienta y sal, no lo use para otros fines.
- No fuerce el molinillo para apretarlo, ni lo gire, ni intente acelerar el mecanismo.
- Mantenga las partes del cuerpo (Ej. dedos) y utensilios alejados del cabezal de molinda para evitar daños.
- Sujete firmemente el molinillo cuando lo utilice.
- Mantenga este producto fuera del alcance de los niños.
- No desmonte el producto usted mismo.
- Mantener alejado de gases inflamables y explosivos.

DESCRIPCIÓN DEL PRODUCTO

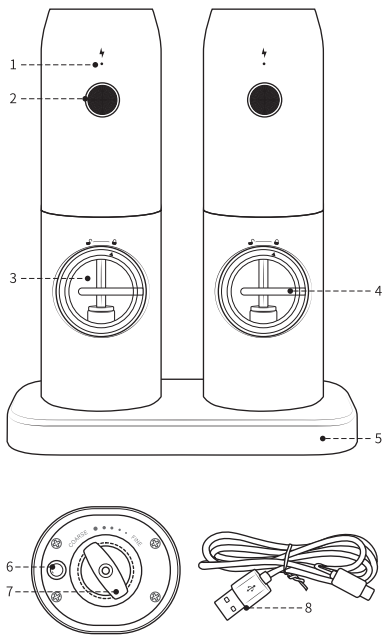

- Luz indicadora
- Botón Encendido/Apagado
- Recipiente contenedor
- Tapa del contenedor
- Base de carga y almacenamiento
- Luz
- Selector nivel de molinda.
- Cable USB de carga tipo C

CÓMO CARGAR ELÉCTRICAMENTE EL SET DE MOLINILLOS

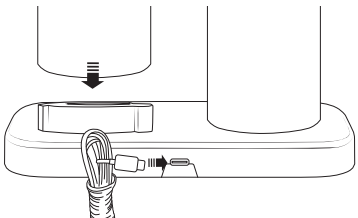


- Inserte el cable USB incluido en el enchufe de carga tipo C ubicado en la parte posterior de la base.
- Inserte el adaptador en una toma de corriente interior.
- Durante la carga, la luz indicadora se ilumina en rojo, lo que indica que se está cargando normalmente.
- La luz indicadora se ilumina en blanco cuando la batería está completamente cargada.
- Se necesitan 2,5 horas para cargar completamente la batería.

PRECAUCIONES


- Este es un producto recargable con batería de litio.
- Cuando no esté en uso, se recomienda cargarla cada tres meses para garantizar la vida útil de la batería.
- El adaptador no está incluido con este producto. Cargue únicamente con UL/GS o adaptadores con certificado de seguridad aprobados por la SEC con voltaje de salida de 5v.

CÓMO USAR EL MOLINILLO

- Sujete firmemente el molinillo y abra la tapa del recipiente según los iconos de candado.
- Ponga pimienta o sal en el recipiente, luego vuelva a colocarlo y cierre la tapa.

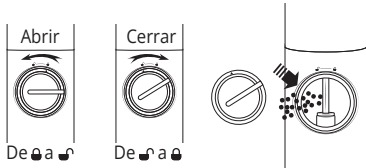


- Gire la perilla para ajustar el grosor de molido según sus preferencias. Puede rotar en múltiples posiciones entre el molido más fino y más grueso.

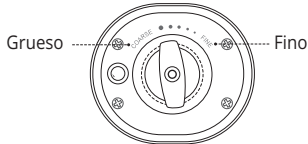


- Selector FINO: Gire unas cuantas vueltas hasta lograr el nivel deseado.
- Selector GRUESO: Gire en sentido inverso de Fino a Grueso. Si el selector se afloja, podría deberse a que algunos granos de pimienta o sal se han quedado atrapados en el núcleo de Molinda.
- Haga que el molinillo gire durante 1 segundo, luego el núcleo de molinda se aflojará y podrá continuar ajustando. Esta es una situación normal de las molindas cerámicas y no afectará su uso normal.

- Si el selector se cae, monte los componentes en el orden que se muestra a continuación.



- Mantenga presionado el botón de encendido/apagado para moler, suelte el botón para detener.
- Cuando esté en funcionamiento, la luz inferior se encenderá para que pueda ver claramente cantidad y grosor que caen en sus alimentos.

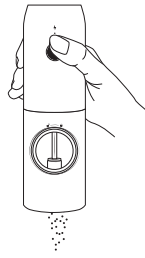

- Con los condimentos en el recipiente, no gire en reversa el molinillo durante mucho tiempo, ya que los granos de los condimentos puedan entrar en el compartimiento de la batería y causar corrosión.

SOLUCIÓN DE PROBLEMAS

Si el molinillo no funciona o se detiene mientras muele:

- Cárguelo. (Nota: no se recomienda utilizar el producto mientras se carga).
- Ajuste el selector de molinda en sentido antihorario.

Si todas las operaciones anteriores son correctas y el molinillo aún función de manera anormal, comuníquese con el proveedor para obtener servicio de mantenimiento.


EN Thanks for purchasing the Thor Electric USB Grinder Set

BEFORE USING FOR THE FIRST TIME

To ensure safety and maintain the high quality of the product, we recommend that you read and follow the instructions carefully.


- Do not immerse the appliance in water or any other liquid to avoid harm to human or the product.
- Use for pepper and salt only, please do not use for other purposes.
- Do not force the grinder to tighten or twist it or attempt to speed up the mechanism.
- Keep body parts (e.g. finger) and utensils away from the grinding head to avoid damage.
- Please hold the grinder tightly when using.
- Keep this product away from children.
- Do not dismantle the product by yourself.
- Keep away from flammable, explosive gas.

PRODUCT DESCRIPTION

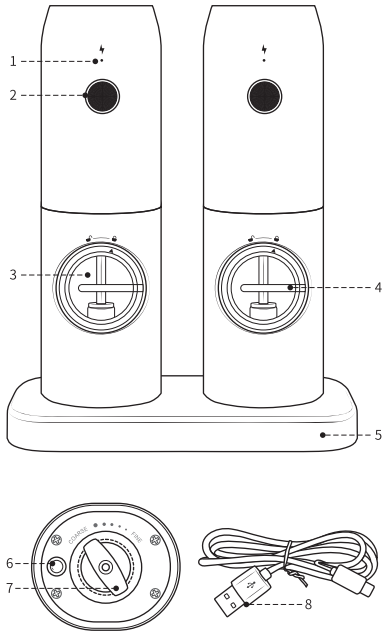

- Indicator Light
- On Off Button
- Container
- Container cover
- Charging & Storage Base
- Light
- Grind level adjuster
- Type-C Charging Cable

HOW TO CHARGE

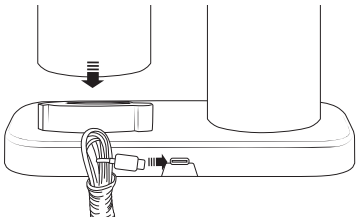

- Insert the charging line interface into the Type-C charging socket at the back of the base.
- Insert the adaptor into an indoor electric socket.
- When charging, the indicator light lights up red, indicating it is charging normally.
- The indicator light lights up white when the battery is fully charged.
- It takes 2.5 hours to fully charge the battery.


CAUTIONS

- This is a lithium-battery rechargeable product.
- When not in use, it is recommended to charge every three months to ensure service life of the battery.
- Adapter is not included with this product. Charge only with UL/GS or equivalent safety approved adapters with output voltage of 5v=.


HOW TO USE THE GRINDER

- Hold the grinder tightly and switch the container cover to open according to the indication icons.


- Put pepper or salt into the container, then restore and lock the cover.

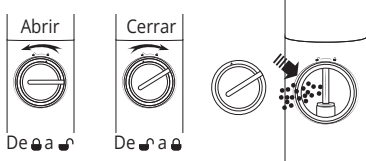


- Rotate the adjuster to adjust the coarseness according to personal preference. This product adopts an adjustment knob. The adjuster could be rotated for multiple circles between the finest and the coarsest grinding.

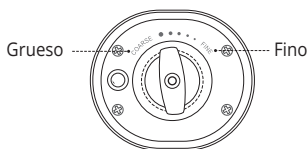

- Adjust to Fine: Rotate the adjuster from "COARSE" to "FINE". Continue to rotate for a few circles until the desired fineness is achieved.
- Adjust to Coarse: Rotate the adjuster from "FINE" to "COARSE". If the adjuster loosens, it could be caused by some pepper grains stuck in the burr.
- Start the product to rotate for 1 second, then the burr will be loosened, and you can continue to adjust. This is a normal situation of ceramic burr and will not affect its normal use.
- If the adjuster falls off, please contact the components in the orders shown below.



- Press and hold the on/off button to grind, release the button to stop.
- When working, the bottom light will turn on so you can clearly see quantity and thickness falling into your food.

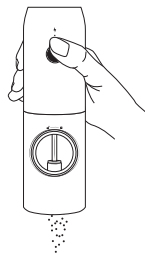

- With seasonings in the container please do not turn the grinder upside down for a long time in case grains & seasonings might get into the battery compartment and cause battery corrosion.

TROUBLE SHOOTING

If the grinder does not work or stops while grinding:

- Please charge it. (Note: It is not recommended to use the product while charging.)
- Please adjust the adjuster with counterclockwise direction.

If the above operations are all correct and the grinder still works abnormally, please contact the vendor for maintenance service,

THÖRBEN
ELEKTRO



Escanee el código QR para acceder a una versión digital de este manual y para contactos de soporte técnico adicional.

Set de Molinillos USB Inalámbricos
THOR USB GRINDER SET