GAMING MONITOR


GOAE27QHD165IPS



USER MANUAL



GOAE27QHD165IPS

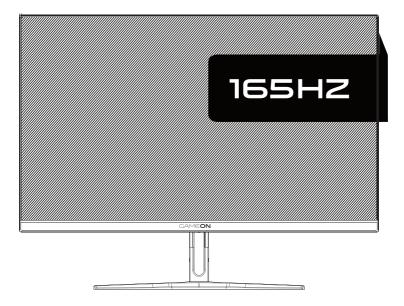



CONTACT US HEY@GAMEON.STORE

WWW.GAMEON.STORE




- Keep the monitor away from water sources or damp places, such as bath rooms, kitchens, basements and swimming pools.
- Make sure the monitor is placed on a flat surface. If the monitor falls down, it mat cause human iniury or device damage.
- Store and use the monitor in a cool, dry and well ventilated place, and keep it away from emission and heat sources.
- Do not cover or block the vent hole in the rear casing, and do not use the product on a bed, sofa, blanket or similar objects.
- The range of the supply voltage of the monitor is printed on the label on the rear casing. If it is impossible to
 determine the supply voltage, please consult the distributor or local power company.
- If the monitor will not be used for a long period, please cut off the power supply to avoid electric shock in rainy days and damage due to abnormal supply voltage.
- Please use a reliable earthing socket, do not overload the socket, or it mat cause fire or electric shock.
- Do not put foreign matters into the monitor, or it may cause short circuits resulting fire or electric shock.
- Do not disassemble or repair this product by self to avoid electric shock. If faults occur, please contact the after-sales service directly.
- Do not pull or twist the power cable forcedly.
- There is a polarizer layer (not a protective film) on the surface of the screen. Do not peel it off, or the product
 may be damaged and the warranty will be invalid.

Product introduction

Packing list


- Please check that the package of the monitor contains all parts. If any part is lost, please contact the distributor.
- The color and shape of parts may vary with models. Figures in this User Manual are for reference only.
- Wires supplied may vary with purchased products. Figures in this User Manual are for reference only.

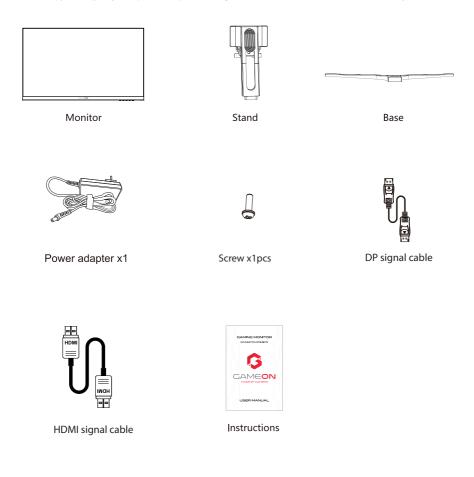


• Redundant screws can be used as spare screws.

Installation of base


1. Take out the Stand Neck and base, and assemble the base with a screw.

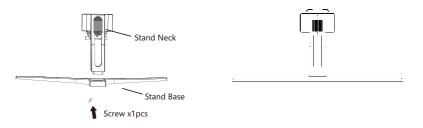

2. Align it with the interface on the back of the display, then Insert the stand neck into mounting hole.

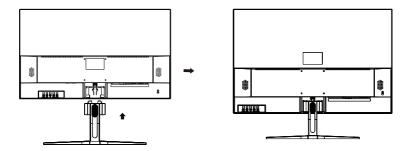


3. After assembly, simply hold the stand with hand to stand the monitor upright.

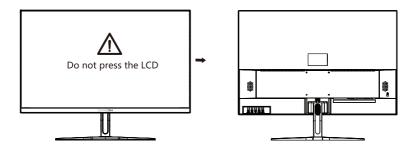


Note: During standing of the whole monitor, do not press the liquid crystal screen with hand to avoid damage to the screen.

Adjusting the monitor









Tilting angle $-5^{\circ}(\pm 2^{\circ}) \sim +15^{\circ}(\pm 2^{\circ})$

Description of buttons

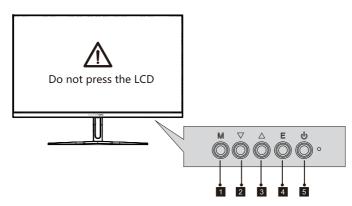


| Button | Function |
|--------|---|
| 1 | Menu: Press to display OSD menu and enter sub-menus |
| 2 | Down: Press to move down in menus |
| 3 | Up: Press to move up in menus |
| 4 | Exit: Press to exit OSD menu |
| 5 | Power: Press to turn monitor on/off |

Explanation of indicators

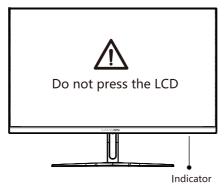

Indicator: Steady blue light indicates the power is on and the monitor runs normally. Steady red light indicates no video source and no horizontal or vertical signal detected or low voltage. Please make sure your computer is turned on and all video cables are fully plugged in and/or connected.


Cable connection:



 * The bottom interface configuration at the back of the monitor varie with products.

* Note: If the power cable or signal cable is damaged, you must replace it with special soft cables or special components purchased from the manufacture or maintenance department.

aof the power cable into the power socket.

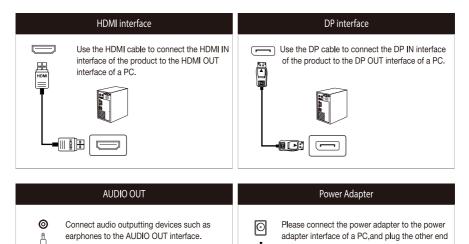

OSD menu

Menu description

- The color and shape of the OSD menu of the actual computer may be slightly different from them shown in the figure.
- Specifications of the OSD menu may change with improvements of functions without prior notice.

The screen display (OSD) menu can be used to adjust settings of the monitor and is shown on the screen after the monitor is powered on and the M button is pressed.

| DP1 | Ri | esolution: 2560x1440@165Hz |
|-------------------------|--|----------------------------|
| Input Source | • DP1 | |
| Brightness/Contrast | DP2 | |
| Color Setting | HDMI1 | |
| Picture Quality Setting | HDMI2 | |
| Display | | |
| Audio | | |
| OSD | | |
| Other | | |
| | | |
| | | |
| | | |
| | InputSource:DP1 Resolution: 2560x1440@165Hz | AMAZON EXCLUSIVE |

| М | Menu | Activate and confirm the OSD Menu | | |
|---|---|-----------------------------------|--|--|
| ▼ | ▼ Preset Mode Select items and adjust parameters upwards in the menu. | | | |
| Signal Switch Select items and adjust parameters downwards in the menu. | | | | |
| E Back/Exit When in the menu, go back or log out / Game Plus Crosshair | | | | |
| U Power Button Press once to switch on the power, press and hold for 3 seconds to switch off the power. | | | | |


• Functions of the monitor vary with models, and the functions in this manual are for reference only.

| | DP1 | | |
|---------------------|--------------------------|---------------------------------------|--|
| | DP2 | | |
| Input Source | HDMI1 | | |
| | HDMI2 | | |
| | Brightness | 0-100 | |
| Brightness/Contrast | Contrast | 0-100 | |
| | DCR | Off/On | |
| | Gamma | 1.8/2.0/2.2/2.4/2.6 | |
| | Picture Mode | Standard/Photo/Movie/Game/FPS/RTS | |
| Color Setting | Color Temperature | Normal/Warm/Cool/USER | |
| Color Setting | Hue | 0-100 | |
| | Saturation | 0-100 | |
| | Low Blue Light | 0-100 | |
| | Sharpness | 0-100 | |
| Picture Quality | Response Time | Off/High/Middle/Low | |
| Setting | Noise Reduction | Off/High/Middle/Low | |
| - | Dynamic Luminous Control | Off/On | |
| | Blacklevel | 0-100 | |
| Display | Aspect Ratio | Wide Screen/4:3/1:1/Auto | |
| Audio | Mute | Off/On | |
| Audio | Volume | 0-100 | |
| | Language | 8 Countries Language(default:English) | |
| | OSDH-Position | 0-100 | |
| 050 | OSD V-Position | 0-100 | |
| OSD | OSD Transparency | 0-100 | |
| | OSD Time Out | 0-100 | |
| | OSD Rotation | Normal/90/180/270 | |
| | FreeSync (Adaptive Sync) | Off/On | |
| Other | HDR | Off/On | |
| Other | MPRT | Off/On | |
| | Reset | | |

| Product Name | | 27 inch LCD Monitor | | |
|-----------------------------------|---------|--|--|--|
| Product model | | GOAE27QHD165IPS | | |
| Screen Size | | 27 inch(68.58cm) | | |
| Aspect Ratio | | 16:9 | | |
| Viewing Angle | | 178°(H) / 178°(V) | | |
| Pixel pitch | | 597.888(H) x 336.312(V)mm | | |
| Contrast ratio | | 1000:1(TYP) | | |
| Color | | 16.7M | | |
| Resolution | | 2560*1440 | | |
| Refresh Rate | | 165Hz | | |
| Power Input | | DC 12V 4A The standard voltage and power supply may vary with countries, please refer to the label at the back of the product. | | |
| Product Dimentions (With base) | | 616x146.4x453mm | | |
| Tilting angle | | Forward tilting: -5°±2° ; Backward tilting: 15°±2° | | |
| Height range | | N/A | | |
| Rotation angle | | N/A | | |
| Vertical angle | | N/A | | |
| Environmental | Action | Temperature: 0°C~ 40°C (32°F ~ 104°F) Humidity: 10%~90% RH (non-condensing) | | |
| conditions | Storage | Temperature: -20°~ 60° (-4°F ~ 140°F) Humidity: 5%~95% RH (non-condensing) | | |



GOAE27QHD165IPS

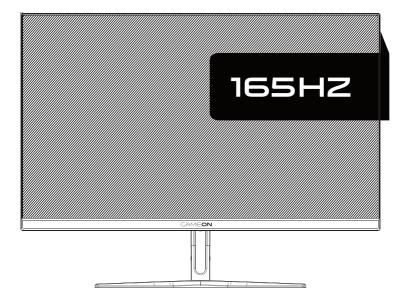



الاتصال بنا HEY@GAMEON.STORE

WWW.GAME<mark>ON</mark>.STORE




قىل لميت ً ام دا ل فيتج بي رجى قراءة ليمل ل ميت مُ حيدًا اال في الظب ه

- خلط في الأرش قب في المار التي المان الراحية المان الرجة المان المام المانة، المطبخ، القيبية، احم امات الدي احة.
 - تك من ضرع الشش ة في عسط حمت اي. إذا سقطت الشش من القر تسوي عر الشام من التعبش في التعلق الجواز.
 - قربت خرين الش ش ف ي الارب ار اجاف اجي الته مياة، من المخطب هدا عن الن عثمات اجرار الرحر ارة.
- لتغطي ألتس فتتحات للته دي قـي ل جلب ل في عن المتستخ م ل فتج في عس مرز أ أ أوكة أ لب طرفية أ الحيم شرياء ممثلة.
- نطاق الجه لله ولي الشرشة مطاع في اللهص في لجل الثيبي إذا كان يست علت عن الجه الله ولي أر الطقة تديرجي لله اله ل مع الم ازع أ الشركة الطقة الم لي .
- إذا الخارت ن ترتخ م الثرين قلم أذ طول ذي رجوف ص التي الله مدى في جنب حاً الم ص مات في طفي قدي التي الم مطرة أا التلف النشاج عن جواً التي الله مدين غير الطوري.
- ورجى المتيخ ام قيس أرض ي مث اق، الشعر طفي الحمالة الجى القيس، اال سيتس ب ع ات حرط ق أ ا ص مات ك مرطق ق.
 - لتضع م ١١ غرب شي الثريشة، الإستنس بف ي ح أث أرةك موطئ قوص ي تت أي إلى حرط ق أ اص ماتك موطئة.
- لفق مبشلتيك أالم لح مذال في جفس كان جنب ح النص مات ك موطيق. إذا ح ت أي لجل بي رجى لق الم ل مع خ مة ما بع للي عبش رة.
 - ليتسحب ألتان فسرلك الطق قباق اة
- ت اج طق تقطية) ليست طقة حجاة (في مسطح الفرنسة. لتقشر ما، االق تي عرض الفت جالملف في حسح الضمان في ر صرائحا.

ىتقىيَّم ل 🚓 ج

قطئمة البع اة

- ورجى لت تحق من أن عادة الشرش قتاحة اي لمحيى جيرع الجزاء. إذا كانت أي من الجزاء فعق اتم، يرجى لله المسل مع الم ازع.
 - ل ان تلك الجزاءق يُعظىف مع للطرازات. الترك الفي أي ل لمتخ مل لطل غقط.
 - العراك للتمفلر فق تُنظىف عن للهنجات للتحيق متعشر عن ها. الغرك الف ي أي ل الميت خ مل ل طل غق ط.

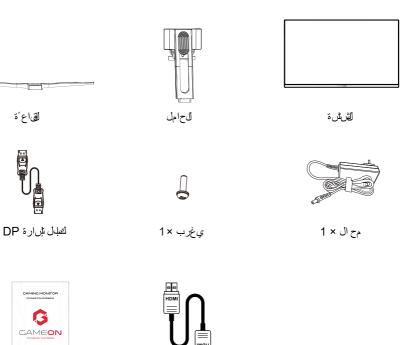




يودي


ي لحكن ملت خ أم لله راغي للزلئ مُستقبل قب راغي التي الحية.


ترامي القياع أة

أخرج رق ق اع أذ الحامل، ف هبت جي ع الق اع أقبلت خ أم اله راغي.

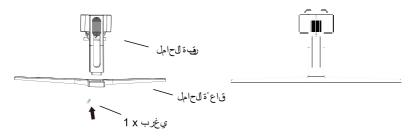


2. ةرفح دعاصت يف ةبقرلا سوق جاردا مث، ةشاشلا نم يفلخلا اوزجلا ىلع قمجاو عم سوق ةاذاحم

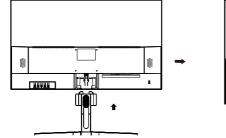


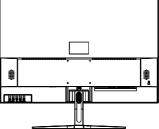

. بع ً لتجيع، ام ك الحاملين ك ضع الش ش في ض وقط مة.

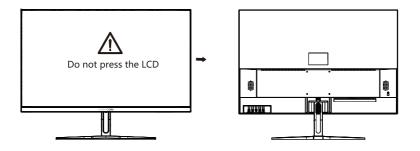


Note: During standing of the whole monitor, do not press the liquid crystal screen with hand to avoid damage to the screen.

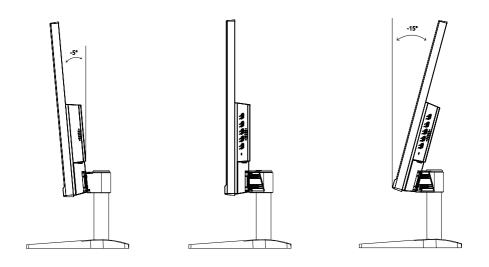

4

زاوية الميل -5.0° (±2.0°) - +15° (±2.0°)

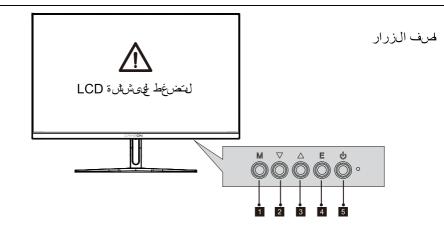


| قم بتنشيط وتأكيد قائمة العرض على الشاشة OSD | القائمة | 1 |
|---|-----------------------|---|
| حدد العناصر واضبط المعلمات لأعلى في القائمة. | وضع الضبط المسبق | 2 |
| حدد العناصر واضبط المعلمات لأسفل في القائمة. | مفتاح مصدر الإشارة | 3 |
| عندما تكون في القائمة، ارجع أو سجّل الخروج / Game Plus Crosshair | العودة/الخروج | 4 |
| اضغط مرة واحدة لتشغيل الطاقة، واضغط مع الاستمرار لمدة 3 ثوانٍ لإيقاف تشغيل الطاقة. | زر الطاقة | 5 |

ىقىرى لامۇر





للمؤشر: للض اء الزرق للثلبتويتوير للمنتش في للجواز اعمل للترش مَبتُوك طبيحي. للض اء الحمر للثلبتويتوير للمى عُم اج ا مِن رَفَعِيَّ ا اعَم رض ٌ بَن ارتفلَقِيءَ أا عم ايَءَ أَ النَصَاض للجوهُ للك مِدي. يرجى للتَكُ من تشريف ل جواز للنبي شريل شاصول جميع مل لك للوي لبثرك لص مي ح.

ت المري للالك:



*تېنة ل ااجهة لله لولي، في ل ل جلب ل في ي من ل ش ش ي ظيف فلق الل ټج. * فتبه بغ حل تعنيف س لك ل طقة أ ا س ك الش ارة، ي جبت في ر ه الس طة الس لك أ ا ل لك ل ات ل خصة ل ف لك قبش رئ ها من جهة لتصريف ع أ قوسم للصري لة.

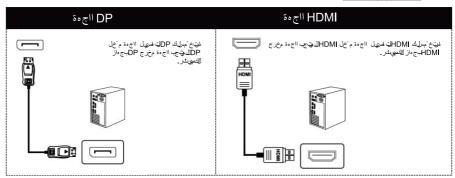

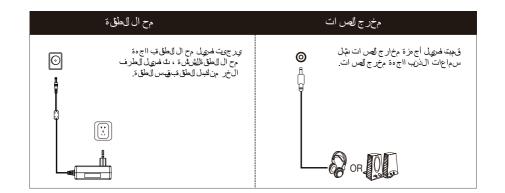

لمصف للقطءة

| DP1 | R | esolution: 2560x1440@165Hz |
|-------------------------|--|----------------------------|
| Input Source | ● DP1 | |
| Brightness/Contrast | DP2 | |
| Color Setting | HDMI1 | |
| Picture Quality Setting | HDMI2 | |
| Display | | |
| Audio | | |
| OSD | | |
| Other | | |
| | | |
| | | |
| | | |
| | InputSource:DP1 Resolution: 2560x1440@165Hz | AMAZON EXCLUSIVE |

| قم بتنشيط وتأكيد قائمة العرض على الشاشة OSD | | |
|---|-----------------------|--------|
| حدد العناصر واضبط المعلمات لأعلى في القانمة. | وضع الضبط المسبق | ^ |
| حدد العناصر واضبط المعلمات لأسفل في القانمة. | مفتاح مصدر الإشارة | \vee |
| عندما تكون في القائمة، ارجع أو سجّل الخروج / Game Plus Crosshair | العودة/الخروج | А |
| اضغط مرة واحدة لتشغيل الطاقة، واضغط مع الاستمرار لمدة 3 ثوانٍ لإيقاف تشغيل الطاقة. | زر الطاقة | Ċ |

اظئف الشريش فق تتظنف حرب الطرازات، ال اظئ ففي هذا ال أي الم ل عق ط.

| | DP1 | | |
|---------------------|-----------------------------------|--|--|
| لاخدال ردصم | DP2 | | |
| | HDMI1 | | |
| | HDMI2 | | |
| | عوطس | 0-100 | |
| briahtness/نيابستال | تلباقم | 0-100 | |
| | DCR | لمعي قالغم | |
| | اماج | 1.8/2.0/2.2/2.4/2.6 | |
| | قروصلا عضو | RTS/لمع راط!/تبعل/مليف/قروص/يساييق | |
| | نوللا قرارح ةجرد | مدختس <i>م اعینار ای ف</i> اد/یداع | |
| نوللا دادع! | مىرە | 0-100 | |
|] | عبشتال | 0-100 | |
| | ضفخنمانا قرزألا ءوضالا | 0-100 | |
| | ^{ۆد} ح | 0-100 | |
| 1 | ةباجتسالا تقو | ض ف خنم /طس و ت م / عفت رم /ف اق ي ! | |
| ةروصلا قدوج دادع! | ءاض وض لا لي لقت | ضفخنم/طسوتم/عفترم/فاقي! | |
| | ةيكيمانيد ةئييضم ةرطيس | لمعي قالغم | |
| | Blacklevel | 0-100 | |
| ضرع | ةنزتم داعبا | ي، اقلت/1 :1/1 عسار قشاش | |
| | تماص | لمعي قلغم | |
| يترص | رادقم | 0-100 | |
| | ەغل | (ةيوزيلجن الدا ة غللا : افيد) ة غل لود 8 | |
| | عضومها OSDH | 0-100 | |
| OSD | عض ولما OSD V | 0-100 | |
| | OSD ةي.فافش | 0-100 | |
| | جراخ OSD شقو | 0-100 | |
| | OSD نارود | 90/180/270/بوداع | |
| | (قىيفىيىكىتىلا قنمازملا) FreeSync | لمعي قلغم | |
| رخآ | HDR لم عب قد غم | | |
| | MPRT | لم عي قلغم | |
| | طبيض تداع! | | |

| المرافق | | ئريش ة لاع ب 27 ب اصنة |
|---------------------------------|---------------------|---|
| طراز لاپتج | | GOAE27QHD165IPS |
| حجم للآس الى | | 27باطنة)68.58(سجز |
| الحيا | | 16:9 |
| زايية للشراء تة | | 178) لَقَانِي (/ 1 78 °) عام انْي (|
| ساحة للترض لمَ لْقَرِي×ع | م ا ^ت ي(| 597.888)فاقبتر(×336.312)عماني |
| مع ل القبطين | | 1000:1 کیم ^{اذ} تیچ(|
| الل اان | | 16.7M في ان |
| للقَة | | 2560*1440 |
| فصى مع ليتغييط | | 165زترە |
| م الحفيات للطقة | | ىكار مېڭرر 12 آف آلت |
| ناع َة عاليَّة | | ∾ 453x146.4x616 |
| زالية لايح ل | | تول أماجي: 5° ±2°؛ تول فينتي: 15° ±2° |
| نطاق ال شاع | | لې اج` |
| نطاق لا ً اران | | لې اج` |
| الن طاق الحم ا ُي | | لې اج` |
| | | ُرجۃ للحرارۃ: 0°م ~ 40°م)32°ف ~ 104°ف (|
| | لتشغيل | للرطبة: 10% ~ 90% رطبة وَيوييَّ 4) أنْ تَقْتَفُ (|
| للظر اف للييني ة | | رچة للحرارة: -20°م - 60°م)-4°ف ~ 140°ف(|
| | للتخفين | للرطنبة: 5% ~ 95% رطنبة تخييية،) الانتظاف (|

| 深圳市微领客科技有限公司 | | | | | |
|-----------------------|-----------------------|-----|----------|--|--|
| 料号: | 料号: 211-27M32R-002001 | | | | |
| 名称: | 说明书 | | | | |
| 版本: | V1 | 日期: | 20240730 | | |
| | | | | | |
| 技术要 | 求: | | | | |
| 1、封面120g双胶纸,内页80g双胶纸; | | | | | |
| 2、尺寸: 140x210mm; | | | | | |
| 3、四色印刷,骑马钉; | | | | | |
| 4、不得有缺页,漏印,字迹模糊; | | | | | |
| 4、符合RoHS标准。 | | | | | |
| | | | | | |