

IMPORTANT INSTRUCTIONS AND WARRANTY INFORMATION

PLEASE READ

FAILURE TO FLUSH THE POWER STEERING SYSTEM WILL VOID YOUR WARRANTY

REMOVING AND RE-CENTERING OF STEERING WHEEL:

REMOVING

Centralize front wheels, remove the three screws securing the lower switch cover and detach the cover.

Working from below, remove clamp bolt securing collet adaptor to steering column.

Loosen locknut of set screw in collet adaptor and loosen set screw two turns.

Withdraw steering wheel, complete with hand locknut, impact rubber, collet adaptor and shaft.

Remove impact rubber (1 Fig. 1) from steering wheel shaft.

Remove three small screws from beneath hand locknut, and collet retaining plate (2 Fig. 1).


Unscrew collet adaptor (3 Fig. 1) completely and remove from shaft.

Remove collet circlip (4 Fig. 1) from within upper side of hand locknut.

Withdraw hand locknut, collecting stop button (5 Fig. 1).

Slide split collet off shaft.

Fig 1.

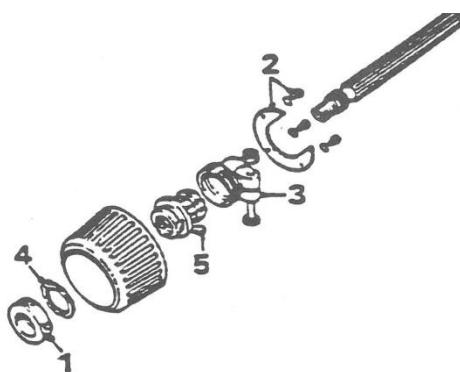

REFITTING STEERING WHEEL

Reverse the removal procedure, taking care to replace the steering wheel in its straight ahead position.

INSTRUCCIONES IMPORTANTES E INFORMACIÓN DE GARANTÍA
POR FAVOR LEE
SI NO SE NIVELA LA DIRECCIÓN ASISTIDA SE ANULARÁ LA GARANTÍA

ELIMINACIÓN Y REINSTALACIÓN DE CENTRADO DEL VOLANTE:

EXTRACCIÓN

Centralizar las ruedas delanteras, quitar los tres tornillos que fijan la cubierta inferior del interruptor y retire la tapa.

Desde abajo, retire la abrazadera perno de sujeción del adaptador de pinza de la columna de dirección.

Afloje la tuerca de seguridad del tornillo de fijación en el adaptador de pinza y aflojar el tornillo de fijación dos vueltas.

Retirar el volante, con tuerca de seguridad mano, caucho impacto, adaptador de pinza y el eje.

Eliminar caucho de impacto (1 Fig. 1) del eje del volante de dirección.

Retire los tres tornillos pequeños de debajo de la contratuerca lado, y el collar placa (2 Fig. 1) de retención.


Desatornillar adaptador de pinza (3 Fig. 1) completamente y retirar del eje.

Retire la pinza anillo de seguridad (4 Fig. 1) desde el interior lado superior de la tuerca de seguridad mano.

Retirar la contratuerca lado, botón de parada (5 Fig. 1) recoger.

Diapositiva divide la pinza fuera del eje.

Fig 1.

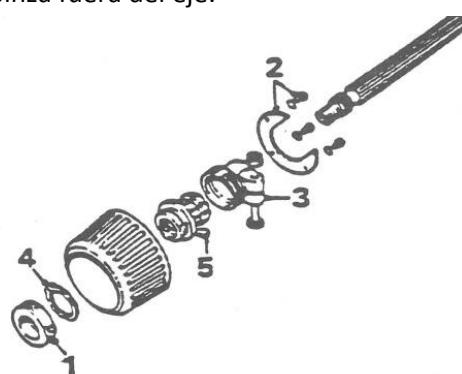

PONER EL VOLANTE

Revertir el procedimiento de extracción, teniendo cuidado de sustituir el volante en su posición de marcha recta.