


Product Manual



Jade

EN

USER MANUAL

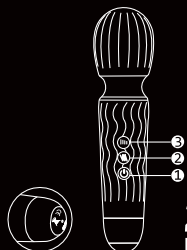

20 FUNCTIONS
OF VIBRATION
RECHARGEABLE

1. Long press the button "⏻" ① for 2s to turn on the massager and enter the memory mode.
2. Short press the button "III" ③ to change among 9 vibration intensities.
3. Short press the button "W" ② to switch among 20 vibration modes. Long press the button "W" ② 2s to return to the original vibration mode.
4. Long press the button "⏻" ① for 2s to turn off the massager.
5. The indicator flashes while charging, and the light will be always on after full charged.

SPECIFICATION

Material:	Silicone+ABS
Size:	153x38mm
Mode:	20 Frequenc & 9 speed
Charge time:	110-120 Mins
Using time:	80-90 Mins
Waterproof:	IPX6

EN

PRODUCT DESCRIPTION

The design of appearance is novel & simple & elegant. The design with strong vibration but the handle does not vibrate when used, which can massage the body more comfortably.

SAFETY

1. Don't share it with others for your health.
2. Stop using it if you feel uncomfortable.
3. Stop using it if you find the head of the product is not smooth enough or broken.
4. Keep it from children's reach.

CLEANING AND STORAGE


1. Please clean it thoroughly before and after using.
2. Warm water and medicinal alcohol can be used to clean this product, but warm water is highly recommended.
3. Naturally air dry and avoid direct sunlight.
4. Store it in a dust-free place.

ATTENTION

1. Please charge it before using, don't use it while charging.
2. Don't use it around our face, throat, chest or an open wound.
3. Once the battery has been fully charged, unplug the toy's DC plug.

NL

USER MANUAL

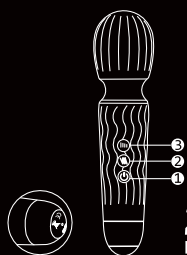

20 FUNCTIONS
OF VIBRATION
RECHARGEABLE

GEBRUIKSAANWIJZING:

1. Houd de knop "⏻" 2 seconden lang ingedrukt om de stimulator in te schakelen en naar de geheugenmodus te gaan.
2. Druk kort op de knop "III" om tussen 9 vibratie mogelijkheden te gaan.
3. Druk kort op de knop "W" om te schakelen tussen 20 trilling modus. Druk lang op de knop "W" 2 seconden om terug te keren naar de originele vibratiemodus.
4. Druk lang op de knop "⏻" voor 2 seconden om de stimulator uit te schakelen
5. De indicator knippert tijdens het opladen en het lampje brandt altijd nadat het volledig is opgeladen.

SPECIFICATIE

Materiaal:	siliconen+ABS
Maat:	153x38mm
Modus:	20 frequenties en 9 snelheden
Oplaadtijd:	110-120 minuten
Gebruikstijd:	80-90 minuten
Waterdicht:	IPX6

NL

PRODUCTOMSCHRIJVING

Het ontwerp van het uiterlijk is nieuw en eenvoudig en elegant. Het ontwerp met sterke trillingen, maar de onderkant trilt niet bij gebruik, waardoor het lichaam comfortabeler kan worden gemasseerd.

VEILIGHEID

1. Deel het niet met anderen voor je gezondheid.
2. Stop met het gebruik ervan als u zich ongemakkelijk voelt.
3. Stop met het gebruik ervan als u vindt dat de kop van het product niet glad genoeg of gebroken is.
4. Houd het buiten het bereik van kinderen

REINIGING EN OPSLAG

1. Reinig het grondig voor en na gebruik.
2. Warm water en medicinale alcohol kunnen worden gebruikt om dit product te reinigen, maar warm water wordt ten zeerste aanbevolen
3. Droog natuurlijk aan de lucht en vermijd direct zonlicht te vermijden.
4. Bewaar het op een stofvrije plaats.

AANDACHT

1. Laad het op voor gebruik, gebruik het niet tijdens het opladen.
2. Gebruik het niet rond ons gezicht, keel, borst of een open wond.
3. Zodra de batterij volledig is opgeladen, haalt u de gelijkstroomstekker van het speelgoed los.



**BLOOSY
LOVE**

CE O _{xt} _{RoHS}
MADE IN CHINA