

LIGHT UP MICROPHONE & AMPLIFIER

INSTRUCTION MANUAL

Congratulations on your new mic and amp!
Please read this guide carefully before you begin playing.

BEFORE YOU PLAY

INSTALL BATTERIES

Always ask an adult to install batteries. This product uses 4 size AA (1.5 V) batteries (not included).


The battery compartment is located on the bottom panel of the product. Use a Phillips head screwdriver to open the compartment door. Install batteries according to image inside of compartment.

Negative (-) and positive (+) ends of each battery must be installed correctly, or an electrical hazard and/or damage to the product could result. Close compartment door and tighten screw to secure.

Note: If the batteries wear out, the product's sound may deteriorate. If you are not going to play for a long time, remove the batteries from the product. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

- Non-rechargeable batteries are not to be recharged;
- Rechargeable batteries are to be removed from the toy before being charged (if removable);
- Rechargeable batteries are only to be charged under adult supervision (if removable);
- Different types of batteries or new and used batteries are not to be mixed;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short-circuited.

FOUR AA ALKALINE BATTERIES

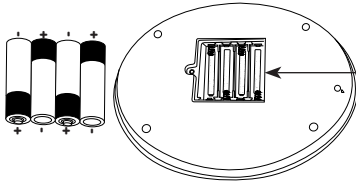

BATTERY COMPARTMENT

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ THIS SECTION CAREFULLY.

Read and follow these instructions.

- Do not use this device near water.
- Clean only with a dry cloth.
- Do not use near any heat sources such as radiators, heaters, stoves, or other heat producing machinery.
- Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as when liquid has been spilled on it, it has been exposed to rain or moisture, it does not operate normally, or it has been dropped.
- To reduce the risk of fire and electric shock, do not expose this product to rain or moisture.

WARNINGS

Do not change the parts without professional instructions. Any change may cause malfunctions.

Keep the wrapping bag out of the reach of children to avoid a choking hazard.

Always move the product carefully to avoid damage to outer covering and inner components.

The product should not come in contact with acid or alkali. It should not be operated where there is corrosive or excessively moist air around to avoid corrosion of the electrical contacts.

ASSEMBLY

- The microphone holder (A) has already been inserted into top tube (B). Please check to ensure that it is snapped tightly in place.
- Insert top tube (B) into tube (C).
- Insert middle tube (C) into bottom tube (D).
- Insert bottom tube (D) into amplifier (E).
- Place microphone into holder (A).

PLAY

1. MICROPHONE AND CORD

Plug cord into MIC IN, sing (talk, rap, whistle) into the mic.

2. ADJUSTABLE MIC STAND

Adjust to the right height for you. Twist top tube in a clockwise direction to tighten.

3. ON/OFF/VOLUME

Push the thumb wheel up to switch amp on/off and to adjust the volume. Lights on the amp will illuminate when powered on. Lights are also sound activated by singing into the microphone or plugging in and playing your MP3 player.


4. MP3 IN

Plug an AUX cable (not included) into your music/MP3 player and into the MP3 IN jack to sing along with your favorite songs.

5. MIC IN

Insert mic cord here.

⚠ Warning! Do not lift unit by the mic stand

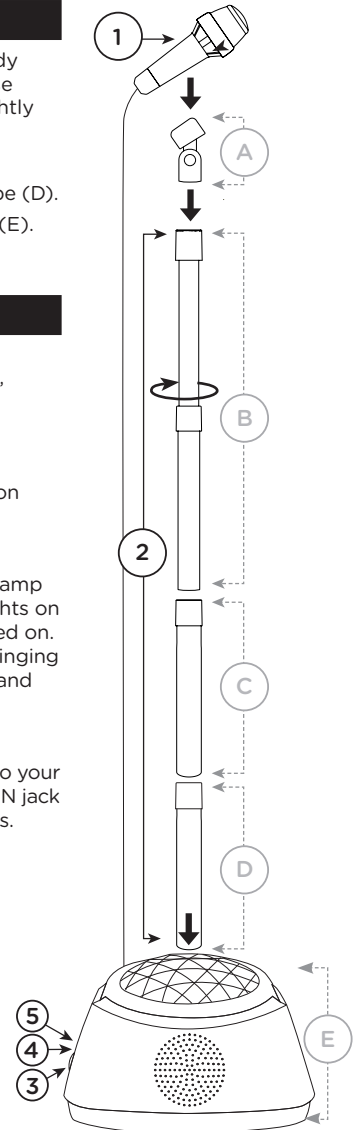

CUSTOMER ASSISTANCE

PHONE: 888.551.1115
EMAIL: INFO@FIRSTACT.COM
FIRST ACT INC.
745 BOYLSTON STREET
BOSTON, MA 02116 USA
FIRSTACTDISCOVERY.COM

No part of this publication may be reproduced in any form or by any means without the prior written permission of First Act Inc.

Colors and specifications depicted on this guide may vary slightly from your product. © 2015 First Act Inc. All Rights Reserved.

LIMITED WARRANTY: FIRSTACTDISCOVERY.COM/WARRANTY

F11278.M.EF.01

MICROPHONE ET AMPLIFICATEUR LUMINEUX

MODE D'EMPLOI

Nous vous félicitons d'avoir acheté ce microphone et amplificateur. Veuillez lire ce mode d'emploi avec soin avant de jouer.

AVANT DE JOUER

POSE DES PILES


Demandez toujours à un adulte de poser les piles. Ce produit requiert 4 piles AA (1.5 V) (non incluses).

Le logement des piles se trouve sur le fond de l'ampli. Utilisez un tournevis à pointe cruciforme pour ouvrir le logement. Posez les piles tel qu'indiqué par l'illustration dans le logement.

Les plots négatif (-) et positif (+) de chaque pile doivent être orientés correctement pour éviter tout problème électrique ou dommage au produit. Refermez le logement et resserrez la vis.

Note: Le son du produit se détériorera alors que les piles s'épuiseront. Si vous prévoyez ne pas utiliser le produit pendant un certain temps, enlevez les piles. Ne mélangez pas de vieilles piles avec des neuves ni des piles alcalines, standard (carbon-zinc) ou rechargeables (nickel-cadmium).

- Les piles non rechargeables ne doivent pas être rechargées;
- Les piles rechargeables (si amovibles) doivent être retirées du jouet avant d'être chargées;
- Les piles rechargeables (si amovibles) ne doivent être rechargées que sous la surveillance d'un adulte;
- Ne mélangez pas des piles de types différents ni des piles neuves et usagées;
- Respectez la polarité indiquée lors de la pose des piles;
- Les piles épuisées doivent être retirées du jouet;
- Ne court-circuitez pas les bornes d'alimentation.

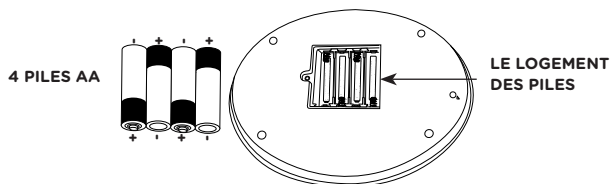

NOTICES DE SÉCURITÉ IMPORTANTES

VEUILLEZ LIRE CETTE SECTION ATTENTIVEMENT

Lisez et suivez ces directives.

- N'utilisez pas l'appareil près de l'eau.
- Ne le nettoyez qu'avec un linge sec.
- Ne l'utilisez pas près d'une source de chaleur comme un radiateur, une chaufferette, une cuisinière ou tout autre machine qui produit de la chaleur.
- Confiez tout entretien à un personnel qualifié. Un entretien peut être requis si le produit est endommagé - un liquide a été renversé sur le produit ou il a été exposé à la pluie ou à l'humidité, il ne fonctionne pas normalement ou il a été échappé.
- Pour réduire le risque d'incendie et de choc électrique, n'exposez pas le produit à la pluie ou à l'humidité.

AVERTISSEMENTS

Ne modifiez pas les pièces sans le conseil d'un professionnel. Un changement peut entraîner un mauvais fonctionnement.

Gardez le sac d'emballage hors de la portée des enfants; il présente un risque de suffocation.

Déplacez toujours le produit avec soin pour éviter d'endommager le revêtement et les composants internes.

Évitez le contact du produit avec des acides ou des alcalis. Ne l'utilisez pas dans un milieu où l'air est très humide ou corrosif afin d'éviter la corrosion des contacts électriques.

ASSEMBLAGE

- Le support de micro (A) a déjà été inséré dans le tube supérieur (B). Assurez-vous qu'il est bien enclenché en place.
- Insérez le tube (B) dans le tube (C).
- Insérez le tube (C) dans le tube (D).
- Insérez le tube du bas (D) dans l'ampli (E).
- Placez le micro sur son support (A).

UTILISATION

1. MICROPHONE ET FIL

Branchez le fil dans la prise MIC IN et chantez (parlez, rapez, sifflez) dans le micro.

2. PIED DE MICRO AJUSTABLE

Ajustez la longueur du pied. Tournez le tube du haut dans le sens horaire pour le serrer.

3. INTERRUPTEUR/VOLUME

Appuyez sur la molette pour mettre l'ampli en ou hors circuit et pour régler l'intensité sonore. Les lumières sur l'ampli s'allument quand il est en circuit. Les lumières sont aussi activées par la voix en chantant dans le micro ou en branchant et faisant jouer un lecteur MP3.


4. PRISE MP3 IN

Branchez un câble AUX (non inclus) de votre lecteur de musique/MP3 et dans la prise MP3 IN pour pouvoir chanter au son de vos chansons préférées.

5. PRISE MIC IN

Branchez le fil du micro ici.

⚠ Avertissement! Ne soulevez par l'unité par le pied du micro.

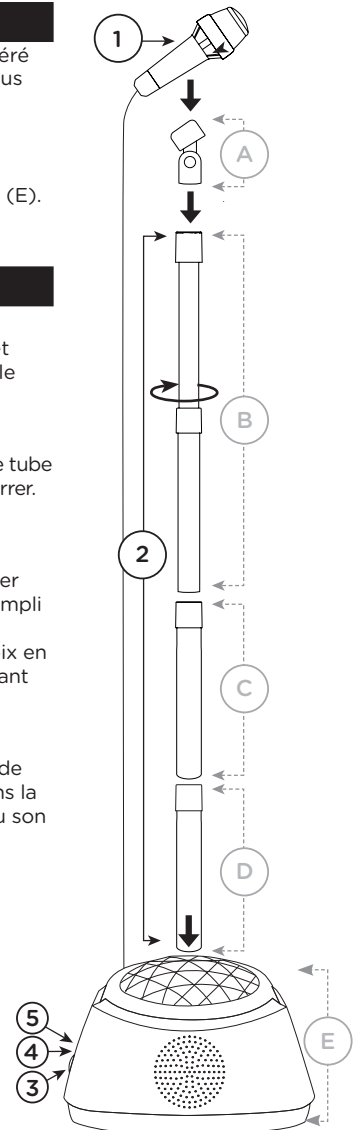

SERVICE A LA CLIENTELE

TÉLÉPHONE : 888.551.1115

COURRIEL : INFO@FIRSTACT.COM

FIRST ACT INC.

745 BOYLSTON STREET

BOSTON, MA 02116 ÉTATS-UNIS

FIRSTACTDISCOVERY.COM

Aucune partie de cette publication ne peut être reproduite sous quelque forme ou par quelque moyen que ce soit sans la permission écrite de First Act Inc.

Les couleurs et les spécifications dans ce guide peuvent différer quelque peu du produit réel. © 2015 First Act Inc. Tous droits réservés.

GARANTIE LIMITÉE : FIRSTACTDISCOVERY.COM/WARRANTY

F11278.M.EF.01