ColorFit Victor 2

Please refer to this manual before using the product.

Noise logo

TABLE OF CONTENT

WATCH OVERVIEW

- Noise Health
- Sports
- Charge the Watch
- Noise Buzz
- Messages
- QR Code
- Weather
- Camera
- Music
- Clock
- Breathe
- AI Voice
- Games
- Calculator
- Calendar
- Settings

PACKAGE CONTAINS

ColorFit Victor 2 Smartwatch x 1

Charging Cable x 1

CHARGING COLORFIT VICTOR 2 SMARTWATCH

Before using your ColorFit Victor 2 for the first time, charge the battery to its full capacity. Use the charging cable provided with the watch to charge. On a full charge, ColorFit Victor 2 can last up to 7 days. Note: The battery life and time to fully charge your device may vary as per usage and other factors.

CHARGE COLORFIT VICTOR 2

- Plug the USB cable into a power adaptor. Plug the power adaptor into an electrical socket. (Power adaptor not included)
- Place the magnetic pin charger on the charging points of the watch.
- Once the battery is fully charged, remove the charger.

POWER ON / **POWER OFF**

POWER ON

- Press and hold the side button for a few seconds to turn on the watch.

POWER OFF

- Long press the rotating crown.
- Select 'Shut down' to confirm.

WAKING UP THE WATCH

To preserve battery, the watch screen turns off when not in use. You can wake up the watch by pressing the side button.

WATCH NAVIGATION

The ColorFit Victor 2 smartwatch has a AMOLED touchscreen. Navigate the watch by tapping on the screen, swiping side to side, swiping up and down, and pressing the side button.

SIDE BUTTON NAVIGATION

- Press the side button to turn on the watch display.
- Rotate the side button to change the watch face.

HOME SCREEN NAVIGATION

The home screen is the watch face. From the home screen:
- Swipe left to access the main menu.
- Swipe right to check your steps taken.
- Swipe up to access quick settings.
- Swipe down to check your messages.

APP SETUP

Before pairing, make sure that your smartphone and smartwatch are next to each other. The app will ask for personal information such as height, weight and sex to calculate your stride length, distance covered, calorie burn rate and metabolic rate. When you set up your account, your name and profile picture will be visible to other users.

- Turn on the Bluetooth and location on your mobile device.
- On your smartphone, download the NoiseFit app from the Play Store or the App Store and install it.
- Create an account or log in using an existing account.

Note: Ensure that your smartphone is running on Android 8.0+ or iOS 11 + and is connected to mobile data or a Wi-Fi network.

PAIR THE WATCH

Open the NoiseFit app and allow the Bluetooth and GPS positioning to be turned on fixed in your personal information and health goals in the app. Go to the 'Device' section in the app, tap on 'Add Device' then 'Search'. Select 'ColorFit Victor 2'and link the watch.

WATCH FEATURES

DIAL PAD
Access the dial pad to make calls.

CONTACTS
This feature allows you to view your stored contacts and make calls.

CALL HISTORY
Tap on 'Call history' to access your recent call logs.

ACTIVITY
Tap on 'Activity' to get a detailed daily activity report on calories burned, steps taken and distance covered. You can set or edit your daily activity goals on the NoiseFit app while setting up the watch.

HEART RATE
ColorFit Victor 2 supports 24/7 heart rate tracking. Tap on 'Heart rate' to start measuring. Ensure that there is no gap between the back panel of the watch and the wrist. Hold still while it measures your heart rate.

SLEEP
Tap on 'Sleep' to view your previous sleep records. You can view your most recent sleep records and sleep quality in various sleep stages on the NoiseFit app.

BLOOD OXYGEN
ColorFit Victor 2 supports viewing the highest and lowest values of blood oxygen levels throughout the day. Ensure that there is no gap between the back panel of the watch and the wrist. Tap on 'Blood oxygen' to track. Hold still while it measures your blood oxygen level.

STRESS
Select Stress to start the measurement. Ensure that there is no gap between the back panel of the watch and the wrist. Hold still while it measures your stress levels.

SPORTS
Tap on 'Sports' to select your preferred form of exercise.

MESSAGES
Tap on 'Messages' to view the received messages on the watch.

QR CODE
Tap on 'QR Code' to access your saved QR code. You can save QR code in the app.

WEATHER
Tap on the Weather app on your watch to see the weather of your current location.

CAMERA
Tap on camera to take a picture remotely from your phone.

MUSIC
You can control songs and podcasts that play from your phone, right from your wrist as long as the watch is connected to the NoiseFit app on your phone.

STOPWATCH
Tap on 'Stopwatch' to use the feature.

ALARM
You can set alarms from the NoiseFit app.

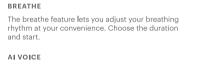### TIMER
You can set a countdown with a preset duration on the watch or set your own timer. The watch will remind you when the time is up.

BREATHE
The breathe feature lets you adjust your breathing rhythm at your convenience. Choose the duration and start.

AI VOICE
Use this feature to activate voice assistance and give commands.

GAMES
Tap on games to try out some in-built games.

CALCULATOR
You can use this feature to do basic calculations.

CALENDAR
You can use this feature to keep tabs on the day of the week.

SETTINGS

Watch face
Tap on 'Watch face' to choose the background of your choice. You can select and customise the watch face in the NoiseFit app.

Vibration & ring
You can use this feature to choose vibration levels and turn off the vibration on your watch altogether.

Brightness
Tap on 'Brightness' to adjust the brightness of your device.

Password
You can use this feature to set and change your password on your watch.

Menu view
Choose from 2 formats to view your watch features.

Screen clock
This feature allows the watch to be in Always On Display mode.

About
Tap on About to view the device information.
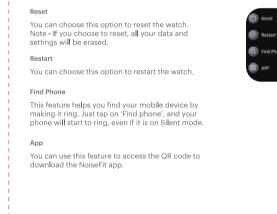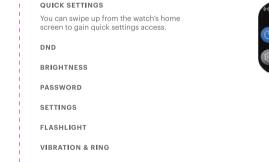
Power Off
You can select this option to power off the watch.

Reset
You can choose this option to reset the watch. Note : If you choose to reset, all your data and settings will be erased.

Restart
You can choose this option to restart the watch.

Find Phone
This feature helps you find your mobile device by making it ring. Just tap on 'Find phone', and your phone will start to ring, even if it is on Silent mode.

App
You can use this feature to access the QR code to download the NoiseFit app.

QUICK SETTINGS
You can swipe up from the watch's home screen to gain quick settings access.

DEVICE INFORMATION AND TIPS

DEVICE INFORMATION
The ColorFit Victor 2 smartwatch contains the following:
- 1.96" AMOLED display
- Blood oxygen monitor
- IP68 water resistance
- Heart rate monitor
- 20mm silicone straps

The ColorFit Victor 2 smartwatch stores your activity data for up to 4 days in between the time you sync your watch to the NoiseFit app. Activity data includes your steps, distance , calories, active minutes, heart rate, sleep duration and workout data. We recommend syncing the watch to the app daily.

TIPS

How do I update my ColorFit Victor 2?
You can update your ColorFit Victor 2 via the NoiseFit app. Go to 'My Profile' and select 'Check for updates'.

How do I find my watch's current firmware version?
You can find the watch's current firmware on the watch. Go to Settings on the NoiseFit app. Select Device information, choose Check for updates and update if any update is available.

How do I save battery?
Follow these simple steps to save ColorFit Victor 2 battery.
- Minimise the screen brightness
- Limit the notification you receive from the NoiseFit app.
- How does the watch estimate how many calories have been burned?

ColorFit Victor 2 estimates how many calories you've burned based on the physical data you entered when you set up your account.

How do I change my activity goals?
You can do it through the NoiseFit app. Go to 'My Profile'. Go to 'Setup' and select 'My Objectives.' Change your goals and confirm.

How do I log my weight?
You can log in your weight the first time you set up your NoiseFit app. However, you can update the weight later via the NoiseFit app. Go to 'Me', and tap on the section with your name or it to update your weight. You can update your nickname, birthday, sex and height as well.

SAFETY AND HANDLING INSTRUCTIONS:

- The device includes an in-built rechargeable battery. The battery life may degrade near the end of life of the battery. Do not attempt to change the battery yourself in any event as you may end up damaging the device and/or the batteries posing a safety hazard or subsequent usage.
- Please do not tamper with the battery terminals as it may result in battery leakage, overheating, explosion or a fire hazard.
- Please do not pierce or disassemble the device as it may damage the battery causing the battery liquid to leak causing irritation to your skin if exposed to the liquid.
- Damaged battery may also be prone to overheating or causing a fire hazard.
- Do not place the device near fire or expose it to excessive heating as it may cause the battery to explode posing a safety hazard.
- Only use Noise approved chargers and cables that are specifically designed for use with the device. Unapproved charges and cables may damage the device and also pose a safety hazard for the user.
- If the device emits a loud smell or burning odour, please stop using the device immediately and contact the Noise approved service centres.
- The device can be used in ambient temperature ranges of -20ºC to 55ºC. Using the device outside of the prescribed temperature range may damage the device. Do not use the device in a sauna or steam room.
- Do not use household cleaners to clean the device. Use soap-free cleaners instead.

- The device is dust and water resistant (rated at IP68). Following tips are to be followed for a safe upkeep of the device:
  - Please make sure that the device is not exposed to sea water or used in deep waters.
  - Do not expose the device to high pressure water flow.
  - Wipe the device clean of water with soft and clean cloth if exposed to water.
  - Leave the device to dry up naturally.
  - Do not open the device if it stops functioning upon exposure to water and despite following the above steps. Visit an authorized service centre for getting the device checked.

MEDICAL DEVICE INTERFERENCE:
The device includes components that may cause interference when worn with medical devices like pacemakers, and other magneto-sensitive devices. In case you intend to use a medical device, please consult your physician before using the device. Also, in case the device is allowed to be worn with the medical devices by your physician, ensure sufficient separation between the device and the medical device during all times.

MEDICAL USE ADVISORY:
Unless otherwise specified, the device and any associated app-based or Noise provided services are not suitable to be used as medical devices. In particular, the device and associated app-based or Noise provided services are not intended to diagnose, treat, cure or prevent any disease/health condition. We develop products and services to track daily activity and wellness information as accurately as possible. The accuracy of devices is not intended to be equivalent to medical devices or scientific measurement devices.

HEARING LOSS:
Prolonged exposure to high volumes may result in permanent damage to hearing capability.
While using the device, ensure that the sound levels are maintained at optimum level.

CHOKING HAZARD:
The device is not a toy and it contains small components that could cause a choking hazard. Accordingly, the device is not intended for use by or left unattended around small children or pets.

SKIN IRRITATION HAZARD:
In some cases, prolonged use of or exposure to the device may cause skin irritation or allergies in some users. To reduce the possibility of irritation, keep the device clean and dry. If you feel soreness, tingling, numbness, burning or stiffness on any part of your skin while or after using the watch, please immediately discontinue use.

DISPOSAL INFORMATION:
At Noise, we are committed towards protecting the environment and prevent any damage to the same by way of irresponsible disposal of e-waste generated from electronic devices. In our endeavour to collaboratively protect the environment, we urge our customers to help Noise to reduce the impact of e-waste on the environment. The following symbol is indicative that the device and/or any of the associated accessories (like USB cable, charger and the like) thereof should not be disposed with household/domestic waste. In accordance with the regulation of the Ministry of Environment, Forest and Climate Change, Noise has been granted Extended Producer Responsibility Authorisation (EPR Authorisation number: B-29016/(595)/EPR/20/WM-III Division dated 04.03.2021 by the Central Pollution Control Board). Accordingly, Noise is committed to contribute its bit towards protecting the environment by providing customers with the option of depositing their Noise devices, which have reached their end-of-life, at authorised e-waste collection centres. The details of our e-waste collection centres and our e-waste policy is available at the link: https://www.gonoise.com/pages/e-waste-management.
Re-selling, reusing materials or other forms of utilising old devices/ you are making an important contribution to protecting our environment. Together we could make a difference!

CUSTOMER SUPPORT
If you experience any problem with the watch, it may be fixed by restarting your watch. For any assistance, please reach out to us at the support.gonoise.com