

AB7000 Set up PRINTING function using the Main Menu. **Configuración de la AB7000 para la conexión de la impresora**

- 1- Press SET key for entering into the Main Menu**

Presione SET para entrar en el Menú Principal



- 2- Press “1” key then “START” to access the SERIAL menu**

Presione “1” luego “START” para acceder al Menu de comunicación SERIE


- 3- Press “2” key then press “ADD” for enabling the print function and “START” to validate the selection. You will see a “1” in the “ENABLE PRINT” option.**

Presione “2” y luego “ADD” para habilitar la opción “ENABLE PRINT”, luego presione START para validar la selección.



- 4- Press ‘CLEAR’ to go up to the Main menu page again and press “5”key and then “START”**

Presione “CLEAR” para subir al menú principal nuevamente. Seleccione la opción 5 y presione START.

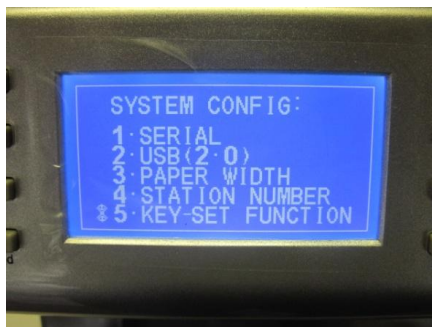

- 5- Then select the function you would like to assign to the “SET” key in the 7000’s keyboard. In this case you must select PRINT function, so press “2” key. It means when you press the “SET” key the unit will print the report of the counting. Then press START to validate the selection.
Presione 2 para seleccionar “PRINT FUNCTION” luego START para validar la seleccion.



- 6- Press “CLEAR” key twice to go out from the Menu.

Presione CLEAR dos veces para salir del MENU

- 7- Proceed to count a bundle of bills in VALUE mode and when the counting finish then press the “SET” key, the display will show the message PRINTING..... meanwhile the printer is printing the receipt with the counting details.

Seleccione modo VALUE y cuente un fajo de billetes, al finalizar el conteo presione SET para imprimir, la pantalla le debe mostrar el mensaje PRINTING.....al mismo tiempo que la impresora imprime los detalles del conteo.



NOTE: the SERIAL cable required to print must be DB9-DB9 or DB9-DB25 depending on the specific type of printer used to this purpose. If the cable you use is DB9-DB9, this cable is also called **RS-232 Null Modem Cable (crossover pins connection 2-3 ; 3-2).**\

NOTA: El cable serial requerido para imprimir debe ser DB9-DB9 o DB9-DB25 dependiendo de las características del printer. Si el cable es DB9-DB9, la conexión interna debe ser pines 2-3 y pines 3-2 o lo que es lo mismo **NULL MODEM CABLE.**