TREBLAB

HD55
WIRELESS BLUETOOTH SPEAKER

User's Manual

Please read this manual before using the product.

Thank you for choosing TREBLAB HD55 – Wireless speaker powered by latest BLUETOOTH ® 4.1 technology!

Expect superior sound quality and rugged construction combined with hands-free wireless operation.
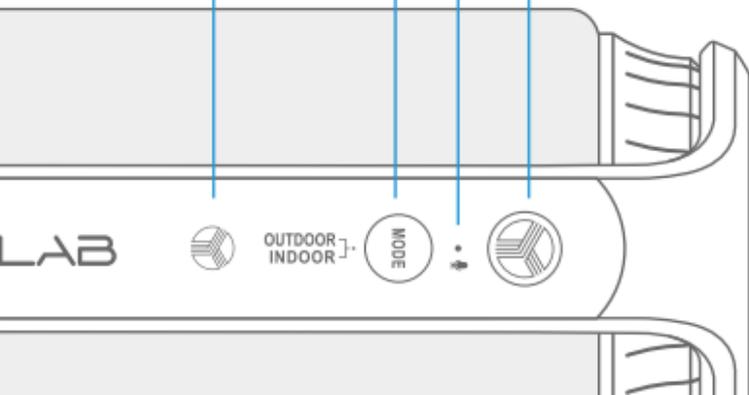
Treblab HD55
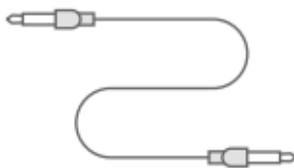
Mode Change Button
OUTDOOR / INDOOR

NFC Position

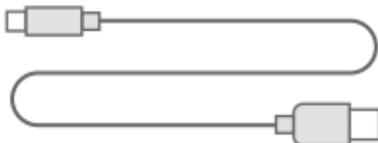Power ON / OFF
Play / Pause &
Calls Hands free

Mic

Audio Cable, 3.5 mm

USB Charging Cable

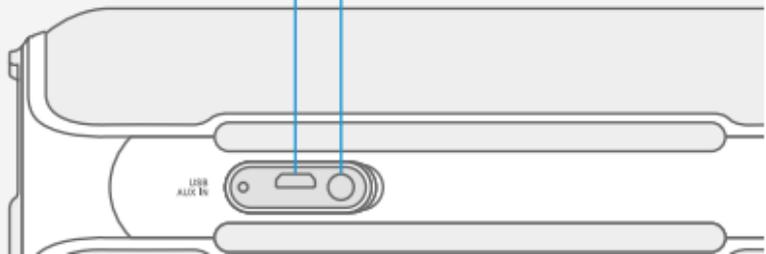| FUNCTION	OPERATION
Power On	Long press the power button
Power Off	Long press the power button
Answering Call	Short press the power button one time
End Call	Short press the power button one time
Reject call / Disconnect Bluetooth	Short press the power button twice "quickly"
Pause / Play	Short press the power button one time
Volume+ / Volume-	Turn clockwise to turn up the Volume and counterclockwise to turn the Volume down
Previous song / Next song	In the Bluetooth mode, swipe to the right to play the next track and to the left to play the previous
Mode change (indoor/outdoor)	Short press Mode Change button one time

Rotary Volume
+/-

Slide Next
/Previous

USB Charging

Line In

‹‹‹ – VOL + ›››

INDOOR · OUTDOOR

‹‹‹ ⊕ ›››

USB
AUX IN

Setting Up Your HD55

POWER ON/OFF To turn on your **HD55**, long press and release the power button. The LED bulb will light up and an audio cue will indicate the system is on. To turn the **HD55** off, long press and release the power button. Audio cue will indicate the system is off.

BLUETOOTH ®

1. Pairing: For Bluetooth® pairing, press and hold the power button for 6 secs. The Bluetooth® LED will blink RED/BLUE rapidly indicating device is in pairing mode.

2. Using your Bluetooth® enabled device, scan/search for available Bluetooth® devices

3. Select **TREBLAB HD55** from the device list.

4. Once HD55 is successfully paired and connected, the LED will blink BLUE every 3 secs.

5. Disconnect by holding the power button for 6 secs.

RECONNECTING

After the connection is lost, the **HD55** will try to reconnect automatically to any previously paired devices. If reconnection does not happen automatically, please go through the "pairing" instructions above. **TREBLAB HD55** only can remember the last 8 paired devices.

AUX INPUT

To play audio using the supplied audio cable, plug the cable from the audio device to the "LINE IN" jack on the side of the **HD55**.

VOLUME

To adjust volume of the **HD55**, turn the Volume ring clockwise to turn the volume up and counterclockwise to turn the volume down.

CHANGE TRACKS

To change tracks on the **HD55**, swipe with your figer to the right to play the next track and to the left to play the previous track on the top surface of the **HD55**.

PHONE CALLS

HD55 can be used to make and receive phone calls when connected through Bluetooth® (audio playback will be paused during calls). Answer/End Call: short press the "Power" button. To Reject Call: short press the "Power" button two times.

AUDIO PLAY AND PAUSE

To pause and resume playback when connected through Bluetooth®, short press the "Power" button.

CHARGING AND BATTERY

To obtain optimum power capacity, the **HD55** should be charged using the provided USB cable in your packaging box. To charge the **HD55**, plug the USB side of the cable into a power source and the Micro USB side into the port on the back of the **HD55**.

IMPORTANT CHARGING AND BATTERY INFORMATION

Do not charge your speaker longer than for 5 hours at a time, as this will lead to a reduction of battery capacity and void your manufacturer's warranty.

Unplug the **HD55** from the charging cable and the cable itself from the power source when not in use.

If left unused, a fully charged battery will lose its charge over time. We recommend fully charging the **HD55** twice a month to ensure sufficient battery life.

Do not leave the speaker exposed to extreme heat or cold because this will reduce the capacity and lifespan of the battery.

Do not place the speaker close to fire as the batteries may explode. Batteries may also explode if damaged.

To charge the **HD55** use only the cable provided in the packaging box.

Make sure the speaker is completely dry before charging.

IMPORTANT SAFETY INFORMATION

Never disassemble or modify your speaker for any reason. Doing so may cause the speaker to malfunction or become combustible. Damaging the speaker will void your manufacturer's warranty. Do not use excessive force when operating the speaker. Do not let the speaker drop onto a hard surface.

Avoid exposing the speaker to extreme temperatures (below 32F/2Co or above 104F/40Co). Extreme temperatures may cause the deformation of the protective cover and reduce lifespan of the **HD55**.

Avoid putting LED lights close to the eyes of humans and animals.

Do not use the speaker outdoors during a thunderstorm. Thunderstorms may cause malfunction and increase the risk of electric shock.

TROUBLESHOOTING INSTRUCTIONS

The LED does not come on when turning the speaker on

This can happen when the battery has lost charge. Charge the **HD55** for at least 30 minutes and the problem should be solved.

Can't connect the speaker to your device

1. TURN OFF THE **HD55**.

2. Go to the Bluetooth menu on your source device and delete all saved devices from the list by clicking on "Forget this device".

3. Turn the Bluetooth on your source device OFF then back ON; **TREBLAB HD55** will be deleted.

4. Power OFF your source device then and then turn it back ON.

5. Power ON the **HD55**.

6. Enter the device into the pairing mode and follow the instruction for connecting.

My device is asking for a password

If prompted for a password, enter 0000 on your device.

Frequent disconnection and noise

1. Ensure the **HD55** is fully charged.

2. Ensure that the distance between your device and the speaker is less than 30 feet / 10 meters.

3. Ensure that nothing is blocking the signal between your device and the **HD55**.

4. Check if the music is paused.

5. Check if the volume level is set both on the source device and on the speaker.

6. Check if the speaker is running out of power.

TECHNICAL SPECIFICATIONS

Bluetooth version **4.1 + EDR**	Battery life **Up to 10 hours**	Frequency range **80Hz- 20KHz**
Bluetooth profiles **A2DP, AVRCP**	Charging time **Up to 5 hours**	Audio input **AUX**
Operating distance **30 feet / 10 meters**	Battery capacity **4000mAh**	Charging port type **Micro USB**

TREBLAB FX100 MEETS IP4 WATEPROOF STANDART

SUITABLE:
- ✔ Splashing
- ✔ Snow
- ✔ Accidential short rain

UNSUITABLE:
- ✖ Swimming
- ✖ Diving into water
- ✖ Snorkeling or Scuba Diving
- ✖ Showering

- ✖ All kinds of watersports
- ✖ Incidental exposure to water of up to 3 feet/1 meter for up to 30 minutes

THANK YOU

We truly appreciate that you chose **TREBLAB** as your trusted brand of Bluetooth speakers and sincerely hope you enjoy the great sound and seamless usability **TREBLAB HD55** provides. We love making our customers happy by providing true value with our products.

If for any reason, you are not completely satisfied with your purchase, or have any questions, please let us know by contacting us at **support@treblab.com**. We care about our customers more than anything and are always here to serve you.

1 YEAR WARRANTY

1 YEAR PARTS AND LABOR WARRANTY.

Please visit TREBLAB.COM to register for your warranty and get a 10%OFF coupon for your next purchase!

Manufactured by:
Productech Corp www.treblab.com

Contact us:
support@treblab.com

TREBLAB

HD55
WIRELESS
BLUETOOTH
SPEAKER

Made in China

♻ CE ✓ RoHS FC