



Dreamegg D1 Pro White Noise Sound Machine With Adjustable Night Light

User's Manual



Model No.: HFD-W02

Questions or Answers?

Dreamegg Official Support provides timely and friendly services in 24 hours for any problems.



support@mydreamegg.com

Thank you for purchasing Dreamegg products.

Instructions are in English and Japanese. Page 1-10 are English User Manual. Japanese version starts from page 11.

Please read the instructions carefully before use.

Questions or Answers?

Dreamegg Brand Official Support provides timely and friendly services in 24 hours for any problems.

 support@mydreamegg.com

この度は、Dreamegg製品をお買い上げいただきまして、誠にありがとうございます。


取扱説明書（日英共通）は1～10ページが英語版で、11ページからが日本語版です。

本製品をお使いになる前に必ず本書をお読み頂き、正しくお使いください。

また、必要な時に読めるように、本書は読み終わった後、大切に保管してください。

お困りのところがありましたら、是非ご遠慮なくカスタマーサポートまでご連絡ください

 **E-Mail:** supportjp@mydreamegg.com

 **Line ID:** dreameggjp

PROTECT YOUR WARRANTY

Dreamegg Sound Machine comes with 365 days replacement warranty and 60 days money back guarantee, which starts from the purchase date of the order.

Additional 6–Month Warranty

To extend your warranty 6 months more and register your new Dreamegg, please email directly to support@mydreamegg.com with following information.

Your Name _____

Amazon Order ID _____

Please complete your registration warranty as above. We will get back with a confirmation email in 24 hours.



SAFETY INFORMATION

IMPORTANT:

Please read and comply with **all** of the instructions and warnings provided in this manual before using the product. Failure to comply with the instructions and warnings provided herein may result in inaccurate results and/or damage to the product itself.

1. Avoid placing the unit in rain or humid place, keep it dry.
2. Avoid dropping objects or spilling liquids onto the unit.
3. The unit should be situated away from fire, like candles or the others.
4. Do not put any stuff on this product.
5. Put the unit away from heat source, dust or vibration.
6. Put the unit on horizontal table.
7. Do not press too hard when pressing the button.
8. Use provided power cord for the sake of safety.
9. The unit should be cleaned regularly with a soft, dry cloth. Do not use any liquids or sprays (including solvents, chemicals or alcohol) or abrasives to clean.

SAVE THESE INSTRUCTIONS


PACKAGE CONTENTS

- 1 X Dreamegg Sound Machine
- 1 X Charging Cable
- 1 X Owner's Manual

TECHNICAL INFORMATION

Output Power	5W
Power Adapter Requirement	5V/1.0A
Speaker Specification	66mm,2Ω5W
Frequency response	35HZ-20KHZ
THD	≤0.5%
SNR	≥95dB
Dimensions	4.3 x 4.3 x 2.7 inches

GETTING TO KNOW YOUR DREAMEGG

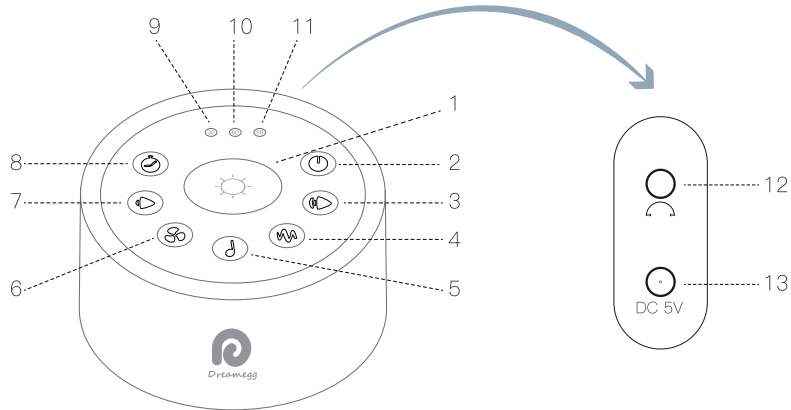

1.Night Light

2.Power

3.Volume Up

4.White Noise Button

5.Natural Sound Button

6.Fan Sound Button

7.Volume Down

8.Timer

9.30m Timer Indicator

10.60m Timer Indicator

11.90m Timer Indicator

12.Headphone Jack


13.AC Adaptor Jack

GETTING STARTED



Power On

1. Plug the unit into the power source.
2. Short press power button to turn on/off the unit.
3. By default, you will hear bird sound at medium volume, the night light is on and the timer is set to 60 minutes.



Note : Make sure to insert the cord to “ DC 5V ” port in the rear of the unit instead of “headphone” port.

Over-voltage Protection

When DC power supply is over 5V, over-voltage protection will automatically turn the machine off to protect it from burn-out. It is highly recommended to use qualified 5V / 1.0A charger for safety and proper use.

USING YOUR DREAMEGG

Pick a Sound



15 Nature Sounds: Short press this button to choose a nature sound. In sequence they are bird, sea wave, gentle surf, lullaby, music box, rain, thunder rain, brook, campfire, cricket, drip, pendulum, train, shushing, and fetal tone sounds. You will hear an indicator sound when you press the button 15 times.



7 Fan Sounds: Short press this button to choose a fan sound. You will hear an indicator sound when you press the button 7 times.



7 White Noise Sounds: Short press this button to choose a white noise. In sequence they are 3 pink noises, 3 white noises and 1 brown noise. You will hear an indicator sound when you press the button 7 times.



Adjustable Night Light

Note: The night light and sound are controlled separately. Night light can be turned on/off without turning on the machine. You could also adjust the night light brightness to the most comfortable level you want.

1. **Short press** the Night Light button in the center of the control panel, the night light turns on in steady mode.
2. **Short press** the second time, the night light turns in breathing mode.
3. **Short press** the third time, the night light turns off.
4. **Brightness Level Adjustment:**

When the night light is in steady mode, **hold and long press** the Night light button, the light brightness will circulate between bright and dim. Release the button when you find the desired brightness, the night light will keep on at this brightness level. It will remember the last setting of night light.

Note: If you have trouble in using the feature, email us at support@mydreamegg.com. Our customer representative will come to your assistance in 24 hours with step by step guidance.



Set a Timer

Toggle through the TIMER button until the corresponding LED illuminates next to the time of your choice 30,60 or 90 minutes. The unit will automatically shut off after the selected time. If you want to restart, press Power button again.

Run Continuously

The unit could run continuously if you don't set the timer. Toggle through TIMER button until the corresponding LED goes off, it means you are in continuous mode.

Volume Adjustment



Volume Up: Short press or long press to turn up the volume and you will hear a “ding” sound when volume reaches it's maximum.



Volume Down: Short press or long press to turn down the volume until it's mute.

Headphone Jack

Insert a headphone to enjoy your sounds on the high fidelity speaker without disturbing others.

Memory Function

It will remember the lasting setting of sound, volume, timer and night light settings, so you don't bother to push buttons all the time!

TROUBLESHOOTING

Problem	Possible Cause	Solution
Sound machine doesn't turn on	Loose power connecting	Check the cable and power source
	Power button has not been pressed properly	Be sure to Short press power button to turn the unit on
	Charging cord is inserted into wrong port	Check and make sure the cord is plugged into the "DC 5V" port, Not in the headphone jack
	Over-voltage occurs or fast charging cable is used	Use the provided cable only. See Over-voltage Protection (page 5)
	Charging cord is broken	Immediately discontinue use and contact Customer Service. (page 9)
	Power outlet has no power	Switch to other outlets to see if works
	Sound machine is defective or malfunctioning	Immediately discontinue use and contact Customer Service. (page 9)
Unit suddenly turns off once pressing the power button	Power button has not been pressed properly	Be sure to Short press power button to turn the unit on
Sound machine doesn't respond to button controls	Sound machine is defective or malfunctioning	Immediately discontinue use and contact Customer Service (page 9)

Sound machine cannot run continuously	Timer setting is on	Cancel the timer. See Set a Timer (page 6)
No sound when machine powers on	Low volume setting	Press volume up button See Volume Adjustment (page 6)
Cannot find right sound option	Wrong sound mode	Press white noise/fan sound/ nature sound button to choose different sound see Pick a Sound (page 5)
Machine turns off automatically	Timer setting is on	Cancel timer setting. See Set a Timer (page 6)
	Sound machine is defective or malfunctioning	Immediately discontinue use and contact Customer Service (page 9)
Sound machine makes unusual noise while operating or turning off	Sound machine is defective or malfunctioning	Immediately discontinue use and contact Customer Service (page 9)

For other issues you might come across, contact us at support@mydreamegg.com. we will reply in 24 hours and offer a satisfactory solution for you.

WARRANTY

Dreamegg Sound Machine comes with 365 days replacement warranty and 60 days money back guarantee, which starts from the purchase date of the order. A defect arises and a valid claim is received within the warranty period at its option. Dreamegg will replace the product with a new item.

Obtaining Service: To obtain warranty service , please email to support@mydreamegg.com with your order ID to register.

Replacement & Refund

1. Would love a replacement for defective products?

Should your product is defective within the specified warranty period, please contact us via support@mydreamegg.com with order number. Once our customer support team hears from you, we will process your request in 24 hours.

2. Not happy with the unit or passed Amazon 30 days return window?

No worries! Be sure to contact Dreamegg customer service at support@mydreamegg.com with your order number. we will process your request faster and easier, usually in 24 hours.

CUSTOMER SERVICE

✉ support@mydreamegg.com

Need help? Contact us directly at support@mydreamegg.com with your order ID. We are more than happy to serve you in 24 hours. Dreamegg support is here to make sure you are completely satisfied with your product

CC DISCLAIMER

s device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept interference received, including interference that may cause undesired operation.

e manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the users authority to operate equipment.

s equipment has been tested and found to comply with the limits for a Class B digital device, suant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection ainst harmful interference in a residential installation. This equipment generates, uses and can iate radio frequency energy and, if not installed and used in accordance with the instructions, y cause harmful interference to radio communications. However, there is no guarantee that erference will not occur in a particular installation. If this equipment does cause harmful erference to radio or television reception, which can be determined by turning the equipment and on, the user is encouraged to try to correct the interference by one or more of the owing measures:

eorient or relocate the receiving antenna.

crease the separation between the equipment and receiver.

onnect the equipment into an outlet on a circuit different from that to which the receiver is connected.

onsult the dealer or an experienced radio/TV technician for help.

JOIN DREAMEGG MOVEMENT

Follow @dreameggofficial on Instagram/TikTok for latest product updates and promotions



Our Official Website: www.mydreamegg.com

Contact: support@mydreamegg.com

Our Social Media: @dreameggofficial



Dreamegg
D1 Pro

取扱説明書

ホワイトノイズ サウンドマシン
暖色ナイトライト搭載



型番 : HFD-W02

この度は、Dreamegg製品をお買い上げいただきまして、誠にありがとうございます。
本製品をお使いになる前に必ず本書をお読み頂き、正しくお使いください。また、必要な時に読めるように、
本書は読み終わった後、大切に保管してください。




supportjp@mydreamegg.com

日本国内安心保証

Dreameggブランドは万一の製品トラブルに備え、安心の長期保証をご用意しております。

Dreamegg製品はお買い上げ日より12か月間の日本国内安心保証をご提供いたします。「取扱説明書」に従った正常な使用状態で万が一故障が発生した場合、まず「故障かな? と思ったら」に沿ってご確認いただき、それでも異常のある時は、ただちに使用を中止し、保証書の内容をお買い上げの販売店か、カスタマーサポートに保証対応をお申しつけください。

 E-Mail: supportjp@mydreamegg.com

 Line ID: [dreameggjp](#)

保証書

製品:	ホワイトノイズマシンD1pro	型番:	HFD-W02
ご購入日※:		注文番号※:	
保証期間※:	ご購入日から12か月	製品登録済※:	はい(保証期間+6か月)/いいえ
お名前:		お電話:	
メール※:			
不具合 症状※:			

※必ずご記入いただきたいこと。

この保証は、次の場合には適用されません。

- (a) 取扱説明書の指示に従わなかったことに起因する損害。
- (b) 事故、誤用、火災、洪水、地震またはその他の外部要因によって引き起こされた損害。

無償保証期間延長サービス

Dreamegg製品は、ご購入日から12月間のメーカー保証を致しますが、注文情報を登録して頂くと、保証期間は更に6月間を無料で延長致します。

延長方法

下記の情報をカスタマーサポートまでお送りください。注文情報を確認次第に、延長後の保証情報をお知らせ致します。

無償保証延長

名前: _____

注文番号: _____

✉ E-Mail: supportjp@mydreamegg.com

LINE ID: dreameggjp



(平日24時間以内対応)

※お預かりした個人情報につきましては、注文の確認、保証の確認、お問い合わせの返信時とセール情報や新製品情報のお知らせにのみ使用いたします。

カスタマーサポート

Dreameggはお客様に心からご満足いただける上質なサービスの提供に努め、常に丁寧で迅速なサポートを徹底し、ご相談やご要望にも一つひとつしっかりと対応しております。

製品について、万一不備、破損やご希望に添えない点などがございましたら、是非お気軽にご連絡ください。

✉ E-Mail: supportjp@mydreamegg.com

LINE ID: dreameggjp



(平日24時間以内対応)

安全上のご注意

お使いになる前に必ずお読みください。ここに示した内容は、商品を安全に正しくお使いいただき、お使いになる人やほかの人々への危害や財産への損害を未然に防止するため、必ずお守りいただきたい事項を示しています。表示された指示内容を守らず、誤った使用によっておこる危害及び損害の度合いを次のように説明しています。

警告

- 本体の分解や改造は行わないでください。けがや故障の原因となります。
- お子様だけで使用させないでください。また、お子様の手の届かない場所に保管してください。誤操作により思わぬ事故を起こす原因となります。
- 本体は高温となる場所では、保管・使用しないでください。故障、火災、感電やけがの原因となります。
- 雨や湿気の多い場所では、保管・使用しないでください。感電および故障の原因となります。
- 本体を高いところから落とすなど強い力を加えないでください。故障、火災、感電やけがの原因となります。
- ぬれた手での操作や、USBケーブルの抜き差ししないでください。感電および故障の原因となります。
- USBケーブルの上に重い物をのせたり、熱器具に近づけたり、無理に引っ張ったりしないでください。コードが破損して火災や感電の原因になります。
- 煙が出る、異臭がする、水や異物が入った、破損した等の異常がある時は、ただちに使用を中止して、修理を依頼してください。異常状態のまま使用すると、火災、感電やけがの原因となります。
- 柔らかい乾いた布で定期的に清掃してください。液体やスプレー（溶剤、化学薬品、アルコールなど）や研磨剤を使用しないでください。火災、感電、けがや故障の原因となります。

セット内容

- 1× ホワイトノイズマシン マシン
- 1× USBコード
- 1× 取扱説明書(日英共通)
- 1× 12ヶ月間の日本国内安心保証


注意: 充電アダプターは同梱されておりません。
5V出力のUSB充電アダプターをご利用ください。

電源コードのご購入: Amazonで「Dreamegg ホワイトノイズマシン 専用充電コード」を検索してください。

仕様

出力:	5W
入力電圧:	5V/1A
スピーカー仕様:	66mm、2Ω5W
周波数:	35Hz-20KHz
THD:	≦0.5%
SNR:	≧95dB
サイズ:	110mm x 110mm x 70mm
コードの長さ:	150cm

製品図

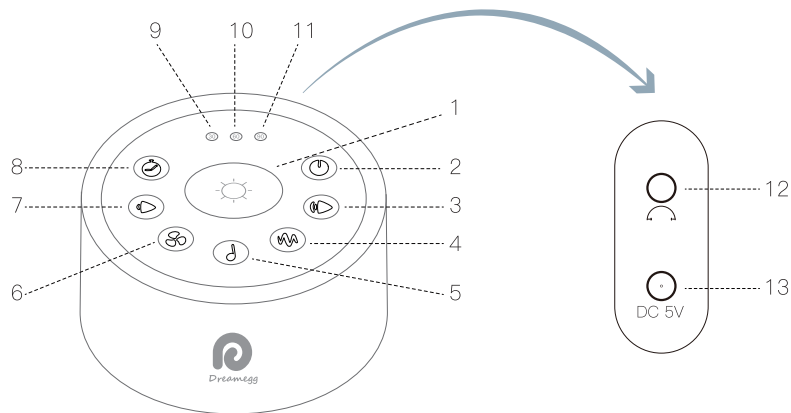

1.ライトボタン

2.電源ボタン

3.ボリュームアップボタン

4.ホワイトノイズ

5.自然の音

6.ファンの音

7.ボリュームダウンボタン

8.タイマーボタン

9.30分間タイマーインジケーター

10.60分間タイマーインジケーター

11.90分間タイマーインジケーター

12.3.5mmオーディオ出力ポート

13.入力ポート

使い方



簡単に電源ON・OFF

1. USBコードをマシンの入力ポートに差し込んでから、USB充電アダプタ、モバイルバッテリー、パソコンなどの5V出力電源に接続してください。
2. 電源ボタンを短く押して、電源をON・OFFできます。
3. 初めてご利用になる際、電源が入ったら、LEDライトが点灯し、中音量の鳥の音が聞こえ、タイマーは60時間に設定されています。その後、記憶機能があるため、電源が入ったら、前回終了時の動作をいたします。



ご注意：USBコードを正しく「DC 5V」入力ポートに差し込んでください。
3.5mmオーディオ出力ポートに挿せば、動作できません。

過電圧保護

本製品はの入力規格は5V/1.0Aです。5V以上のUSB電源を使う場合、過電圧保護システムより自動的電源オフになり、動作できなくなります。そのため、5V以上出力の電源を使用しないでください。

お好みのサウンドを選択



15種の自然音

自然音ボタンを押すことで、小鳥の囀り、海の波打ち（強）、海の波打ち（弱）、睡眠オルゴール1、睡眠オルゴール2、雨の音、夏の雨と雷、川のせせらぎ、篝火、虫の鳴き声、水雫の音、時計の振り子、汽車の音、「すーすー」音と母の胎内を選択できます。最後の音が流れた後、ボタンを押すと、指示音が聞こえます。



7種のファン音

ファン音ボタンを押して、お好みのファン音を選びます。最後の音が流れた後、ボタンを押すと、指示音が聞こえます。



7種のホワイトノイズ

ホワイトノイズボタンを押して、ホワイトノイズを選びます。3種のピンクノイズ、3種のホワイトノイズ、1種のブラウンノイズがあります。最後の音が流れた後、ボタンを押すと、指示音が聞こえます。



暖色ナイトライト

ナイトライトとサウンドは別々にコントロールできます。電源オフの場合でもライトボタンを押すことで、ナイトライトをオン・オフにすることができます。調光可能だから、お好みの光るさも選択できます。

1. ライトボタンを**短く押す**と、ナイトライトは点灯します。
2. 再びライトボタンを**短く押す**と、ナイトライトは呼吸するようにゆっくり点滅します。
3. もう一度ライトボタンを**短く押す**と、ナイトライトは消灯します。
4. **ナイトライトの光るさを調整**：ナイトライトが点灯する状態で、ライトボタンを長押しすると光は明暗を繰り返します。タップを解除すると、お好みの明るさを選択できます。

ご注意：ナイトライト機能について、何かご不明なところがあれば、是非ご遠慮なくカスタマーサポート(✉: supportjp@dreamegg.com)までご連絡ください。24時間以内対応いたします。



タイマー設定

タイマーボタンを押して、タイマーを設定します。30分、60分、90分の中からタイマーを選ぶことができます。タイマーを設定すると、そのタイマーのインジケーターが点灯します。設定した時間が経過すると、マシンは自動的にオフになります。再起動するには、もう一度電源ボタンを押す必要があります。

連続動作モード

タイマー設定をしていない場合、手動で電源をオフにしないと、マシンが動作し続けます。タイマーインジケーターが消灯することは、連続動作モードを示しています。

音量調節



音量アップ：短く押す/長押しすることで調整できます。音量が最大に達したときに指示音が聞こえます。



音量ダウン：無音になるまで短く押す/長押しすることができます。

イヤホン接続

3.5mmイヤホンジャックは備えて、イヤホンと接続すれば、他人に影響せず、利用できます。

メモリ機能

メモリ機能があり、電源が入ったら、前回終了時の設定（タイマー、ライト、音、音量）になります。

故障かな?と思ったら

故障	原因	対策
異音・雑音が聞こえる	個体製品不良	カスタマーサポート(supportjp@mydreamegg.com)に連絡してください。
動作できない	電源にしっかり接続されていない	もう一度USBコードを本体の入力ポートに差し込んでから、電源に接続してみてください。
	USBコードを3.5mmオーディオ出力ポートに差し込んでいる	USBコードを正しく「DC 5V」入力ポートに差し込んでください。
	過電圧保護モードに入ってしまった	付属されたUSBコードと5V出力のUSB電源を使用することをご確認ください。
	電源コンセントに問題がある可能	別のUSB電源やコンセントに接続してみてください。
	USBコードは不良になった	カスタマーサポート(supportjp@mydreamegg.com)に連絡してください。
	個体製品不良	カスタマーサポート(supportjp@mydreamegg.com)に連絡してください。

電源が入ってからすぐに切れた	電源ボタンを正しく押していない。	電源ボタンを長く押すではなく、短く押して電源をオン・オフにしてください。
ボタンを押した時マシン反応は正しくない	個体製品不良	カスタマーサポート (supportjp@mydreamegg.com) に連絡してください。
マシンは連続動作できない/マシンが突然に電源が切れた	タイマーを設定している	タイマーを設定していない (全てのタイマーのインジケータが消灯) ことをご確認ください。
	個体製品不良	カスタマーサポート (supportjp@mydreamegg.com) に連絡してください。
マシンの電源が入っているのに音が出ない	最小音量に設定されていた	音量が適切になるまで音量アップボタンを押してください。
<p>製品使用中、また何かご不明な点やお困りのところがありましたら、是非ご遠慮なくカスタマーサポートにご連絡ください。私共誠心誠意に対応させていただきます。 カスタマーサポート ✉ : supportjp@mydreamegg.com (平日24時間以内対応)</p>		

FCC 認証

本装置は、FCC基準パート15に準ずるClass Bのデジタル電子機器の制限事項に準拠していません。これらの制限事項は、住宅地域で使用した場合に生じる可能性のある電磁障害を規制するために制定されたものです。本装置は高周波エネルギーを生成し使用しています。また、高周波エネルギーを放射する可能性があるため、指示に従って正しく設置しなかった場合は、無線通信に障害を及ぼす可能性があります。

しかしながら、特定の設置状況においては電波障害を起こさないという保証はありません。本装置がラジオやテレビの受信に障害を与えていないかを判断するには、本装置の電源をオンオフしてみます。受信障害が発生している場合には、以下の方法で受信障害を改善することをお勧めします。

- 受信アンテナの方向または設置位置を変える。
- 本装置と受信機の距離を離す。
- 本装置と受信機の電源系列を別の回路にする。
- ラジオ/ビデオの専門技術者に問い合わせる。

Dreamegg JPをフォロー



Line ID: dreameggjp



Twitter: @dreameggjp



Instagram: @dreamegg.jp

