



*Pellet Stoves
Wood Stoves
Pellet Grills
Lifestyle Products*

P.O. Box 206 Monroe, VA 24574 www.heatredefined.com Phone: (800) 516-3636 Fax: (434) 929-4810

Installing ceramic fiber board And/or replacing burner tube(s) In units with “06” or “08” in model number

***WARNING: STOVE MUST BE OUT (NO FIRE), AND COOLED DOWN BEFORE PROCEEDING.
ALWAYS FOLLOW ALL CODES.***


Burner tube replacement

There are three different burner tubes in the top of the stove firebox.

To replace a tube, first be sure that you order the correct tube you need to replace (front, middle, or rear – see www.heatredefined.com and/or owner’s manual).


Then, using a 5/16” socket or open end wrench, remove the screw located on the left side of the tube. Be sure to keep the screw. Push the tube to the right then remove the tube (pulling the tube back to the left after that side has been removed from the hole). To replace, reverse the above procedure.

Make sure to install the tubes in the correct order. (Front to Back, as shown below)

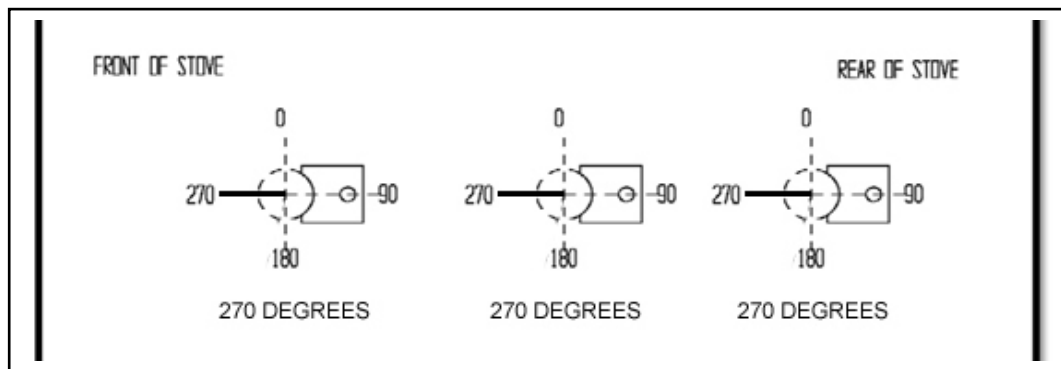


Ceramic fiberboard replacement

There are four fiber boards located in the top of this stove, in two layers. While the bottom layer is oriented ‘North/South’ as shown, the top layer is oriented ‘East/West’. To replace a cracked or broken board, first remove the front burner tube. Then, remove the board you need to replace. Install the new board (the boards should sit flush together side by side). Replace the tube previously removed.

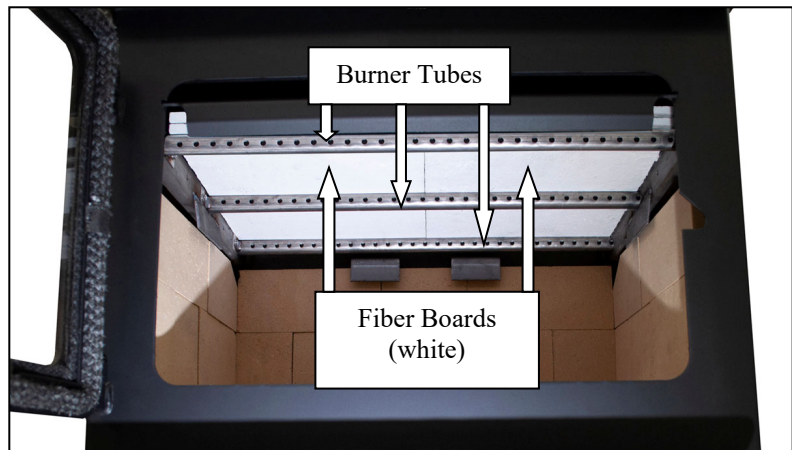

Remplacement du tube de brûleur

La partie supérieure du poêle compte trois tubes de brûleur différents. Pour remplacer un tube, assurez-vous de commander le tube qui correspond à celui que vous devez remplacer. Retirez ensuite la vis située du côté gauche du tube à l'aide d'une douille ou d'une clé à fourches de 5/16 po. Assurez-vous de conserver la vis. Poussez le tube vers la droite, puis retirez-le (en ramenant le tube vers la gauche après avoir retiré ce côté de l'orifice). Pour remplacer le tube, inversez la procédure indiquée ci-dessus. Assurez-vous d'installer les tubes dans l'ordre adéquat. (De l'avant à l'arrière)

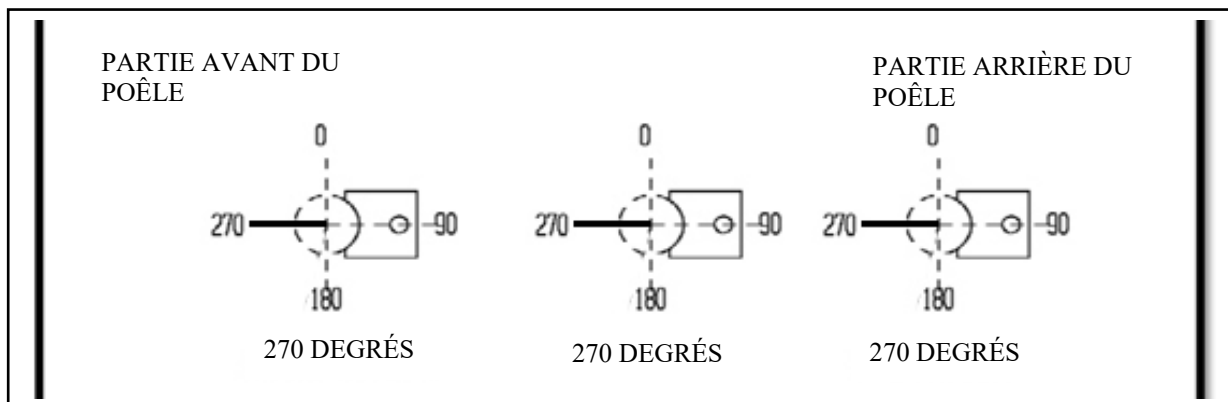

Remplacement du panneau en fibres de céramique

Il y a quatre panneaux de fibres situés en haut de ce poêle, en deux couches. Alors que la couche inférieure est orientée «Nord / Sud» comme indiqué, la couche supérieure est orientée «Est / Ouest». Pour remplacer un panneau fissuré ou brisé, retirez d'abord le tube de brûleur avant. Retirez ensuite le panneau que vous devez remplacer. Installez le nouveau panneau (les deux panneaux doivent être placés directement sur les tubes de bord à bord). Remplacez le tube retiré précédemment.

