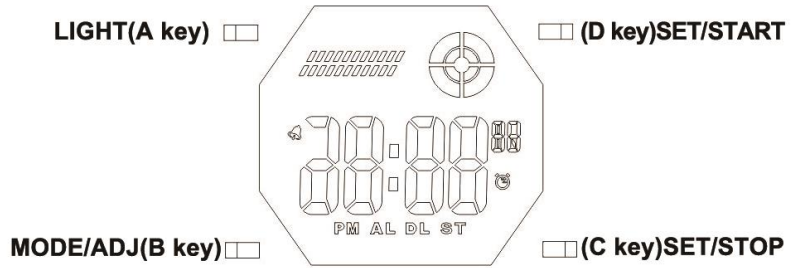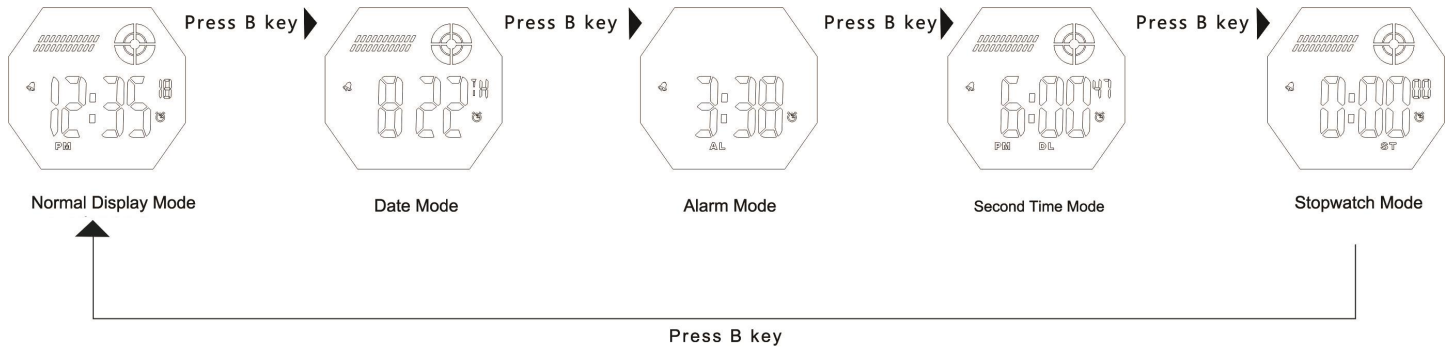# 1484 OPERATION INSTRUCTION

Features:

- Time Display(12 / 24H format selectable)
- Week, Date
- Daily Alarm and Chime hourly
- Stopwatch function from 00'00''00-29'59''59
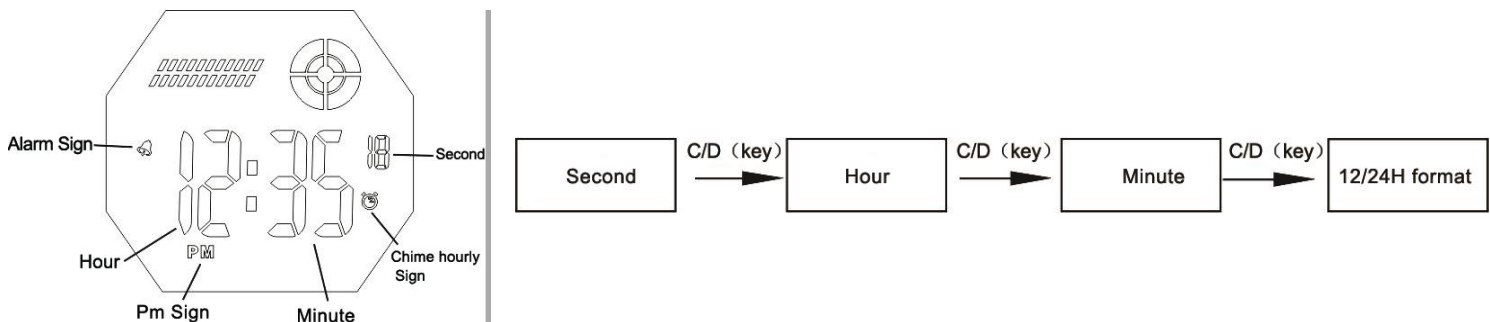- Second time function
- EL backlight

LIGHT(A key)   (D key)SET/START

MODE/ADJ(B key)   (C key)SET/STOP

PM AL DL ST

Mode Convert:

- In any Mode , press A key for EL backlight ON 3s
- Press B key to convert MODE as following :

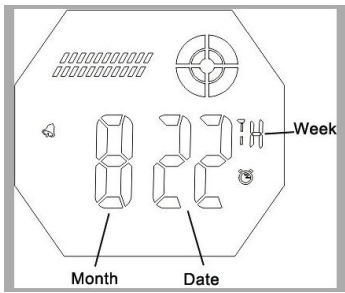| Normal Display Mode | → Press B key → | Date Mode | → Press B key → | Alarm Mode | → Press B key → | Second Time Mode | → Press B key → | Stopwatch Mode |

Press B key

Time Setting:

- In normal Mode, press C/D Key for 2s, the "Hour" is flashing, press C/D key to select as following sequence: Hour, Minute, 12/24H format flash.
- Press B key to adjust the flashing item.
- Press C/D key to exit.

Alarm Sign —
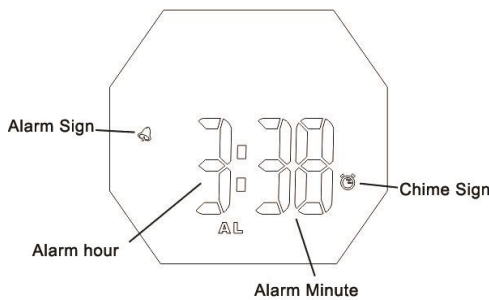Second
Hour
Pm Sign
Minute
Chime hourly Sign

| Second | → C/D (key) → | Hour | → C/D (key) → | Minute | → C/D (key) → | 12/24H format |

Date Setting:

In normal display Mode, press B key once enter into Date Mode

➢ Press and hold C/D key for 2s,the "Month" is flashing, press C/D key again," Date", "Week" is flashing, press B to adjust item.

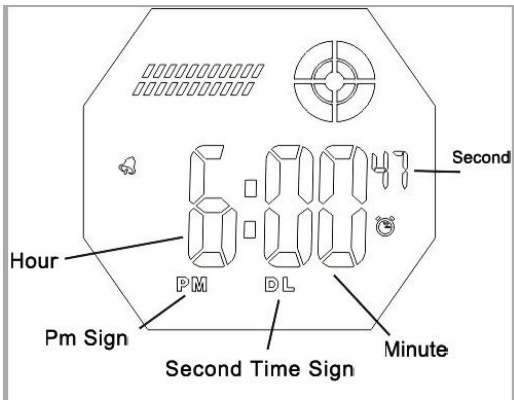➢ After adjustment, press C/D key to finish the setting.

Alarm Setting:

➢ In normal display Mode, press B key twice enter into Alarm Mode(AL symbol display)

➢ Press and Hold C/D key for 2s, the Hours will flash. Press C/D key once,Ten digits flashes, press it again, digital flashes, Press B key to adjust the flashing item.

➢ Press C/D key the "Alarm" and "Hourly Chime" will flash, then press B key once, "Alarm" and "Hourly Chime" are displaying for Off.

➢ Press B twice then "Alarm" On, Press B three times" "Hourly Chime" On, Press B four times, the "Alarm" and "Hourly Chime" all displaying for On.

➢ After setting Alarm and press C/D once to finish the setting.

Second Time Setting:

➢ In normal Mode, press B key three times to enter into Second Time Mode(DL symbol display).

➢ Press and hold C/D key for 2s, and "Hours" will flash.

➢ Press C/D key to select as following sequence: Minute,12/24H format flash.

➢ Press B key to adjust the flashing item.

➢ After setting Time, press C/D once to finish the setting.

Second

Hour

Pm Sign

Second Time Sign

Minute

PM   DL

| Hour | C/D（key）→ | Minute | C/D（key）→ | 12/24H format |

Chronograph Functions:

➢ In normal Mode, press B key four times to enter into Stopwatch Mode(ST symbol display).

➢ Press C/D key once to start running, press C/D twice stop running.

➢ When stop and press and Hold C/D key for 2s to zero.

1/100 second

Minute

Second

ST

Press B key four times → Stopwatch ← Press C/D for 2s

C/D(key) ↓

Start → C/D(key) → Stop