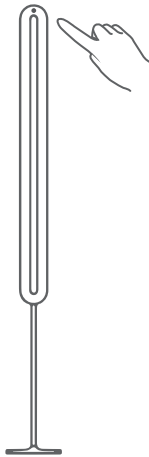# LightPillar | Dimmable |

Turn on/off the light: With a single touch on top of the pillar (on/off button), you can turn the light on/off.

Dim and brighten the light: When the light of the pillar is on, touch and hold the on/off button of the pillar to dim/brighten the light and release it when it reaches the preferred light setting.

With a remote control

Pairing: When the light of the pillar is off, touch and hold the remote button for 5 seconds. The light will blink, then click on the remote button once and if the light stops blinking, the pairing is successful.

Note: One lamp can be paired with multiple remote controllers at the same time and one remote controller can be paired with two lamps or more at the same time.

Turn on/off the light: When the light is off, one single click on the remote button will turn on the light and a double-click will turn off the paired light(s). It does not matter in which mode(s) the light(s) is/are separately, with a double-click on the remote button you switch off each paired light. (force quit)

Dim and brighten the light: When the light is on, just single click the remote button and the light will dim/brighten until you click again to set your preferred light setting. If you don't click the button again on time, the light will switch off automatically after dimming or will automatically reach the highest brightness after you brighten the light.

Unpairing: When the light of the pillar is off, touch and hold the on/off button on the pillar for 5 seconds until the light will blink. Release your finger and then touch and hold the on/off button on the pillar again for 5 seconds. If the light pillar blinks faster now, the unpairing with the remote controller is succesful.

Technical Specifications

Power	30W
AC input	110-240V
Input	DC12V, 2.5A (Adapter)
	DC5V, 2A (USB-C port)
Lifetime	30,000 hours
Luminous flux	36Lm/W
Color Rendering Index (CRI)	82
Lamp bead type	LED2835, 3000K