



GameSir T4 Wireless Controller

User Manual



We hope this manual answered any questions you may have.
If you have any further questions, please contact us:

GameSir Facebook: <https://www.facebook.com/myGamesir>

Twitter: <https://twitter.com/mygamesir>

Customer Service: cs@gamesir.hk

! NOTICE: Please read this Precautions carefully before using the product.

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

PRODUCT DESCRIPTION

GameSir T4 wireless controller is designed for a strengthened gaming experience. It is compatible with Windows 7 or above through wired and 2.4 GHz low delay transmission wireless connection. GameSir T4 has LB & RB buttons, D-pad, silicone anti-skid 3D joystick and sensitive triggers. Key configurations of M1-M4 buttons at the backside are customizable and can be freely combined. Dual motors bring strong vibration feedback. Ergonomic handles are unevenly engraved and designed for anti-skid handhold. The product has translucent design with LED ABXY buttons on the right.

PACKAGE CONTENTS

GameSir T4 Wireless Controller
2.4 GHz Wireless Receiver
Type-C charging cable
Instruction Manual

SYSTEM REQUIREMENT

Windows 7/8/10


REGISTRATION

Register your GameSir ID at <https://gamesir.hk/> to get real-time information on your product's warranty status and series of GameSir exclusive benefits.


WHAT YOU'LL GET

- * 12 months limited manufacturer's warranty
- * Free online technical support at <https://gamesir.hk/> (Supports English and Japanese)

DEVICE LAYOUT

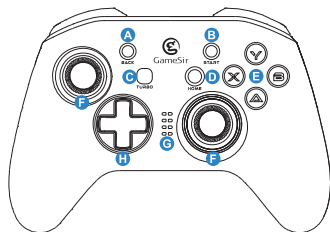

- A BACK Button B START Button C Turbo Button D HOME Button
E A/B/X/Y buttons F Backlight loop G LED light indicators H D-Pad

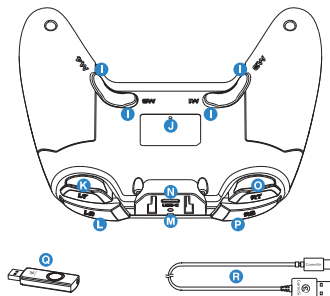

- I Configurable buttons(M1/M2/M3/M4) J Reset K LT Button
L LB Button M Charging light indicator N Type-C connector
O RT Button P RB Button Q 2.4Ghz Dongle R USB Cable

CONNECTION

Connect to PC via 2.4 GHz receiver (Xinput Mode)

- Click Home button to turn on GameSir T4 Wireless Controller, LED indicator lights scroll up and down, the controller can be connected.
 - Plug 2.4 GHz receiver into PC's USB port.
 - When 2.4 GHz receiver indicator lights up and LED1+LED4 of GameSir T4 Wireless Controller stay on, Xinput Mode is connected successfully. GameSir T4 Wireless Controller can be used normally.
- * Hold Home button for 5 seconds, GameSir T4 Wireless Controller can switch between Xinput Mode and Dinput Mode.

Xinput Mode: LED1+LED4 indicators stay on

Dinput Mode: LED1+LED3 indicators stay on.

Connect to PC via Type-C charging cable (Xinput Mode)

- Connect GameSir T4 Wireless Controller to PC's USB port via Type-C charging cable.
 - When LED1+LED4 of GameSir T4 Wireless Controller stay on, Xinput Mode is connected successfully.
 - The corresponding driver will be automatically installed on PC. GameSir T4 Wireless Controller can be used normally.
- * Hold Home button for 5 seconds, GameSir T4 Wireless Controller can switch between Xinput Mode and Dinput Mode.

Xinput Mode: LED1+LED4 indicators stay on

Dinput Mode: LED1+LED3 indicators stay on.




(Dinput Mode)



(Xinput Mode)

CONFIGURABLE M BUTTONS



Default Key layout

- Hold M1 then START or BACK, the backlight loop turns red and blue simultaneously to be set up.
- Hold the keys you want to combine.
- Press M1 again, the red backlight loop turns off. Combination is successfully set.
- These keys can be set up as combination buttons:
A, B, X, Y, L1, L2, L3, R1, R2, R3.
They can be freely combined, either combination keys or single button.
- M2, M3, M4 have the same settings as M1. This function can be set up only when the controller is successfully connected.

TURBO FUNCTION

- Press the key where you want to set turbo function, press TURBO key simultaneously, then back light turns into red and Turbo function is successfully set.
 - Press the key that is successfully set for Turbo function, press TURBO key simultaneously, then back light turns into red and Turbo function is successfully canceled.
- * The following buttons can be used to set for Turbo function:
A, B, X, Y, LB, RB, LT, RT.

AUTOMATIC POWER OFF

When GameSir T4 Wireless Controller is connected, it will automatically power off within 180 seconds under no operation.

When GameSir T4 Wireless Controller is disconnected, it will automatically power off within 30 seconds under no operation.

CHARGING

It takes 1.5 to 2 hours to full charge GameSir T4 Wireless Controller.

The charging indicator light keeps steady red during charging.

When fully charged, the charging indicator light goes off. Please unplug the Type-C charging cable.

LIGHTING ADJUSTMENT AND MOTOR VIBRATION INTENSITY ADJUSTMENT

Lighting adjustment:

Hold LT, RT, R3 simultaneously then press up or down of D-pad to adjust lighting. The lowest level is light off among 5 levels of lighting.

ABXY backlight adjustment:

Hold LB+RB for 5 seconds to switch backlight on/off.

Motor vibration intensity adjustment:

Hold Turbo then press up or down of D-pad to adjust vibration. The lowest level is vibration off among 5 levels of vibration.

LOW BATTERY ALERT

GameSir T4 Wireless Controller shows low power condition (less than 10%) when:

1. Battery voltage is less than 3.5V;
2. LED indicator light flashes;
3. Vibration is off.

RESET

Stick a slender pin into the Reset button on the back of GameSir T4 Wireless Controller to reset. The controller will turn off and reboot.



GameSir T4 コントローラー

取扱説明書



GameSir Facebook: <https://www.facebook.com/myGamesir>

Twitter: <https://twitter.com/mygamesir>

Customer Service: cs@gamesir.hk

このたびは、弊社製品を買上げいただき誠にありがとうございます。
ご使用になる前に、この取扱説明書をよくお読みのうえ、本品を安全にご使用ください。
お読みになったあとは、いつでも見られるように、大切に保管してください。

ご注意:保護者の方へ必ずお読みください。

- 小さいな部品がありますので3歳未満のお子様には絶対に与えないでください。
 - 乳幼児の手の届くところに置かないでください。万一飲み込んだ場合は、すぐに医師に相談してください。
 - 火気のある場所では絶対に使用しないでください。
 - 長時間直射日光当てたり、高温となる場所に置かないでください。
 - 本品を湿気やホコリの多いところに置かないでください。
 - 本品に物を当てたり、落下させるような強い衝撃を与えないでください。
 - 故障の原因になりますので、USB端子を直接手で触ないでください。
 - ケーブル部を強く曲げたり引っ張ったりしないでください。
 - お手入れの際には、乾いた柔らかい布を使用してください。
 - ペンジン、シンナーなどの薬品は使用しないでください。
 - 分解や修理、改造は絶対にしないでください。
 - 本来の目的以外には使用しないでください。本来の目的以外に使用した場合の事故や損害に対し、弊社は一切その責任を負いません。
 - 光学式ライトの光を直接見ないでください。強い光より、目を痛める可能性があります。
- * 品質上の問題または提案がある場合に販売元またはアフターサービス担当者に連絡してください。

製品概要

GameSir T4 コントローラーは、e-スポーツゲーム体験を強化するように設計されており、有線接続と2.4GHz低遅延伝送無線接続を介して、Windows7以降のデバイスと互換性が高いです。手触りが良いLB & RB ボタン及びシリコンアンチスキッド3Dジョイスティックと敏感なトリガーを備えています。背面に設定可能なM1-M4ボタンが装着しており、カスタマイズを通してマクロボタンになることが可能です。デュアルモーターが内蔵しており、強力なバイブレーションをもたらします。ゲームを操作するテンションも高めるようになります。本体は半透明で設計され、右側のABXYボタンもジョイスティックもカラフルなLEDライティングを付けています。

パッケージ内容

GameSir T4 コントローラー

Type-C充電ケーブル

2.4GHz Dongle

GameSir T4 コントローラー 取扱説明書

システム要件

Windows7以降

ユーザー登録


<https://gamesir.hk/>にてGameSir IDを作成して、ご購入の製品を登録すると、当製品の品質保証の状態に関するリアルタイム情報と、GameSir会員専用のメリットを得ることができます。

登録による特典


12カ月のメーカー限定保証 (コントローラー本体のみ)

<https://gamesir.hk/>でのマニュアルの閲覧と無料オンラインテクニカルサポート (英語/日本語対応)

各部の名称

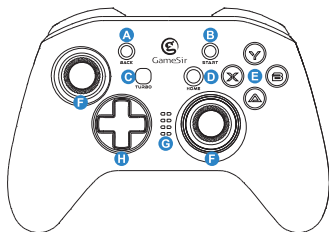

- A BACK ボタン B START ボタン C TURBO ボタン D HOME ボタン
E A/B/X/Y ボタン F ジョイスティック G LEDインジケータライト H 方向キー

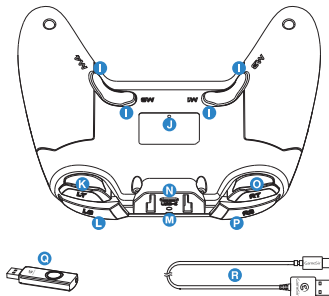

- I カスタマイズボタン(M1/M2/M3/M4) J Reset ボタン K LT ボタン
L LB ボタン M 充電インジケータライト N USB端子 O RT ボタン
P RB ボタン Q 2.4GHz Dongle R Type-C充電ケーブル

機能説明

2.4GHzドングルでPCへの接続ステップ (Xinputモード)


- 2.4GHzドングルをPCのUSBポートに差し込んでください。2.4GHzドングルのライトは点滅します。
 - GameSir T4 コントローラーのHomeボタンを押してゲームパッドを起動してください。LEDインジケータライトが交互に点滅します。
 - 2.4GHzドングルのライトとGameSir T4 コントローラーのLEDインジケータライト(LED1+LED4)が点灯になりますと、接続成功です。
 - PCは自動的に対応するドライバをダウンロードしてインストールします。
 - ゲームを楽しみましょう。
- * HOMEボタンを5秒押しと、GameSir T4 コントローラーはXinputモードとDinputモードを切り替えることができます。LED1 + LED4インジケータライトが点灯する場合はXinputモードになり、LED1 + LED3インジケータライトが点灯する場合はDinputモードになります。

Type-CケーブルでPCへの接続ステップ (Xinputモード)

- Type-CケーブルをPCのUSBポートとGameSir T4 コントローラーのUSB端子に差し込んでください。
 - GameSir T4 コントローラーのHomeボタンを押してゲームパッドを起動してください。
 - GameSir T4 コントローラーのLEDインジケータライト(LED1+LED4)を点灯になりますと、接続成功です。
 - PCは自動的に対応するドライバをダウンロードしてインストールします。
 - ゲームを楽しみましょう。
- * HOMEボタンを5秒押しと、GameSir T4 コントローラーはXinputモードとDinputモードを切り替えることができます。LED1 + LED4インジケータライトが点灯する場合はXinputモードになり、LED1 + LED3インジケータライトが点灯する場合はDinputモードになります。



カスタマイズMボタンの設置/変更

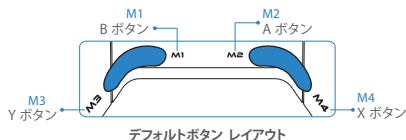

- GameSir T4 コントローラーが接続状態で、いずれかのMボタンを押してから「STARTボタン/BACKボタン」を押すと、バックライトループが同時にレッドとブルーで点灯になります。マクロ設定モードに入ります。
 - カスタマイズさせたいボタンを押します。(例えば、LBボタンを押してからR3ボタンを押す)
 - もう一度Mボタンを押すと、レッドのバックライトループがオフになり、Mボタンのカスタマイズ設定に成功しました。
- * (Mボタン+BACKボタンを押すと、カスタム設定に入り、LBボタンとR3ボタンの機能が同時に有効になる。Mボタン+STARTボタンを押すと、カスタム設定に入り、押す順に従って、LBボタンとR3ボタンが先後に有効になる。)
- 下記のボタンはマクロボタンとして設定できます。
A, B, X, Y, L1, L2, L3, R1, R2, R3, 方向キー

連射機能

TURBOボタンを押しながら連射させたいボタンを押すと連射になります。(バックライトループはレッドになります。)

連射させたボタンを押しながらTURBOボタンを押すと、連射機能を解除します。(バックライトループはブルーになります。)

シャットダウン

ホームボタンを2秒長押しするとコントローラーがオフになり、すべてのライトが消灯します。

自動シャットダウン

GameSir T4 コントローラーが接続済みの状態で180秒以上操作されない場合は、自動的にシャットダウンします。

GameSir T4 コントローラーが接続なしの状態（接続待ち）で30秒以上接続されない場合は、自動的にシャットダウンします。

充電

充電時間は1.5〜2時間です、充電中に充電インジケータライトはレッドで点灯します。

充電完了（100%充電済み）に充電インジケータライトは消滅します。

充電完了後、充電線ケーブルを抜いてください。

バッテリー残量確認/バッテリー残量不足警告

GameSir T4 コントローラーは接続状態で、バッテリー残量が10%に下回る場合、LEDインジケータライトが点滅し、モーター振動機能が自動的にオフになります。

バッテリー残量が5%に下回る場合は、過電圧保護モードに入り、コントローラーが自動的にシャットダウンします。

調節/ボタンの消灯

LT+RT+R3を同時に押しながら、方向キーのUp/Down ボタンを押すとボタンライトの明るさを調節できます。

LB + RBボタンを5秒押すと、ボタンライトをオン/オフに切り替えます。

モーター振動の強さの調節

Turboボタンを5秒押しながら、方向キーのUp/Down ボタンを押すとモーター振動の強さを調節できます。

リセット(Reset)

GameSir T4 コントローラーの裏面の穴に針を差し込んで押すと、コントローラーがオフになり、その後再起動します。