



GameSir • Gaming is Winning.™

GameSir i3

Gaming Case

© 2019 GameSir Inc. All rights reserved.
Product may vary slightly from those pictures.

User Manual ►



POWER UP YOUR GAMESIR DEVICE



<https://gamesir.hk/pages/g-crux>
(GameSir G-Crux)

 Please Note: Fully charge GameSir i3 before the first use.

PACKAGE CONTENTS

GameSir i3 Gaming Case
Type-C Cable
User Manual

SYSTEM REQUIREMENTS

iOS 11 or later

COMPATIBLE MOBILE PHONE

iPhone 6 Plus / 7 Plus / 8 Plus / X / XS / XS Max / XR


REGISTRATION

Register your GameSir ID online at <https://gamesir.hk/> to get real-time information on your product's warranty status and a series of exclusive benefits from GameSir.

YOUR BENEFITS


- * 12-month replacement of the same model from the date you received it.
 - * Contact us for free online technical support
- Website: <https://gamesir.hk>
E-mail: cs@gamesir.hk
Hotline: +1-888-937-1733 (USA & Canada)
Service Hours: Sat.-Sun. 9:00 AM-6:00 PM PST
Mon.-Wed. 6:00 AM-6:00 PM PST
Thur.-Fri. 6:00 AM-3:00 PM PST

DEVICE LAYOUT

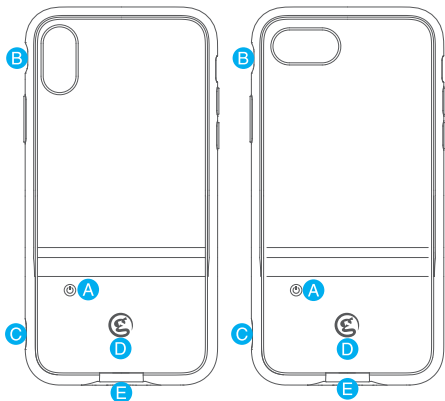

* For iPhone X / XS / XS Max / XR

* For iPhone 6 Plus / 7 Plus / 8 Plus



A Power Button

C R1 Touch Button

E Type-C Port


B L1 Touch Button (Turbo)

D Logo Indicator Light

F Type-C Cable

INSTALLATION

In order to protect the components of the touch buttons, when installing GameSir i3, please install from the front right side. When removing GameSir i3, peel off from the front left side.

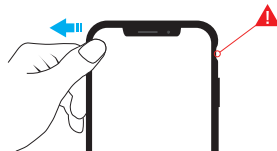




TURN ON / OFF




Turn on: Press the power button  for 2 seconds.

Turn off: Press the power button  for 2 seconds.

CHARGE THE DEVICE




- When GameSir i3 is in low battery state, the red logo indicator light  will flash quickly.
- When GameSir i3 is being charged, the red logo indicator light  will flash slowly.
- When GameSir i3 is fully charged, the red logo indicator light  will keep lit.



TURBO FUNCTION

When GameSir i3 is turned on, double press the power button  to activate TURBO function, then the green logo indicator light  will keep lit. You can set the number of times and location of TURBO function in GameSir G-Crux app. Similarly, double press the power button  once again, the TURBO function will be canceled.

* Please Note: The L1 touch button has TURBO function by default at the factory. If you cancel the TURBO function of L1 touch button in GameSir G-Crux app, TURBO function will not be activated by double-clicking the power button. You need to restart the TURBO function in GameSir G-Crux app.

CONNECTION

- Press the power button  for 1 second, then the blue logo indicator light  will flash.
- Turn on Bluetooth on your iPhone and connect to GameSir i3 via Bluetooth. Then the blue logo indicator light  will keep lit.
- In PUBG Mobile, the L1 touch button defaults to aiming and the R1 touch button defaults to shooting. Enter PUBG Mobile settings interface and reset the button mapping to the default configuration.
- For other games, you need to download the GameSir G-Crux app by scanning the QR code below or searching in the App Store.
- Open GameSir G-Crux app, click "My key", then click the "Connect" button, the "GameSir i3 is connected" prompt will pop up.
- Click "Default configuration", you can select a game configuration and click the "Download" icon.
- Click "My configuration" and you will find the game configuration you just downloaded. Click the configuration.
- You can start customizing the button mapping. After completing the custom configuration, please remember to click the "Save to Peripheral" button.

* Please Note: If you want to connect GameSir i3 to other iPhone devices, you need to disconnect GameSir i3 from your previous iPhone device first. The way is when GameSir i3 is connected to your previous iPhone device via Bluetooth, touch the L1 button and simultaneously press the power button  for 2 seconds, then the blue logo indicator light  will flash. The disconnection is complete.



Download the GameSir G-Crux App



GameSir i3 Tutorial

日本語

 **注意**：最初に使用する前に、GameSir i3ゲーミングケースを完全に充電してください。

パッケージ内容

GameSir i3ゲーミングケース
Type-C USBケーブル
取扱説明書

システム要件

iOS 11 (以降)

対応デバイス

iPhone 6 Plus / 7 Plus / 8 Plus / X / XS / XS Max / XR


ユーザー登録

<https://gamesir.hk/>にてGameSir IDを作成して、ご購入の製品を登録すると、当製品の品質保証の状態に関するリアルタイム情報と、GameSir会員専用のメリットを得ることができます。


登録による特典

12カ月のメーカー限定保証
<https://gamesir.hk/>でのマニュアルの閲覧と無料オンラインテクニカルサポート (英語/日本語対応)

各部の名称

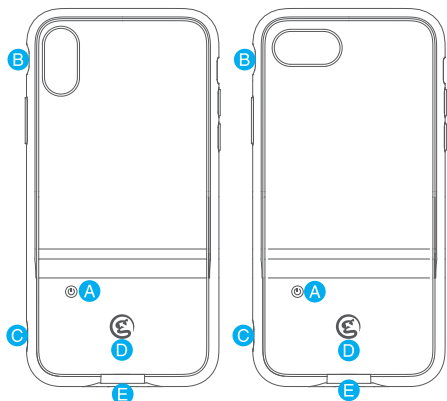

* For iPhone X / XS / XS Max / XR * For iPhone 6 Plus / 7 Plus / 8 Plus

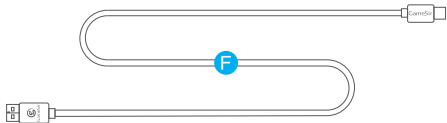

- A** 電源スイッチ
- C** R1タッチボタン
- E** Type-C充電ポート

- B** L1タッチボタン
- D** LOGOライト
- F** Type-C USBケーブル

機能説明

接続

- a. デバイスのBluetoothをオンにしてください。「設定>Bluetooth」。
 - b. 電源スイッチ **A** を2秒押しして、GameSir i3をオンにします。LOGOライト **D** がブルーに点滅すると、GameSir i3は接続待ちの状態に入ります。
 - c. 「設定>Bluetooth」で「GameSir i3」を検索して、デバイスに接続します。
 - d. LOGOライト **D** がブルーに点灯すると、接続成功です。
- ご注意: 同じデバイスに再び接続する場合は、GameSir i3をオンにするだけで、接続できます。

G-Cruxアプリのご利用(公式配置の設定方法)

- a. GameSir G-Cruxアプリを開き、設定管理>「すぐ接続」をクリックします。
- b. デフォルト設定をクリックして、プレイしたいゲームの公式配置をインストールします。
- c. 個人設定>インストールした公式配置をクリックすると、ボタン設定のインターフェースに入ります。
- d. 「セーブ」をクリックすると、対応ゲームの公式配置を設定完了です。
- e. 「戻る」をクリックすると、個人設定に戻ります。
- f. 対応ゲームの配置は「使用中」の状態になりますと、ゲームではGameSir i3を使用できます。




<https://gamesir.hk/pages/g-crux>
(GameSir G-Crux)



GameSir i3の使い方

* 右側が重要なコンポーネントを装着するので、ケースを外す場合は、左側から外してください。

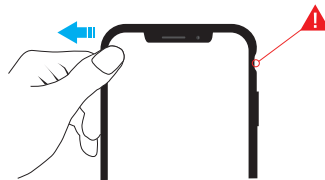

オフ

- a. オン状態で電源スイッチ  を2秒押しして、GameSir i3をオフにします。LOGOライト  が消えます。

充電


バッテリー残量が15%に下回る場合は、LOGOライト  がレッドに点滅します。

バッテリー残量が5%に下回る場合、自動的に低電力保護状態に入って自動的にシャットダウンします。

充電中ではLOGOライト  がゆっくりとレッドに点滅します。


充電完了(100%充電済み)の場合、LOGOライト  がレッドに点灯します。

リセット

GameSir i3をオンにしたまま、L1タッチボタン+電源スイッチを2秒押しして、LOGOライト  がブルーに点滅します。リセット成功です。

*新デバイスと接続する場合は、是非リセットしてください。

Turbo機能

GameSir i3をオンにする場合には、電源スイッチを2回連続押しすと、LOGOライト  がグリーンに点灯します。TURBO機能を有効になります。GameSir G-Cruxアプリで回数を設定できます。もう一度電源スイッチを2回連続押しすと、TURBO機能がオフになります。

*ご注意:初期設定ではL1ボタンはTURBO機能を搭載していますが、GameSir G-CruxアプリでL1ボタンのTURBO機能をキャンセルしたら、電源ボタンをダブルクリックしてもTURBO機能を有効になりません。

繁體中文

 **請注意:** 首次使用前, 請對GameSir i3遊戲手機殼充滿電。

包裝內容

手機殼

說明書

Type-C 數據線


系統要求

iOS 11 或更高系統

兼容手機


iPhone 6 Plus / 7 Plus / 8 Plus / X / XS / XS Max / XR

設備佈局

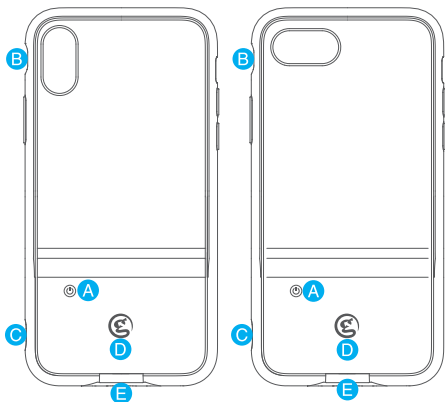

* For iPhone X / XS / XS Max / XR

* For iPhone 6 Plus / 7 Plus / 8 Plus

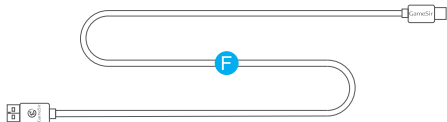

A 開關按鍵

B L1 觸摸按鍵

C R1 觸摸按鍵

D Logo 指示燈

E Type-C 充電口

F Type-C 數據線

功能指示

開機搜索：藍色燈快閃

連接成功：藍色燈常亮


連發狀態（開啟）：綠色燈常亮

強制解綁：在藍牙已連接狀態，觸摸“L1”+“開關”鍵2秒後放手，藍燈快閃 ，即解綁成功。

低電提示：紅燈快閃

充電提示：紅燈慢閃

充滿提示：紅燈常亮

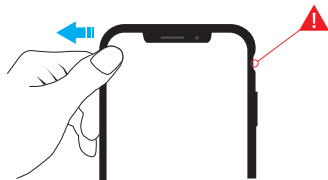

*需要取下殼子時，請從正面左側剝離，右側內有重要元件

一鍵連發

開機時，雙擊開關鍵。單發槍可實現連發效果，開啟後指示燈綠色常亮 ，再次雙擊可關閉。

*出廠時，L1 虛擬按鍵自帶連發屬性，若使用APP取消L1 虛擬按鍵的連發屬性，此時雙擊開關鍵，將無法啟動連發功能。

上手教程

- 手機殼開機狀態下，按開關鍵 2秒，藍燈閃爍 。開機狀態下，按開關鍵2秒開機。
- 打開手機藍牙列表，搜索“GameSir-i3”藍牙設備後點擊鏈接，成功連接後指示燈藍燈常亮 。
- 在“PUBG Mobile”遊戲中，R1按鍵默認為“瞄準”，L1按鍵默認為“射擊”。如果有調整過遊戲內“瞄準”“射擊”的虛擬按鍵位置，需要將遊戲按鍵佈局恢復為默認狀態。

按鍵自定義教程

- a、其他遊戲按鍵自定義需掃描下方二維碼或在APP Store下載 G-Crux app。
- b、啟動“G-Crux”>選擇“我的鍵位”>“官方配置”>找到對應遊戲的配置並點擊右側下載符號。
- c、設置鍵位：點擊“我的配置”>找到添加的遊戲配置並點擊進入鍵位編輯界面拖住按鍵到指定位置，將自動保存生效，新增/修改鍵位之後，點擊“保存到外設”即可保存到手機殼上。



掃描下載G-Crux app

復位

長按開關鍵 10秒，i3將自動關機並重啟。

▲ NOTICE: Please read this Precautions carefully.

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

▲ ご注意:保護者の方へ必ずお読みください。

- 小さいな部品がありますので3歳未満のお子様には絶対に与えないでください。
 - 乳幼児の手の届くところに置かないでください。万一飲み込んだ場合は、すぐに医師に相談してください。
 - 火気のある場所では絶対に使用しないでください。
 - 長時間直射日光当てたり、高温となる場所に置かないでください。
 - 本品を湿気やホコリの多いところに置かないでください。
 - 本品に物を当てたり、落下させるような強い衝撃を与えないでください。
 - 故障の原因になりますので、USB端子を直接手で触らないでください。
 - ケーブル部を強く曲げたり引っ張ったりしないでください。
 - お手入れの際には、乾いた柔らかい布を使用してください。
 - ペンジン、シンナーなどの薬品は使用しないでください。
 - 分解や修理、改造は絶対にしないでください。
 - 本来の目的以外には使用しないでください。本来の目的以外に使用した場合の事故や損害に対し、弊社は一切その責任を負いません。
 - 光学式ライトの光を直接見ないでください。強い光より、目を痛める可能性があります。
- * 品質上の問題または提案がある場合に販売元またはアフターサービス担当者に連絡してください。

▲ 注意事項

1. 若商品有質量問題，請首先聯係我們的客服進行登記。
聯繫方式：
QQ：800082537
電話：400-8828035（時間：9：00-18：00）
官網：www.xiaoji.com
出品：廣州小雞快跑網絡科技有限公司
地址：廣州市天河區建業路華翠街68號301A-1
2. 如需退、換商品，請確保商品完好無損（包括商品外包裝、附贈品、說明書、售後卡、標籤等），不影響二次銷售。
3. 如要保修商品，請務必完整填寫用戶姓名、聯繫電話、聯繫地址，正確填選售後要求與詳細說明售後原因，將售後卡隨貨寄回（如不完整填寫保修卡信息，恕無法提供任何的售後服務。）

保修卡

(售后政策：非人为损坏，3个月包换、1年保修)

用戶姓名

聯繫電話

聯繫地址

售後要求

退 換 保修

售後原因

訂單編號

(注：非小雞官網途徑購買的產品，售後問題請直接與購買商家聯繫)

