MARATHON

**100-Hour Keypad Digital Countdown Timer
with Interval Countdown, Count-up and Clock Feature
Model TI030018 Series**
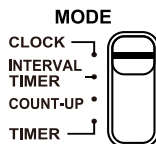
USER MANUAL

BUZZER SOUND VOLUME CONTROL
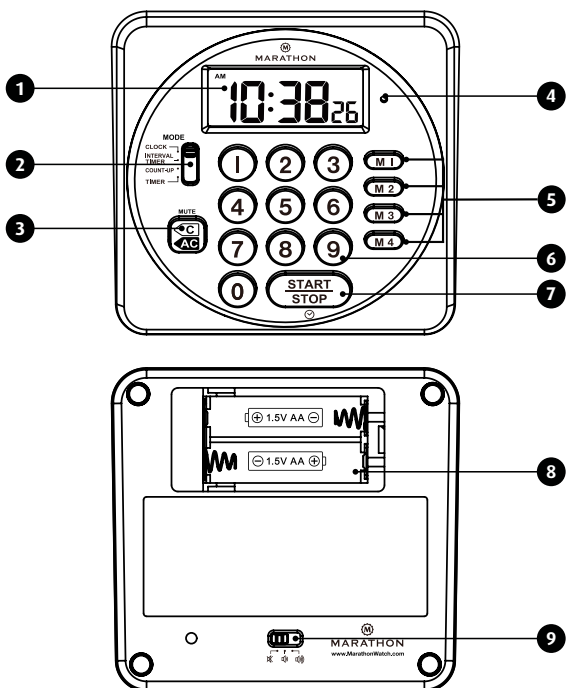
The selector switch located at the bottom of the unit can be used to select OFF/LOW/HIGH volume level.

Sound level selector switch			🔇	Off
			🔉	Lo
			🔊	Hi

TIMER MODE

Slide the **MODE** selector switch to the **TIMER** position.

TO USE THE TIMER

1. Set the timer using **[⓪ to ⑨]** keys.
2. Press the (START STOP) key to start or pause the timer countdown. Once the countdown completes, the alarm will beep and the timer will start to count up automatically; the icon **TIME'S UP** will appear on the LCD and the LED indicator will flash.
3. When countdown is stopped or paused, press the 🔙 key to reset the display to zero.

MEMORIES

Up to four memories are provided to store your timer setting, using the [M1 to M4] keys

1. Set the timer using **[⓪ to ⑨]** keys.
2. Press and hold the M1 key for two seconds to save the time currently displayed in M1. Repeat the process to set the other memories.
3. To recall the preset times, simply press the desired memory button.

COUNT UP MODE

Slide the **MODE** selector switch to the **COUNT UP** position.

1. Press the (START STOP) key to start or pause the count up.
2. When the count up is stopped or paused, press the 🔙 key to reset the display to zero.

SECTION 1

FEATURES

MODE SELECTIONS

The unit has four function modes.

• CLOCK mode
• INTERVAL TIMER mode
• COUNT UP mode
• TIMER mode

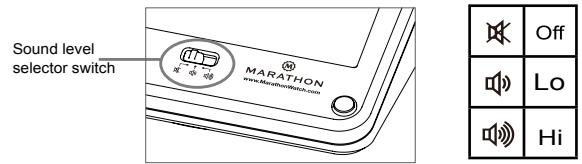**MODE**
CLOCK
INTERVAL TIMER
COUNT-UP
TIMER

SECTION 2

UNIT APPEARANCE

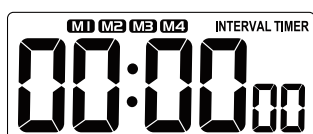| ❶	LCD	❻	0 to 9 Keys
❷	**MODE** Selector switch	❼	(START STOP) Key
❸	Key	❽	Battery compartment
❹	LED indicator	❾	Buzzer Sound level selector switch
❺	M1 to M4 timer memory keys		

SECTION 5
INTERVAL TIMER MODE

The interval timer allows the times stored in the four memories to count down, one after the other, sequentially.

Slide the **MODE** switch to the **INTERVAL TIMER** position.

TO SET THE TIMER

1. Set the timer using the [⓪ to ⑨] keys, then press and hold the (M1) key for two seconds to save the currently displayed value in the (M1) memory.
2. Repeat the above process to set the other timers for (M2) to (M4).

TO USE THE TIMER

1. Press the (START STOP) key to start the timer. The timer will begin counting down from (M1) to (M4) M4 sequentially. At the end of each interval, the timer will beep twice and the next interval will begin. When it reaches the end of (M4), the timer will beep for 60 seconds.
2. To use the auto-loop function, press and hold the (START STOP) key for two seconds to activate the function. The ⇄ icon will appear on the LCD.
3. When the countdown is stopped or paused, press the 🔙 key to clear the display.

NOTE:
A minimum of one memory interval must be set in order to operate the interval timer. For example, set (M1) to 12:34 and (M2) to (M4) to 00:00.

SECTION 6
CLOCK MODE AND SETTING

1. Press and hold the (START STOP) key for two seconds to enter the clock setting mode.
2. Press the ⓪ key to select the 12-hour or the 24-hour format, then press the (START STOP) key to continue.
3. If the 12-hour format is selected, press the ⓪ key to select AM or PM, then press the (START STOP) key to continue.
4. Press the ⓪ to ⑨ keys to set the hour and minutes. For example, to set the time at 9:30, press ⓪, ⑨, ③ and ⓪.

5. Press the (START STOP) key to confirm the setting and return to CLOCK mode.

NOTE:
— To cancel the setting, press and hold the (START STOP) key for two seconds.
— The unit will also edit the setting mode automatically in 60 seconds.

SECTION 7
BATTERY REPLACEMENT

If there is no display on the LCD or if the display becomes dim, remove the battery door located under the unit, then replace the old batteries with two new AA batteries, inserting them according to the polarity marks.

SECTION 8
PRECAUTIONS

— Do not subject the unit to excessive force or shock.
— Avoid contact with any corrosive materials.
— Do not dispose of this unit in a fire as it may explode.
— Do not recharge the batteries and do not dispose of them in a fire.
— Attention! Please dispose of used batteries and main unit in an ecologically safe manner.
— Technical specifications and user manual contents for this product are subject to change without notice.

SECTION 9
SPECIFICATIONS

Operating temperature range:	-5 °C to 50 °C (23 °F to 140 °F)
Main power:	AA batteries x 2
Max timer setting value:	99 hr, 99 min, 99 sec
Max count up:	99 hr, 59 min, 59 sec
Dimension:	116 mm (W) x 108 mm (L) x 55.5 mm (H)