


1 0 0 0 1 0 0 1 0 1

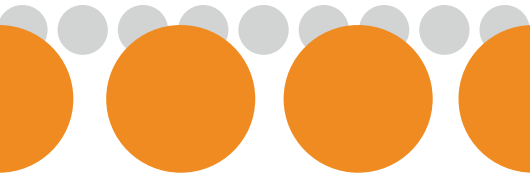

1 0 0 0 1 0 0 1 0 1

Day-of-Week

曜日

LED x 10 Hour/Month

LEDx10時間/月

LED x 1 Hour/Month


LEDx1時間/月

LED x 10 Min/Day

LEDx10分/日

LED x 1 Min/Day

LEDx1分/日

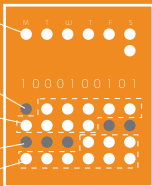

◀ B

◀ A

Key A - Time Telling

Key B - Set function

キーA 時間表示

キーB 時間設定

Remarks :

- To skip the flashing pattern after pressing the Key A, press the Key A again.




How to set the time :

- Press Key B, the Hour LEDs will blink; press Key A to increase the Hours;
- Press Key B to confirm and move to Minute LEDs; press Key A to change;
- Press Key B to confirm and to select AM/PM; press Key A to toggle,



- Press Key B to confirm and move to Month LEDs; press Key A to change;
- Press Key B to confirm and move to Day-of-Month LEDs; press Key A to increase the LEDs;
- Press Key B to confirm and move to Day-of-Week LEDs; press Key A to increase the LEDs;
- Press Key B to confirm and move to Light-Up-Function; press Key A to toggle between "on" or "OFF" (Off), if turned on, the watch will have light up function between 6:00 pm till 12:00am midnight (once every 15 min).



- Press Key B to confirm and exit setting.

スタートフラッシュを飛ばすにはキーAを2回押します。




◀ A

時間設定：

- キーBを押し時間LEDを点滅させ、キーA で時間を設定します。
- キーBを押し設定を確定すると分LEDが点滅します。キーAで分設定を行います。
- キーBで確定、AM/PM設定モードに移ります。キーAでAMかPMを選択します。



- キーBで確定、月設定モードに移ります。キーAで月設定を行います。
- キーBで確定、日付設定モードに移ります。キーAで日付設定を行います。
- キーBで確定、曜日設定モードに移ります。キーAで曜日設定を行います。
- キーBで確定、ライトアップ機能の設定に移ります。キーAでオン“on”又はオフ“OFF”を選択します。(ライトアップ機能がオンに設定されている場合、時計は午後6時から午前12時の間15分間隔で光ります。)



- キーBで確定、時間設定を終了します。

Battery replacement

- One Lithium battery CR2032 provides the power to operate the lights
- If you notice your watch's light is getting dimmer, this is an indication that your battery needs to be replaced
- Do not wait until your watch stops functioning
- Weak or dead battery left in your product for an extended time may damage the movement
- To avoid the possibility of damaging your product, we recommend that you send it to watch specialist to have the battery replaced and the case back properly sealed

Cautions

- Don't press buttons under water nor with excessive moisture on the product surface.
- Avoid long-term exposure to extreme temperature, direct sunlight. This can cause material coloring to fade or discoloration.
- Please avoid rough use or dropping this product. Do not use strong detergent, sprays or chemicals as this will dis-color the case or strap.
- To clean your watch use only soft cloth, moistened lightly.

電池の交換

CR2032を使用しています。

もし少しでも時計の表示が暗くなった場合
すぐに使用を中止し、電池の交換を行ってください。

弱った電池を使い続けると、中の電子部分が
損傷する可能性があります。

電池の交換は専門の時計店等で行うことを
お勧めいたします。

注意

水中や水滴が表面についた状態でボタンを押さないで
ください。

高温、直射日光を避けてください。材質が変化する可能性
があります。

商品を落下させたりしないでください。