




www.ijerph.com

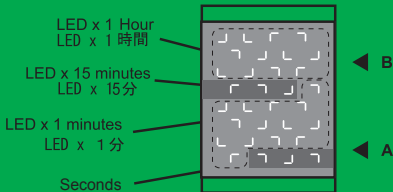

Key A - Time Telling

Key B - Set function

キーA 時間表示

キーB 時間設定

キーA を押し時間を数秒間表示します。

Press Key A will see the time for a few seconds.


Example 1 : 4:35

$$4 \times 1 \text{ hour} \\ = 4 \text{ hour}$$

$$2 \times 15 \text{ min} = 30 \text{ min}$$

$$5 \times 1 \text{ min} = 5 \text{ min}$$

$$30 + 5 \text{ min} = 35 \text{ min}$$

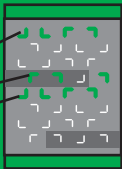


Example 2 : 10:43

$$10 \times 1 \text{ hour} \\ = 10 \text{ hour}$$

$$2 \times 15 \text{ min} = 30 \text{ min}$$

$$13 \times 1 \text{ min} = 13 \text{ min}$$

$$30 + 13 \text{ min} = 43 \text{ min}$$

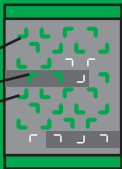

Remarks :

- To skip the flashing pattern after pressing the Key A, press the Key A again.

スタートフラッシュを飛ばすにはキーAを2回押します。



How to set the time :

- Press Key B, the Hour LEDs will blink; press Key A to increase the Hours;
- Press Key B to confirm and move to Minute LEDs; press Key A to increase the LEDs;
- Press Key B to confirm and move to AM/PM selection. Press A to toggle.



toggle between "O" (ON) or "X" (OFF), if turned on, the watch will have light up function between 6:00 pm till 12:00am midnight (once every 15 min).



- Press Key B to confirm and exit.

時間設定：

- キーBを押し時間LEDを点滅させ、キーA で時間を設定します。
- キーBを押し設定を確定すると分LEDが点滅します。キーAで分設定を行います。
- キーBで確定、AM/PM設定モードに移ります。キーAでAMかPMを選択します。



- キーBで確定、ライトアップ機能の設定に移ります。キーAでオン“0”又はオフ“X”を選択します。(ライトアップ機能がオンに設定されている場合、時計は午後6時から午前12時の間15分間隔で光ります。)



- キーBで確定、時間設定を終了します。

Battery replacement

- One Lithium battery CR2032 provides the power to operate the lights
- If you notice your watch's light is getting dimmer, this is an indication that your battery needs to be replaced
- Do not wait until your watch stops functioning
- Weak or dead battery left in your product for an extended time may damage the movement
- To avoid the possibility of damaging your product, we recommend that you send it to watch specialist to have the battery replaced and the case back properly sealed

Cautions

- Don't press buttons under water nor with excessive moisture on the product surface.
- Avoid long-term exposure to extreme temperature, direct sunlight. This can cause material coloring to fade or discoloration.
- Please avoid rough use or dropping this product. Do not use strong detergent, sprays or chemicals as this will dis-color the case or strap.
- To clean your watch use only soft cloth, moistened lightly.

電池の交換

CR2032を使用しています。

もし少しでも時計の表示が暗くなった場合
すぐに使用を中止し、電池の交換を行ってください。

弱った電池を使い続けると、中の電子部分が
損傷する可能性があります。

電池の交換は専門の時計店等で行うことを
お勧めいたします。

注意

水中や水滴が表面についた状態でボタンを押さないで
ください。

高温、直射日光を避けてください。材質が変化する可能性
があります。

商品を落下させたりしないでください。