


KAIIDOKU

INSTRUCTION MANUAL

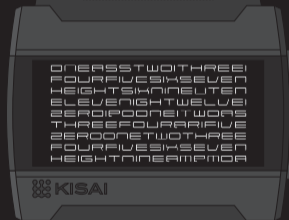

Change the way you think about time




Button A

Button B

1. How to read the time

- This watch uses an LCD “always on” display to show the time.
- You can illuminate the display at night time for a short time with the EL backlight by pressing button A.
- The current time is indicated by the blinking words.

Hours: 1-12



Minutes: groups of 10



Minutes: 1- 9



Other indicators:

AM, PM, Date, Alarm on, Alarm setting



Alarm setting

Alarm on

AM PM Date

Example 1



4:25 PM (all words are lit except the words that display the current time which blink.)

Example 2



7:04 AM Alarm on (all words are lit except the words that display the current time which blink.)

2. How to set the time and date

- Press and hold button B for 3 seconds to enter setting mode.

*Note after 7 seconds of inactivity setting mode will deactivate

I. Setting the hour

- The hour blocks will flash when you are in hour setting mode.
- Press button A to increase the hour as required.
- Hold button A to increase the hours more quickly.
- The AM or PM icon will blink to indicate that you are setting the time in AM or PM.
- Press button B to confirm and move to the minutes.

II. Setting the minutes

- The minute blocks will flash when you are in minute setting mode.
- Press button A to increase the minutes as required.
- Hold button A to increase the minutes more quickly.
- Press button B to confirm and move to date setting mode.

Example:



Time setting mode (minute setting) 11:20 AM

III. Setting the month

- The D icon will be lit to indicate that you are in date setting mode.
- The month blocks will flash when you are in month setting mode.
- Press button A to increase the month as required.
- Hold button A to increase the months more quickly.
- Press button B to confirm and move to the date.

Example:



Date setting mode (month setting) Five = May

IV. Setting the date

- The date blocks will flash when you are in date setting mode.
- Press button A to increase the date as required.
- Hold button A to increase the date more quickly.
- Press button B to confirm and exit setting mode.

3. How to set the alarm

- Press and hold buttons A and B for 3 seconds to enter alarm setting mode.
- The alarm setting icon (AS) indicates that you are in alarm setting mode.

*Note after 7 seconds of inactivity setting mode will deactivate

I. Setting the alarm hour

- The alarm time will be displayed and the hour will be flashing.
- Press button A to increase the hour as required.
- Hold button A to increase the hours more quickly.
- Press button B to confirm and move to the minutes.

Example:



Alarm setting mode (hour setting) 8:00 AM

II. Setting the alarm minutes

- The alarm time will be displayed with the minutes flashing and the alarm setting icon on.
- Press button A to increase the minutes as required.
- Hold button A to increase the minutes more quickly.
- Press button B to confirm and move to the alarm on/off setting.

III. Turning the alarm on or off

- The alarm time will be displayed.
- Press button A to turn the alarm on or off.
- The alarm on (A) icon indicates that the alarm is on.
- Press button B to confirm and exit alarm setting mode.

Example:



Alarm setting mode (on/off setting) 8:15 AM

4. User information

I. Battery

- This watch uses a CR2016 replaceable watch battery.
- Battery lifetime will vary depending on use, but is estimated to last for at least one year.
- To maximize battery life you should limit use of the EL backlight.

II. Warranty

- This watch is covered by a 1 year manufacturers' warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

III. Caution

- This watch is water resistant to 3ATM. Please do not use the watch in the shower, for swimming or for other water related activities.

SPECIFICATIONS

Case Materials	Stainless Steel
Strap Materials	Genuine Leather
Case Dimensions	46 x 34.9 x 10.5 mm
Finish	Brushed and Polished
Maximum Fit Wrist Size	210mm (approx.)
Weight	60g
Display	LCD with EL backlight
Battery	CR2016
Water Resistance	3 ATM

KAIIDOKU

取り扱い説明書



Change the way you think about time



← Button A

← Button B

1. 時刻の読み方

- ・この商品はLCDディスプレイに常時に時刻が表示されます。
- ・Aボタンを押すと数秒間ELバックライトを点灯させることができます。
- ・点滅した単語で現在時刻を表示します。

時: 1-12



分: 10分単位



分: 1-9



その他のインジケーター:
AM, PM, Date, Alarm on, Alarm setting



例 1



4:25 PM (現在時刻の単語のみが点滅表示されます)

例 2



7:04 AM Alarm on (現在時刻の単語と設定された
箇所が点滅表示されます)

2. 時刻と日付の設定

- ・ Bボタンを3秒間押し続けると設定モードになります。
※7秒間何も操作をおこなわないと、設定モードは自動的に終了します。

I. 「時」の設定

- ・ 「時」の設定時は、時間表示のブロックが点滅します。
- ・ Aボタンで1時間ずつ増やすことができます。
- ・ Aボタンを長押しすると連続で時間を増やすことができます。
- ・ AM/PMインジケータは、それぞれの時間帯の設定時に点滅します。
- ・ Bボタンを押すと確定して次の「分」の設定に移動します。

II. 「分」の設定

- ・ 「分」の設定時は、分表示のブロックが点滅します。
- ・ Aボタンで1分ずつ増やすことができます。
- ・ Aボタンを長押しすると連続で分を増やすことができます。
- ・ Bボタンを押すと確定して次の「月」の設定に移動します。

例:



時刻設定 (「分」設定時) 11:20 AM

III. 「月」の設定

- ・ 日付の設定モードでは Dのアイコンが表示されます。
- ・ 「月」の設定時は、月表示のブロックが点滅します。
- ・ Aボタンでひと月ずつ増やすことができます。
- ・ Aボタンを長押しすると連続で月を増やすことができます。
- ・ Bボタンを押すと確定して次の「日」の設定に移動します。

例:



日付設定 (「月」設定時) 5月

IV. 「日」の設定

- ・ 「日」の設定時は、日表示のブロックが点滅します。
- ・ Aボタンで1日ずつ増やすことができます。
- ・ Aボタンを長押しすると連続で日を増やすことができます。
- ・ Bボタンを押すと確定して設定モードは終了します。

3. アラーム時刻の設定

- ・ AボタンとBボタンを3秒間押し続けると設定モードになります。
- ・ アラーム設定モードではアラームセッティングアイコン(AS)が表示されます。
※7秒間何も操作をおこなわないと、設定モードは自動的に終了します。

I. アラーム「時」の設定

- ・ 現在のアラーム時刻が表示され、設定する時間表示のブロックが点滅します。
- ・ Aボタンで1時間ずつ増やすことができます。
- ・ Aボタンを長押しすると連続で時間を増やすことができます。
- ・ AM/PMインジケータは、それぞれの時間帯の設定時に点滅します。
- ・ Bボタンを押すと確定して次の「分」の設定に移動します。

例:



アラーム設定 (「時」設定時) 8:00 AM

II. アラーム「分」の設定

- ・ 現在のアラーム時刻が表示され、設定する分表示のブロックが点滅します。
- ・ Aボタンで1分ずつ増やすことができます。
- ・ Aボタンを長押しすると連続で分を増やすことができます。
- ・ Bボタンを押すと確定して次の「アラームON/OFF」の設定に移動します。

III. アラームON/OFFの設定

- ・ 現在のアラーム時刻が表示されます。
- ・ AボタンでONとOFFの切り替えをおこないます。
- ・ アラームがONの場合はアラームONアイコン(A)が表示されます。
- ・ Bボタンを押すと確定して設定モードは終了します。

例:



アラーム設定 (「ON/OFF」設定時) 8:15 AM

4. インフォメーション

I. バッテリー

- ・本品には交換可能なCR2016リチウムバッテリーが内蔵されています。
- ・バッテリーの寿命は使用状況によって異なりますが、およそ1年間のご使用が可能です。
- ・ELバックライトの使用回数を減らすことで、バッテリーの寿命を長くすることができます。

II. 保証

- ・生産時に生じた不良にのみ1年間の無償修理を保証します。不注意による故障、破損、水没等は保証期間内であっても有償修理となりますので、ご了承ください。

III. ご注意

- ・この商品は3気圧防水(日常生活防水)です。シャワーやスイミングまたは、水を扱う際の使用はお避けください。

商品仕様

ケース素材	ステンレス スチール
ストラップ素材	本革
ケースサイズ	46 x 34.9 x 10.5 mm
仕上げ	ヘアライン・光沢
最大装着リストサイズ	約210mm
重量	60g
ディスプレイ	ELバックライト付LCD
バッテリー	CR2016
防水性能	3気圧(日常生活防水)