




Designed + Made in Japan

DMJ

# KEISAN


## Instruction Manual

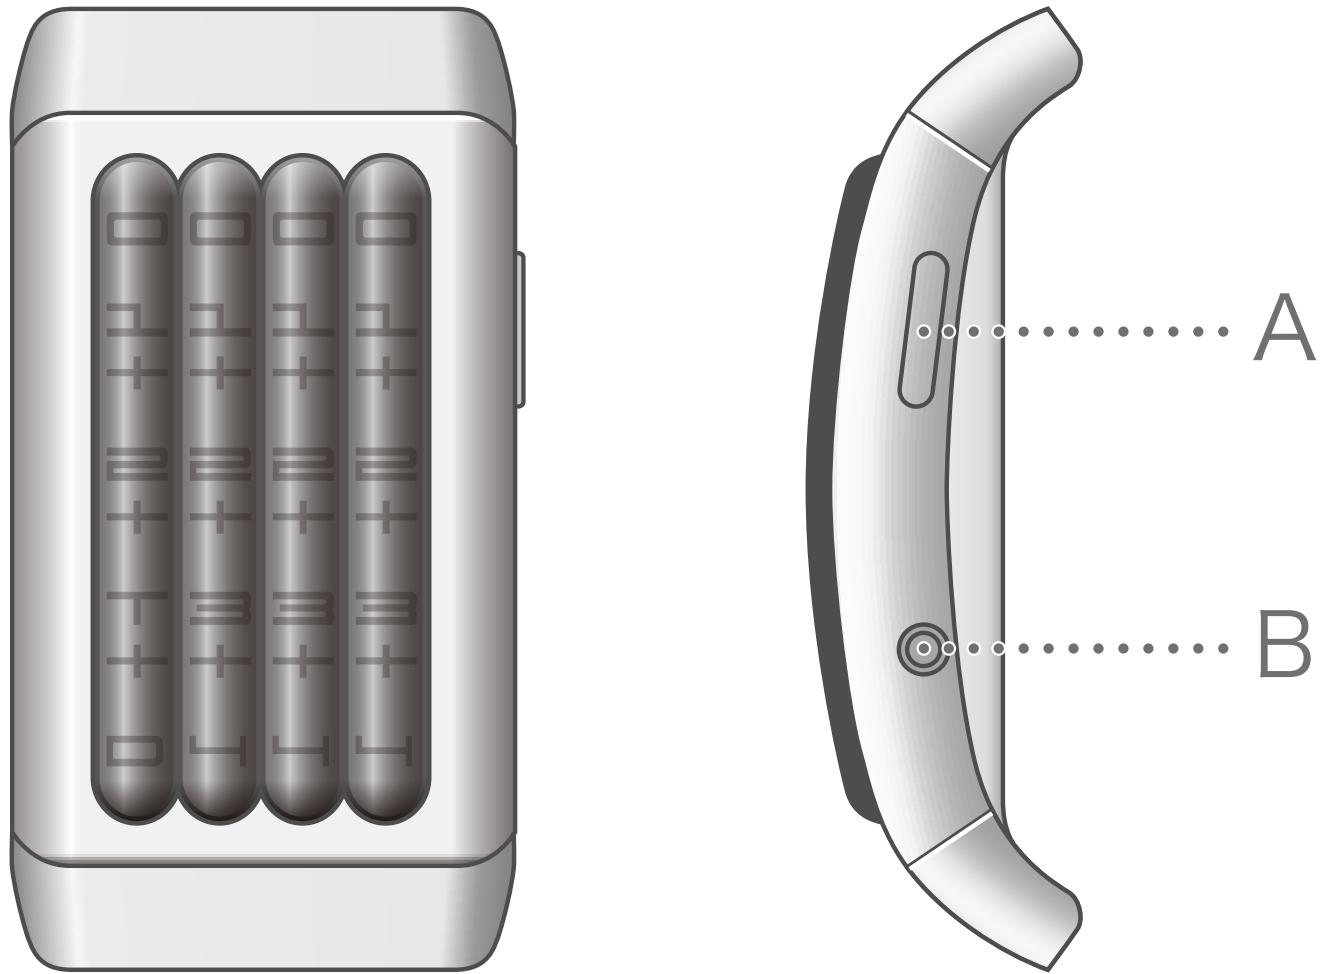

printed in Japan

# 1. How to read the time and date

- Press button A once to display the time.
  - The time and date is displayed in two stages. Before each stage there is an animation.
  - Each vertical line of LEDs shows the digits. The total value of each line represents the time and then the date.
- \*Note you can "press button A between stages to read the time and date more quickly". Time is set in 24h format only.

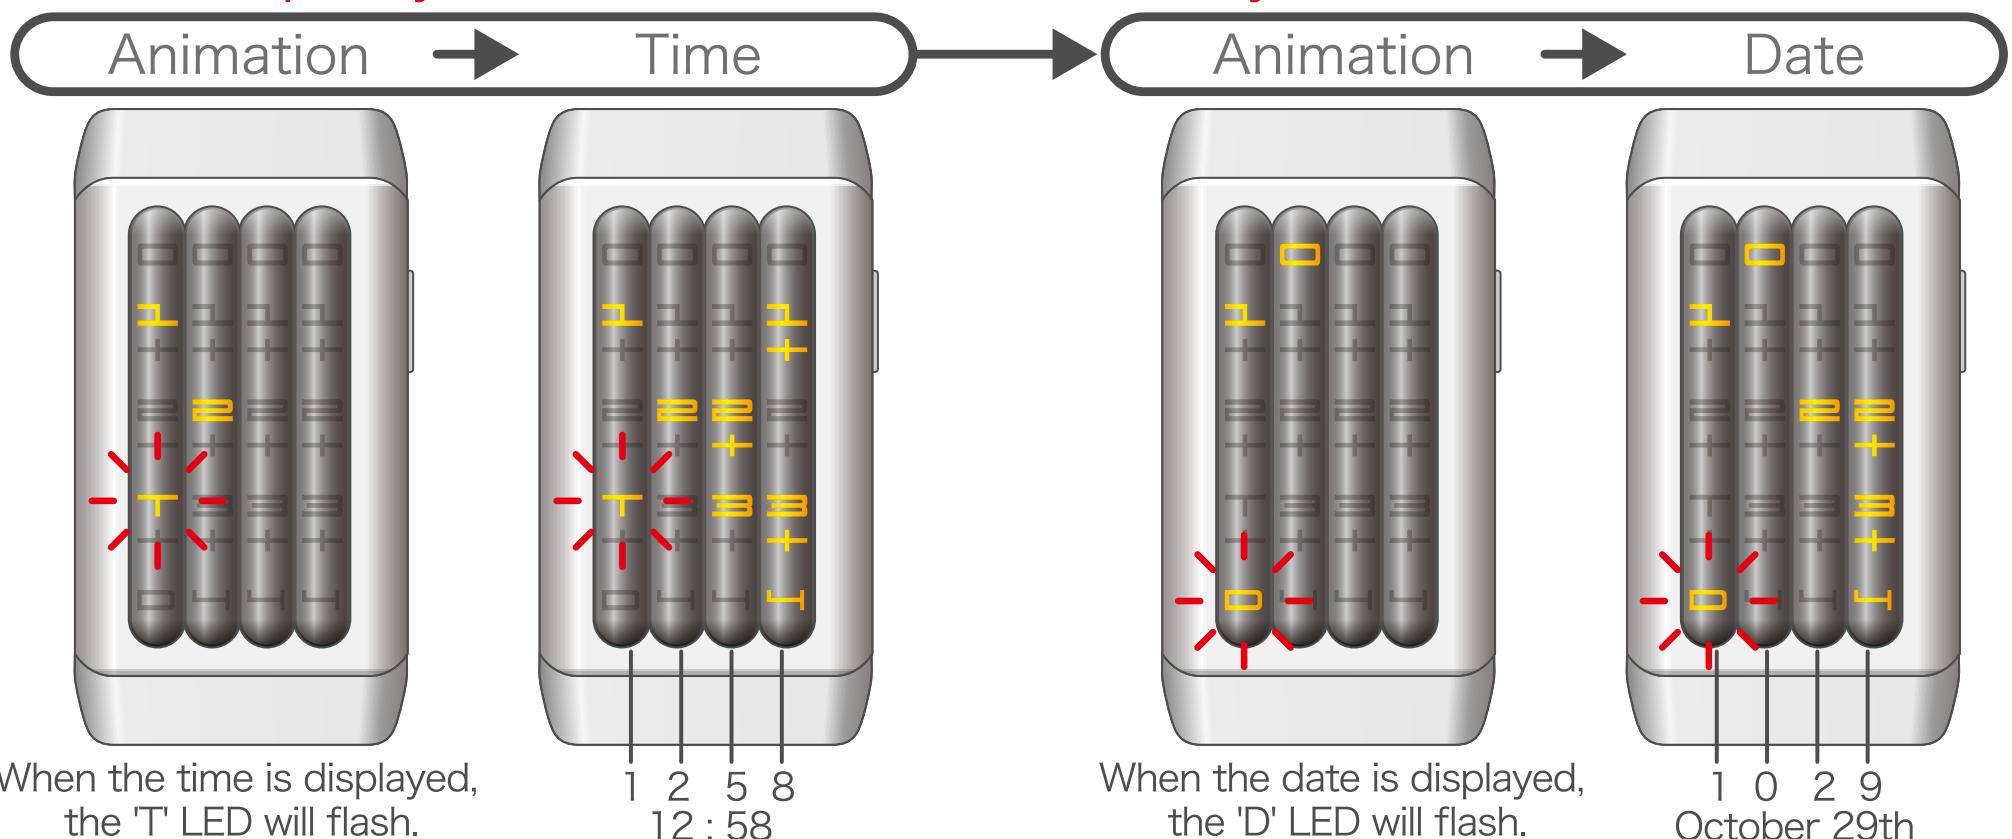


## 2. How to set the time, date, animation and LED brightness

- Each setting mode will be displayed in the sequence shown below.
  - Press button B to go to each setting mode.
- \*Note after 5 seconds of inactivity setting mode will deactivate\*


### 1. Setting the hour

- Press button B once. The T light will flash.
  - Press button A to increase the hour in the first two lines.
  - Press button B to confirm and set the minutes.
- \*Note after 5 seconds of inactivity setting mode will deactivate\*

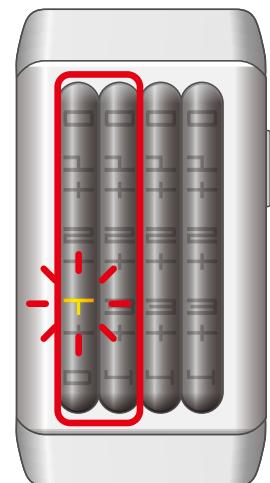


### 2. Setting the minutes

- The T light will continue to flash.
  - Press button A to increase the minutes in the second two lines.
  - Press button B to confirm and set the month.
- \*Note after 5 seconds of inactivity setting mode will deactivate\*

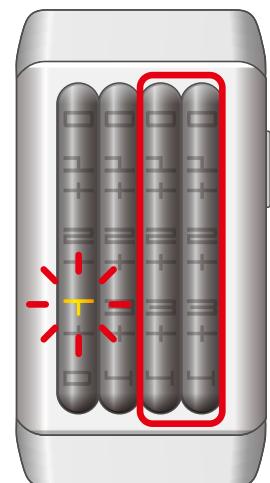


### 3. Setting the month

- The D light will flash.
  - Press button A to increase the month in the first two lines.
  - Press button B to confirm and set the date.
- \*Note after 5 seconds of inactivity setting mode will deactivate\*

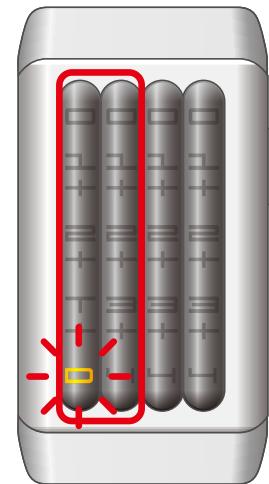


### 4. Setting the date

- The D light will continue to flash.
  - Press button A to increase the date in the second two lines.
  - Press button B to confirm and set the animation.
- \*Note after 5 seconds of inactivity setting mode will deactivate\*

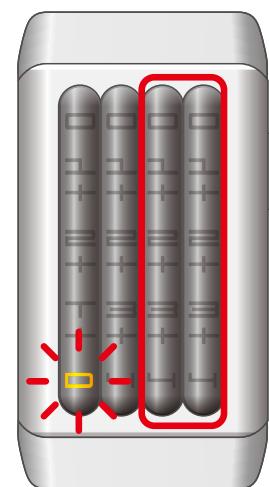


## 5. Activating animation ON/OFF

- The animation is the movement of the LED lights. The LED lights will animate once every minute for 12 minutes after the time is displayed.
- Press button A to turn the animation ON or OFF.
- When the animation is on, the LED lights animate in a “side-to-side” pattern. When the animation is off, all LED lights flash.
- Press button B to confirm and set the LED brightness.  
\*Note after 5 seconds of inactivity setting mode will deactivate\*

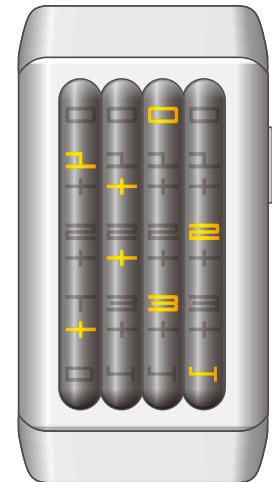

## 6. Setting the LED brightness

- Press button A to set the LED brightness to one of 5 levels.
- Press button B to confirm and move back to set the hour.  
\*Note after 5 seconds of inactivity setting mode will deactivate\*

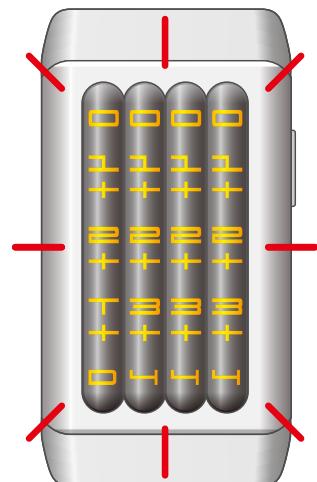

### 3. Battery Replacement

- This watch uses a CR2032 battery. We recommend that you take the watch to a specialist for battery replacement.
- To maximize battery life, turn the animation OFF and the LED brightness to a low setting.

\*The battery in your watch may need to be replaced within one year after the date of purchase because it is a factory fitted monitor battery used to check the function and performance of the watch.

### 4. Cautions

- Your watch is water resistant to 3ATM. Please do not use the watch in the shower, for swimming or for other water related activities.

### 5. Troubleshooting


- If the watch is not functioning properly, you can reset it by holding buttons A and B together for 3 seconds.

### 6. Warranty

- This watch is covered by a 3 year manufacturers warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

# KEISAN

## 取扱説明書

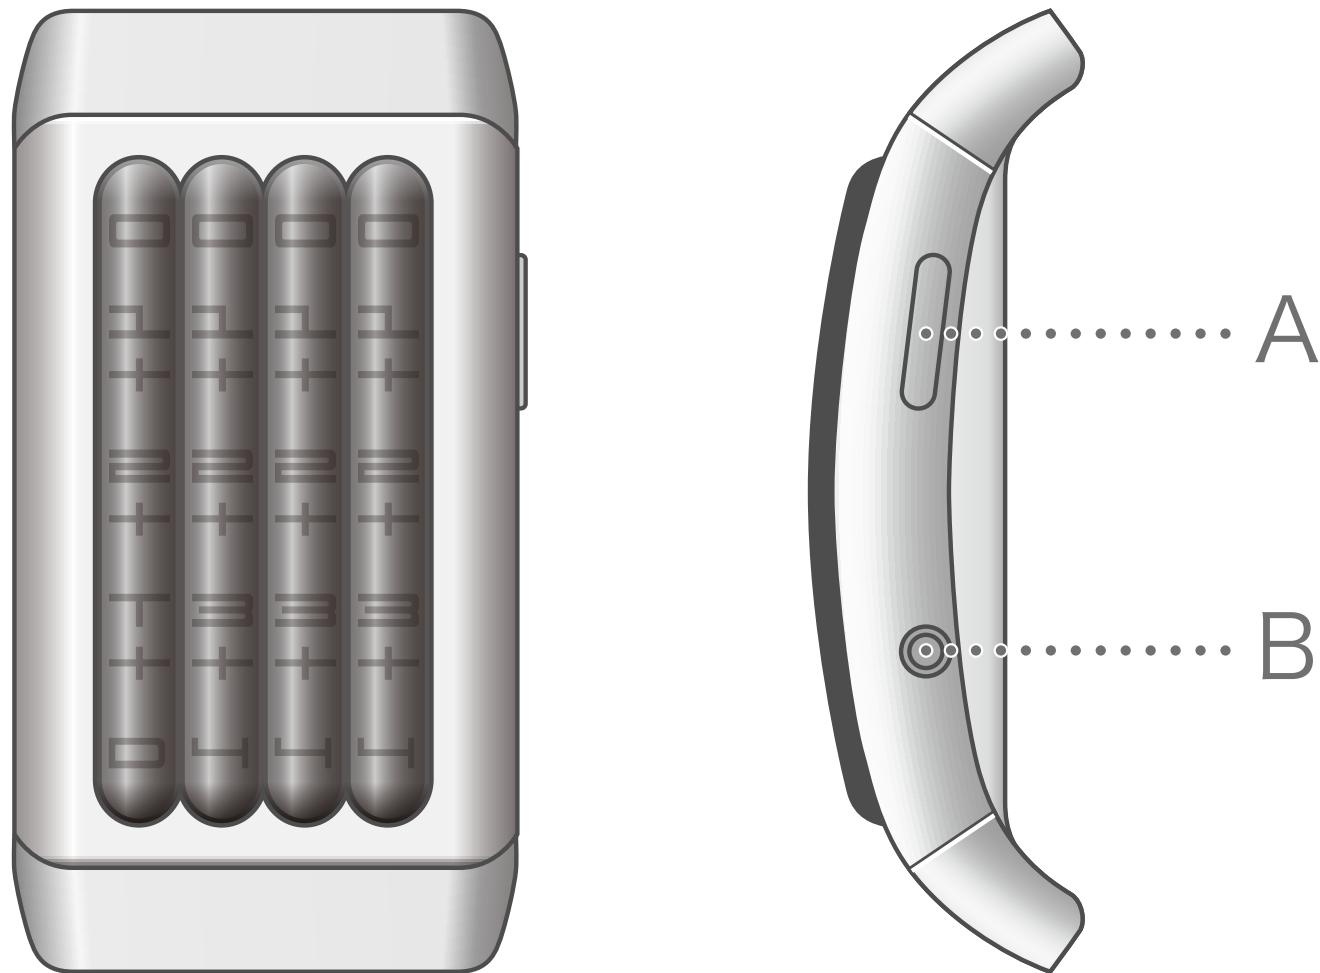

printed in Japan

## 1. 時刻・日付の表示


- ・A ボタンを 1 回押すと時刻表示がスタートします。
  - ・表示は、時刻、日付の順に 2 回に分けて行われます。
  - ・それぞれの列の表示された数字をたしたものが数値を表します。

※ 時刻・日付を早く知りたい時は、表示中に A ボタンを押すと下図のように次の表示にスキップすることができます。

時刻表示アニメ → 時刻静止表示


日付表示アニメ → 日付静止表示

時刻表示時は「T」が点滅

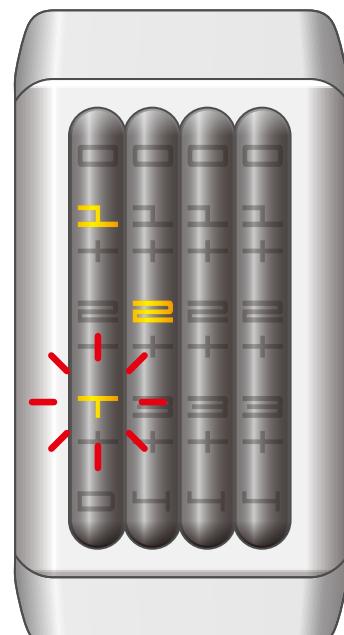

アニメーションで時刻を  
左の列から順番に表示

12 時 58 分

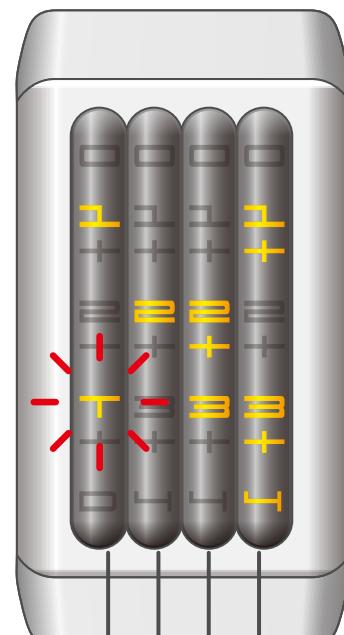


1 2 5 8

日付表示時は「D」が点滅



アニメーションで日付を  
左の列から順番に表示

10月29日

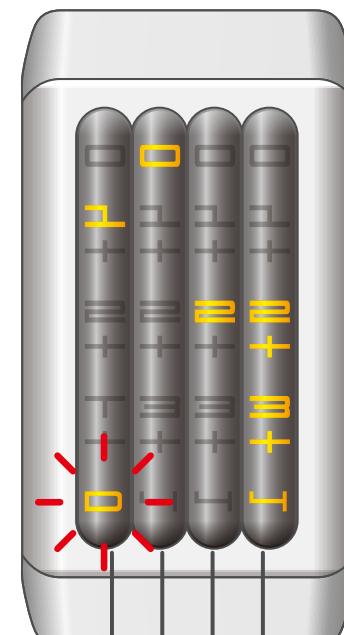


1029

## 2. 時刻・日付・アニメーション・LED 明るさの設定

- 下記のように B ボタンで確定しながら順番に設定します。また、設定したい箇所まで B ボタンを連続して押し、直接移動して設定することもできます。  
例：B ボタンを 3 回押すと「月」の設定に直接移動します。
- 設定モードは何も操作しない時間が 5 秒続くと自動的に確定し終了します。


### 1. 「時」の設定

- B ボタンを 1 回押します。「T」が点滅します。
  - A ボタンで左側の 2 列の時間表示内を 1 時間ずつ増やすことができます。
  - B ボタンを 1 回押すと確定して次の「分」の設定に移動します。
- ※ 5 秒間何も操作しないと設定モードは自動的に確定し終了します。

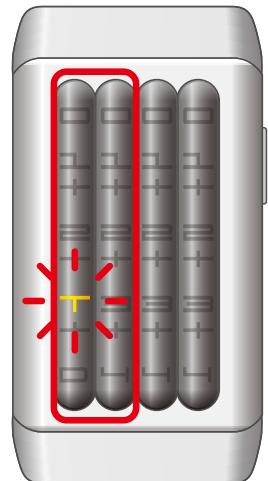


### 2. 「分」の設定

- 設定時は「T」が点滅します。
  - A ボタンで右側 2 列の分表示内を 1 分ずつ増やすことができます。
  - B ボタンを 1 回押すと確定して次の「月」の設定に移動します。
- ※ 5 秒間何も操作しないと設定モードは自動的に確定し終了します。

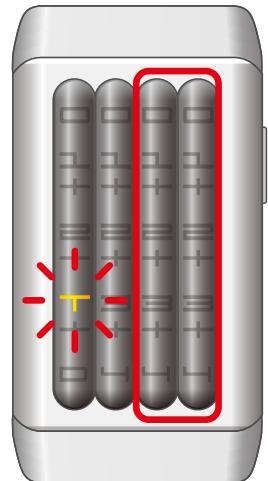


### 3. 「月」の設定

- ・設定時は「D」が点滅します。
- ・A ボタンで左側 2 列の月表示内を 1 月ずつ増やすことができます。
- ・B ボタンを 1 回押すと確定して次の「日」の設定に移動します。  
※ 5 秒間何も操作しないと設定モードは自動的に確定し終了します。

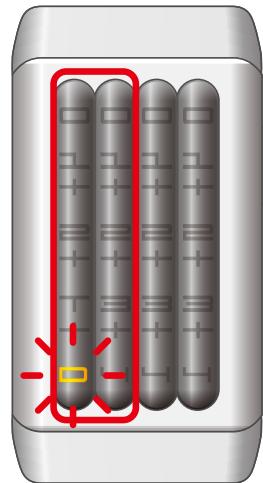


### 4. 「日」の設定

- ・設定時は「D」が点滅します。
- ・A ボタンで右側 2 列の日付表示内を 1 日ずつ増やすことができます。
- ・B ボタンを 1 回押すと確定して次の「アニメーション ON/OFF」に移動します。  
※ 5 秒間何も操作しないと設定モードは自動的に確定し終了します。

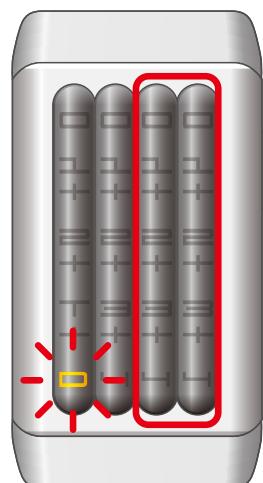


## 5. アニメーション ON/OFF の設定

- ・アニメーションとは LED の光の動きのことです。時刻表示させた後の 12 分間、1 分毎に自動的に点灯します。
- ・A ボタンで ON/OFF を選択します。
- ・ON の場合はアニメーションが点灯します。OFF の場合は LED が全点滅します。
- ・B ボタンを 1 回押すと確定して次の「LED 明るさ」に移動します。  
※ 5 秒間何も操作しないと設定モードは自動的に確定し終了します。

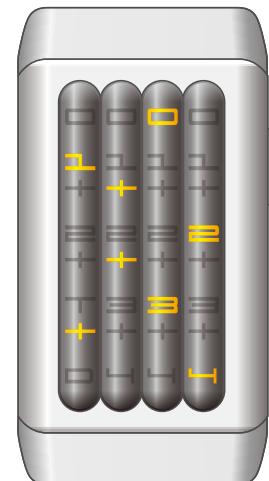

## 6. LED 明るさの設定

- ・A ボタンで LED の明るさを 5 段階で設定することができます。
- ・B ボタンを 1 回押すと確定して最初の「時」の設定に戻ります。  
※ 5 秒間何も操作しないと設定モードは自動的に確定し終了します。

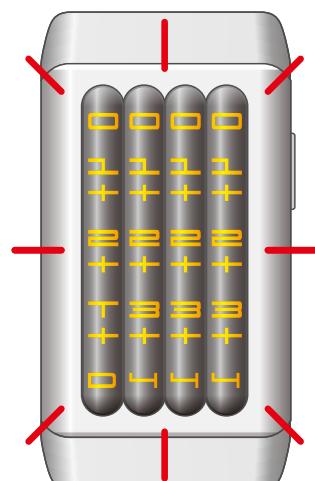

### 3. 電池交換

- ・本品は CR2032 を使用します。電池交換はお買い上げ店または、取扱店等にご依頼されることをおすすめします。
- ・アニメ設定を OFF、LED 明るさを暗く設定すると電池の消費を少なくすることができます。  
※お買い上げ時に組み込まれている電池はモニター用で、上記期間に満たないうちに電池寿命が切れる場合があります。

### 4. 注意

- ・本品は 3 気圧防水（日常生活防水）です。シャワーやスイミング、または水を扱う際のご使用は避けてください。

### 5. 故障かなと思ったら

- ・時刻や日付が正しく表示されないなど故障の疑いがある場合は、修理に出される前に一度、初期化をお試し下さい。A ボタンと B ボタンを同時に 3 秒間押し続けると、全ての設定が初期化されます。

### 6. 保証

- ・生産時に生じた不良にのみ 3 年間の無償修理を保証します。不注意による故障、破損、水害、電池の交換等は保証期間内であっても有償修理となりますので、ご了承ください。