




Instruction Manual

取扱説明書

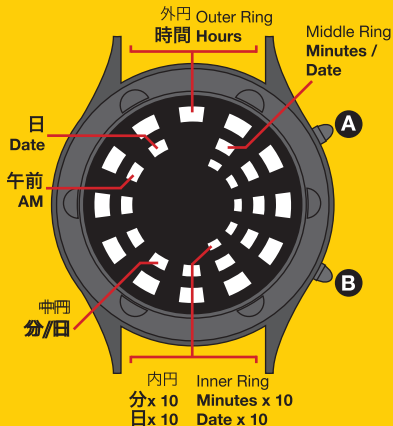


## 日付・時間の見方

- Ⓐ ボタンを押すと時間を表示します。
- Ⓐ ボタンを2回押すと日付を表示します。

## 日付・時間の設定

- Ⓐ ボタンを押して時間を表示させます。
- Ⓑ ボタンを押して設定モードに移ります。  
「時」が点滅します。
- Ⓐ ボタンで「時」を合わせます。長押しすると早く進みます。
- Ⓑ ボタンで確定し「分」設定に移ります。  
「分」が点滅します。
- Ⓐ ボタンで「分」を合わせます。長押しすると早く進みます。
- Ⓑ ボタンで確定し「月」設定に移ります。  
「月」が点滅します。
- Ⓐ ボタンで「月」を合わせます。
- Ⓑ ボタンで確定し「日」設定に移ります。  
「日」が点滅します。
- Ⓐ ボタンで「日」を合わせます。長押しすると早く進みます。
- Ⓑ ボタンで確定し設定を完了します。

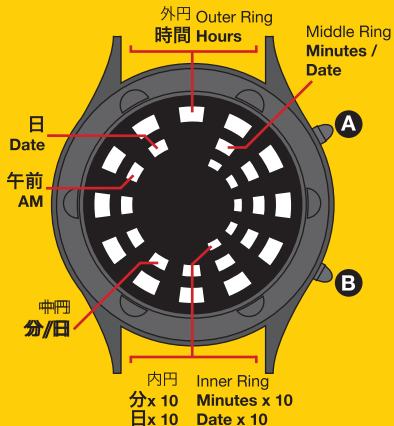

## How to show the Time/Date

- Press **A** once to show the time.
- Press **A** twice to show the date.

## Time and Date Setting

- Press **A** to show the Time Display.
- Press **B** to enter setting mode.
- The Hour will blink.
- Press **A** to advance the hours, hold to advance quickly.
- Press **B** to confirm the Hour & move to minute setting.
- The Minutes will blink.
- Press **A** to advance the minutes, hold to advance quickly.
- Press **B** to confirm the minutes & move to month setting.
- The Month will blink.
- Press **A** to advance the month, hold to advance quickly.
- Press **B** to confirm the month & move to date setting.
- The Date will blink.
- Press **A** to advance the date, hold to advance quickly.
- Press **B** to confirm and exit.

## 電池交換

リチウム電池 CR2032を使用します。  
ライトが弱まると消耗のサインです。電池を交換して下さい。  
機能が完全に停止するまで待たないで下さい。  
消耗した電池をそのままおいておくと、機能に障害を与える恐れがあります。  
故障や破損防止の為、電池交換は専門の時計店等にご依頼なさるようお勧めします。

## ご注意

この製品は5気圧防水(日常生活強化防水)です。少量の水又はシャワーなどの短時間の水使用時にのみ防水性があります。スイミング時の使用はお避け下さい。破損や変色の恐れがありますので、直射日光の当たる場所や、高温になるところは避けて下さい。乱暴に扱ったり、落下させたりしないで下さい。化学薬品は使用しないで下さい。お掃除の際には少し湿らせた柔らかい布をお使いください。

## Battery Replacement

One battery CR2032 provides the power to operate the lights.  
If you notice your watch's light is getting dimmer, this is an indication that your battery needs replacing.  
Do not wait until your watch stops functioning. A weak or dead battery left in your product for an extended time may damage the movement. To avoid the possibility of damage, we recommend you take the watch to a specialist to have the battery replaced & the caseback properly sealed.

## Cautions

This is a 5ATM water-resistant product. This means it can resist splashes & short times in water such as wearing in the shower or washing dishes. It is not recommended to use whilst swimming. Avoid long term exposure to extreme temperature, direct sunlight. This can cause material discolouration. Please avoid rough use or dropping of the product. Do not use strong detergent, sprays or chemicals. To clean your watch use only a soft cloth,