



# 1259Q LED Watch

Instruction Manual

# 1259Q LED Watch

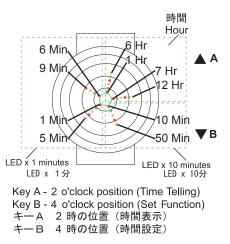

キーA を押し時間を数秒間表示します。 Press Key A will see the time for a few seconds.

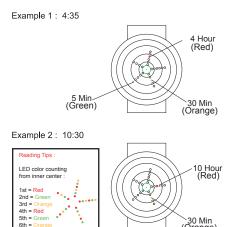


#### Remarks:

 To skip the flashing pattern after pressing the Key A, press the Key A again.

スタートフラッシュを飛ばすにはキーAを2回押します。

Double press Key A to see the time. キーAを2回押し 時間を表示します。



#### How to set the time:

- Press Key B, the Hour LEDs will blink (minute LEDs not blinking); press A to increase the Hours
- Press Key B to confirm and move to minute LEDs; press A to increase the LEDs.
- Press Key B to confirm

## 時間設定の仕方

- ■キーBを押し、時間LEDを点滅させます。キーAを押し時間を進めます。
- ■キーBを押し時間を確定し、分LEDを点滅させ、 キーAを押し分を進め、キーBを押し決定します。

### **Battery replacement**

- One Lithium battery CR2032 provides the power to operate the lights
- If you notice your watch's light is getting dimmer, this is an indication that your battery needs to be replaced
- Do not wait until your watch stops functioning
   Weak or dead battery left in your product for an
- extended time may damage the movement

  To avoid the possibility of damaging your product, we
- To avoid the possibility of damaging your product, we recommend that you send it to watch specialist to have the battery replaced and the case back properly sealed

#### Cautions

- Don't press buttons under water nor with excessive moisture on the product surface.
- Avoid long-term exposure to extreme temperature, direct sunlight. This can cause material coloring to fade or discoloration.
- Please avoid rough use or dropping this product. Do not use strong detergent, sprays or chemicals as this will dis-color the case or strap.
- To clean your watch use only soft cloth, moistened lightly.

# 電池の交換

お勧めいたします。

GR2032を使用しています。 もし少しでも時計の表示が暗くなった場合 すぐに使用を中止し、電池の交換を行ってください。 弱った電池を使い続けると、中の電子部分が 損傷する可能性があります。 電池の交換は専門の時計広等で行うことを

## 注意

水中や水滴が表面についた状態でボタンを押さないで ください。 高温、直射日光を避けてください。材質が変化する可能性 があります。

商品を落下させたりしないでください。