


Interpretation.

Each watch mode is shown by the 4 Red Lights on the Upper Display.
Hour Mode, Minute Mode, Binary Mode & Date Mode.

- Pressing the Mode button repeatedly will cycle through the modes.
Hour Mode—Minute Mode—Binary Mode.
- Pressing the Set button enters Date Mode.
(The watch will remember the last mode used & will always return to that mode the next time you use the watch, regardless of which button you press.)


Hour-centric Mode

The focus of this mode is on the hour with a rough representation of the minutes.
So for example, at 10:48, the watch would round up to 10:50. Most useful for general use when 'about 1/2 past 3' is good enough.
The Hour is shown in digits on the Lower Display. The Minutes are shown on the Upper Display, where each light represents 5 minutes

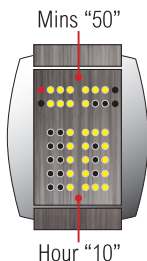

Minute-centric Mode

The exact minute is displayed in digits. Most useful when you're more concerned to know when it reaches exactly '22 minutes past 7'
The Minutes are shown in digits on the Lower Display. The Hour is shown on the Upper Display, where each light represents 1 Hour.

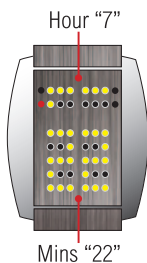

Date Mode

Showing the month on the Upper Display (1-12) & the date on the Lower Display in digits.


特性

表示モードは「時モード」、「分モード」、「日付モード」、「バイナリモード」があり上部4つの赤LEDで表示します。

モードボタンで「時」モード「分」モード「バイナリ」モード、セットボタンで「日付」モードが表示されます。
(最後に設定されたモードを常に表示します。)


「時」モード

この表示モードでは「時」が正確に、およその「分」が表示されます。
例) 10:48の場合
10:50と表示されます。
「時」は下の大きなディスプレイに、「分」は上のディスプレイに表示されます。1個のライトが5分間です。

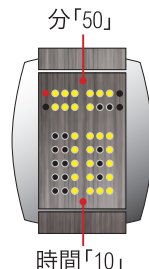

「分」モード

この表示モードでは「分」が正確に表示されます。「分」は下の大きいディスプレイに「時」は上のディスプレイで表示します。各ライトが1時間です。

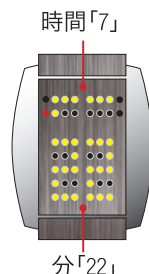

「日付」モード

「月」は上のディスプレイで、「日」は下のディスプレイで表示されます。

Binary Mode

For the geek within. The time is displayed in binary on the Upper Display.

The top row of 6 lights show the Hour in Binary.
The bottom rows of 6 lights show the Minutes in Binary.

To read the time in Binary, refer to the example below. Binary numbers are normally shown as zero's & one's, but on & off are also used.



Note: In Binary, the first number on the right is 1, then double it : 2, then double again: 4, then again: 8, 16, 32 etc
Using the same method you can read Binary Numbers. The minutes '22' (as shown above) would be 10110 (where 1 is on & 0 is off)

Configuration.

When setting the watch you will be asked to input, in this order:


The Hour, The Minute, The Month, The Date.

At each step use the Mode button to change the setting & the Set button to confirm & move to the next stage.

To begin setting the watch.

- Press Mode to display the time & then hold the Set button for several seconds.

Binary Hour "10"

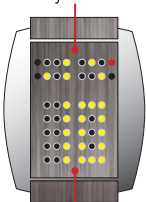

Binary Mins "41"


「バイナリ」モード

時間は上のディスプレイのみで表示されます。

上の6つのライトが「時」、下の6つのライトが「分」です。

バイナリモードの読み方は下記の例をご参照下さい。通常バイナリは0と1で表しますが、ここではライトのonとoffで表します。

バイナリ時間「10」

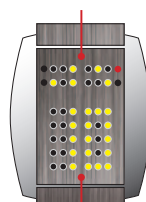

バイナリ分「41」



注記: 右から1、次に1の2乗の2、2の2乗の4、4の2乗の8、18、16、32となります。

同様に実際のバイナリではonを1としoffを0として数字を読み取っていく事ができます。


時計の設定

構成

時計の設定は「時」「分」「月」「日」「表示モード」の順で行って下さい。

- モードボタンで合わせ、セットボタンで確定し次へ移ります。

Example "2 PM"

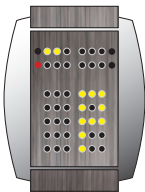

Step 1) The Hour will flash on the Upper Display. Change & confirm the Hour as needed. (Mode button to change, Set to confirm)

The Lower Display will show "A" or "P" to indicate AM/PM

Step 2) The Minutes will flash on the Lower Display. Change & confirm the Minutes as needed. (Mode button to change, Set to confirm)

Step 3) The Month will flash on the Upper Display and the Date LED will be lit. Change & confirm the Month as needed. (Mode button to change, Set to confirm)

Step 4) The Date will flash on the Lower Display. Change & confirm the Date as needed. (Mode button to change, Set to confirm)

Enlightenment.

3ATM Water Resistant.

This means the watch can resist splashes of water, but it should not get excessively wet. Please do not use in the shower or for swimming.

1 x CR2025 lithium watch battery.

Life expectancy is calculated to last 1 year if the time is displayed, on average, 12 times a day.

The warranty covers 1 year free from manufacturers defect.

This does not include:

- Water damage.
- Broken Glass.
- Damage due to abuse or carelessness.


For warranty issues, contact the store where you bought the watch.

1) 上のディスプレイに「時」が表示されます。モードボタンで合わせ、セットボタンで確定します。

2) 「分」が下のディスプレイに表示されます。モードボタンで合わせ、セットボタンで確定します。

3) 「月」が上のディスプレイに表示されます。モードボタンで合わせ、セットボタンで確定します。

4) 「日」が下のディスプレイに表示されます。モードボタンで合わせ、セットボタンで確立します。

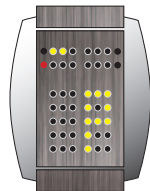

例「hr」

注意

3気圧防水です。

少量の水にのみ秒水性があり、シャワースイミング時、又はミスを扱う際の使用はお避け下さい。

リチウム電池CR2025を1個使用します。電池寿命は1日12回の使用で約1年です。

生産時における不良にのみ1年間無償修理を保証いたします。

以下のような場合には、保証期間中であっても有料修理となります。

- 水による故障
- ガラスの破損
- 不注意による故障

保証に関するお問い合わせは、商品をお買い求めいただいた店舗までご連絡下さい。