




Change the way you think about time


ROGUE SR2

INSTRUCTION MANUAL


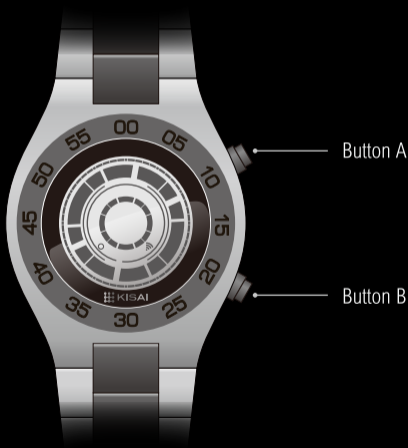


1. How to read the time

- This watch uses an LCD “always on” display to show the time.
- You can illuminate the display for a short time with the LED backlight by pressing button A.

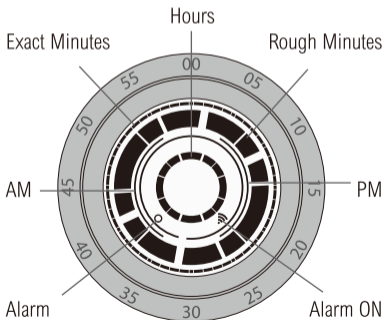


The outer ring of small dots represents minutes 1-60. Every 5th dot is slightly smaller to help distinguish the 05, 10, 15 etc. markings on the watch case. (e.g. 12 minutes.)

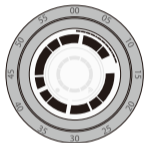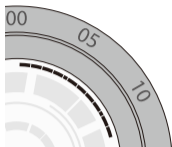


The ring of large blocks represents “rough minutes”. The position of the gap in this ring roughly shows the minutes. (e.g. about 15 minutes past.)

There are 2 crescent shapes just inside the rough minutes ring. If the left one is lit it indicates AM, if the right one is lit it indicates PM. (e.g. PM.)

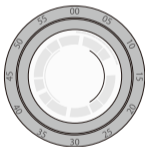

The inner ring of blocks represents hours 1-12. The position of the gap in this ring shows the hour. (e.g. 6PM.)

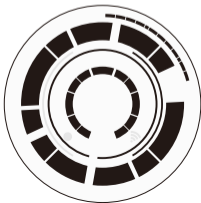

Left image: 6:12PM

2. How to set the time

- Press and hold button A for 3 seconds to enter setting mode.

*Note after 7 seconds of inactivity setting mode will deactivate

I. Setting the hour

- The hour blocks will flash when you are in hour setting mode.
- Press button B to increase the hour as required.
- Hold button B to increase the hours more quickly.
- The AM or PM icon will light up to indicate that you are setting the time in AM or PM.
- Press button A to confirm and move to the minutes.



II. Setting the minutes

- The minute blocks will flash when you are in minute setting mode.
- Press button B to increase the minutes as required.
- Hold button B to increase the minutes more quickly.
- Press button A to confirm and exit setting mode.

3. Checking and setting the alarm

I. Checking the alarm and turning it on or off

- Press button B to display the alarm time.
- The alarm mode icon indicates that you are in alarm mode.
- In alarm mode, press button B to turn the alarm on or off. The alarm on icon indicates that the alarm is on.

alarm mode icon

alarm on icon



II. Setting the alarm

- Press and hold button B for 3 seconds to enter alarm setting mode.
*Note after 7 seconds of inactivity setting mode will deactivate
- The alarm time will be displayed and the hour will be flashing.
- Press button B to increase the hour as required.
- Hold button B to increase the hours more quickly.
- Press button A to confirm and move to the minutes.
- Press button B to increase the minutes as required.
- Hold button B to increase the minutes more quickly.
- Press button A to confirm and exit alarm setting mode.

4. User information

I. Battery

- This watch uses a CR2025 replaceable watch battery.
- Battery lifetime will vary depending on use, but is estimated to last for at least one year.
- To maximize battery life you should limit use of the LED backlight.

II. Warranty

- This watch is covered by a 1 year manufacturers' warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

III. Caution


- This watch has limited resistance to water. Please do not use the watch in the shower, for swimming or for other water related activities.

SPECIFICATIONS

Case Materials	Wood
Strap Materials	Wood
Case Dimensions	44 x 52 x 13 mm
Finish	Clear coating
Maximum Fit Wrist Size	210mm (approx.)
Weight	70g
Display	LCD with LED backlight
Battery	CR2025


ROGUE SR2

取り扱い説明書


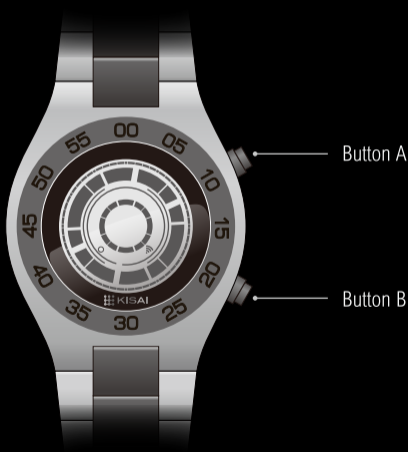


1. 時刻の読み方

- ・この商品はLCDディスプレイに常時に時刻が表示されます。
- ・Aボタンを押すと数秒間LEDバックライトを点灯させることができます。

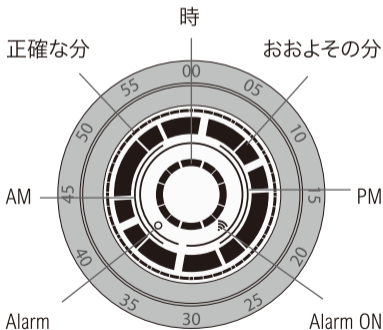


外円の小さいドットはそれぞれ1-60分を表示します。さらに小さいドットが5分ごとに配置されているので、05、10、15が識別しやすく、ケースに刻印された数字と合わせて簡単に読み取ることができます。(例: 12分)

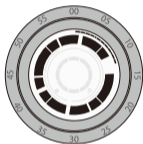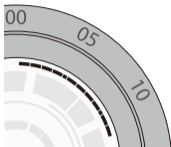


大きいブロックのリングは、ブロックが抜けた部分で“おおよその分”を表示します。(例: 約15分)

三日月形のブロックが2つあり、それぞれ左側がAM、右側がPMを示します。(例: PM)

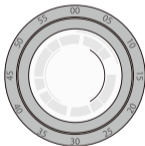

内円のブロックで1-12時を表示します。ブロックが抜けた部分で現在の時を表示します。(例: 6 PM)

左図は6:12PMを表示

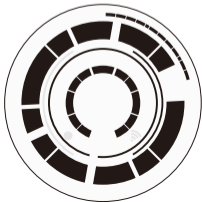

2. 時刻の設定

- ・ Aボタンを3秒間押し続けると設定モードになります。
※7秒間何も操作をおこなわないと、設定モードは自動的に終了します。

I. 「時」の設定

- ・ 「時」の設定時は、時の表示部分が点滅します。
- ・ Bボタンで1時間ずつ増やすことができます。
- ・ Bボタンを長押しすると連続で時間を増やすことができます。
- ・ AM・PMアイコンはそれぞれの時間帯の設定時に表示されます。
- ・ Aボタンを押すと確定して次の「分」の設定に移動します。



II. 「分」の設定

- ・ 「分」の設定時は、分の表示部分が点滅します。
- ・ Bボタンで1分ずつ増やすことができます。
- ・ Bボタンを長押しすると連続で分を増やすことができます。
- ・ Aボタンを押すと確定して設定モードは終了します。

3. アラーム時刻の確認と設定

I. アラーム時刻の確認とON/OFFの設定

- ・ Bボタンを押すとアラーム時刻を表示します。
- ・ アラーム設定時はアラームモードアイコンが表示されます。
- ・ アラーム時刻表示中にBボタンを押すとON/OFFの切り替えができます。

アラームモード アイコン

アラームON アイコン



II. アラーム時刻の設定

- ・ Bボタンを3秒間押し続けると設定モードになります。
※7秒間何も操作をおこなわないと、設定モードは自動的に終了します。
- ・ アラーム時刻を表示後、「時」が点滅します。
- ・ Bボタンで1時間ずつ増やすことができます。
- ・ Bボタンを長押しすると連続で時間を増やすことができます。
- ・ Aボタンを押すと確定して次の「分」の設定に移動します。
- ・ Bボタンで1分ずつ増やすことができます。
- ・ Bボタンを長押しすると連続で分を増やすことができます。
- ・ Aボタンを押すと確定して設定モードは終了します。

4. インフォメーション

I. バッテリー

- ・本品には交換可能なCR2025リチウムバッテリーが内蔵されています。
- ・バッテリーの寿命は使用状況によって異なりますが、およそ1年間のご使用が可能です。
- ・LEDバックライトの使用回数を減らすことで、バッテリーの寿命を長くすることができます。

II. 保証

- ・生産時に生じた不良にのみ1年間の無償修理を保証します。不注意による故障、破損、水没等は保証期間内であっても有償修理となりますので、ご了承ください。

III. ご注意

- ・この商品は非防水仕様です。シャワーやスイミングまたは、水を扱う際のご使用はお避けください。

商品仕様

ケース素材	ウッド
ストラップ素材	ウッド
ケースサイズ	44 x 52 x 13 mm
仕上げ	クリアーコーティング
最大装着 リストサイズ	約210mm
重量	70g
ディスプレイ	LEDバックライト付LCD
バッテリー	CR2025

