

ROUND TRIP

Instruction Manual

USB Charging
Jack




A

B


1. How to read the time

- Press button A to display the time.
- After a short animation, all LEDs will light up and the time will be shown.
- The current time is indicated by the blinking LEDs.
- The time display will turn off after 7 seconds.

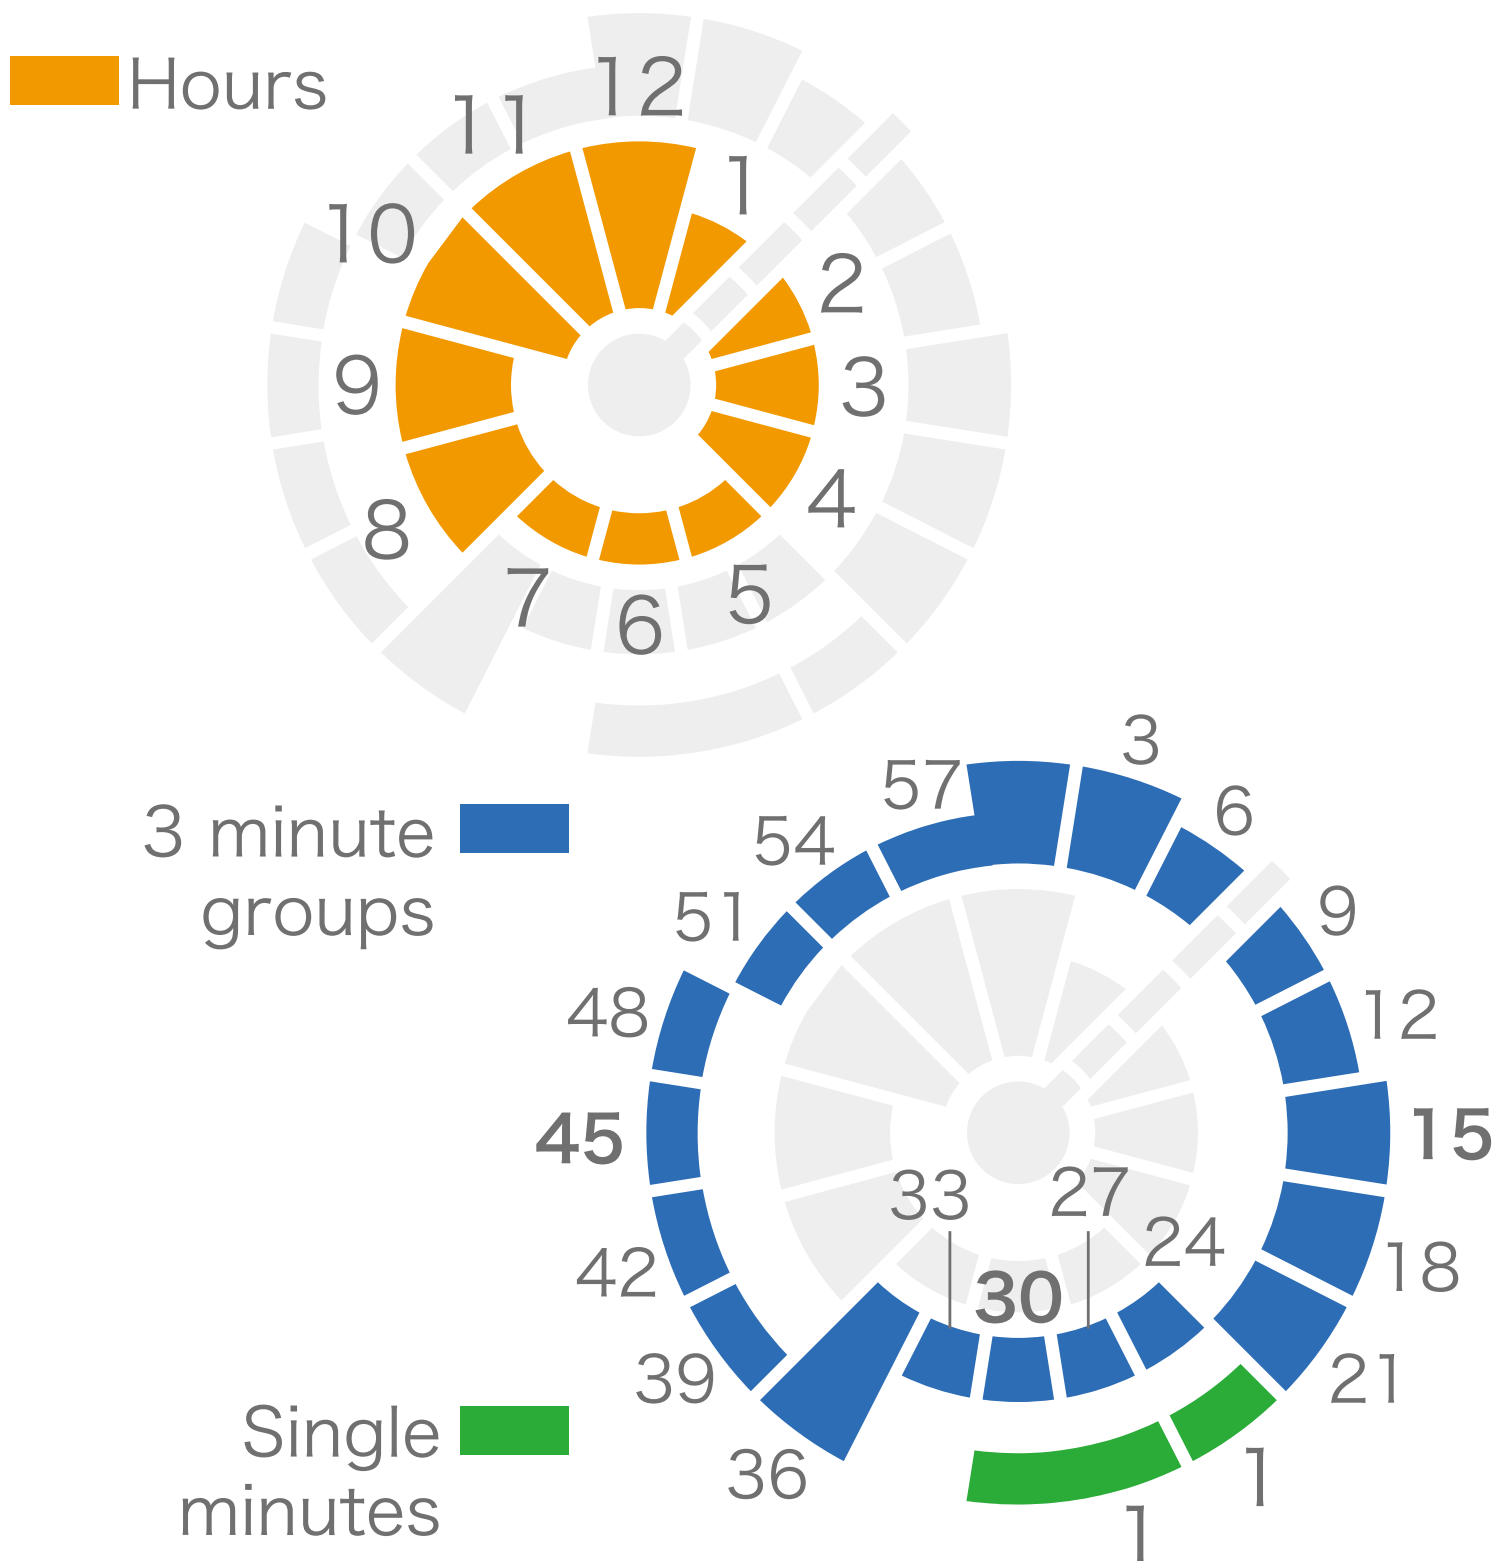

Examples:

10:05

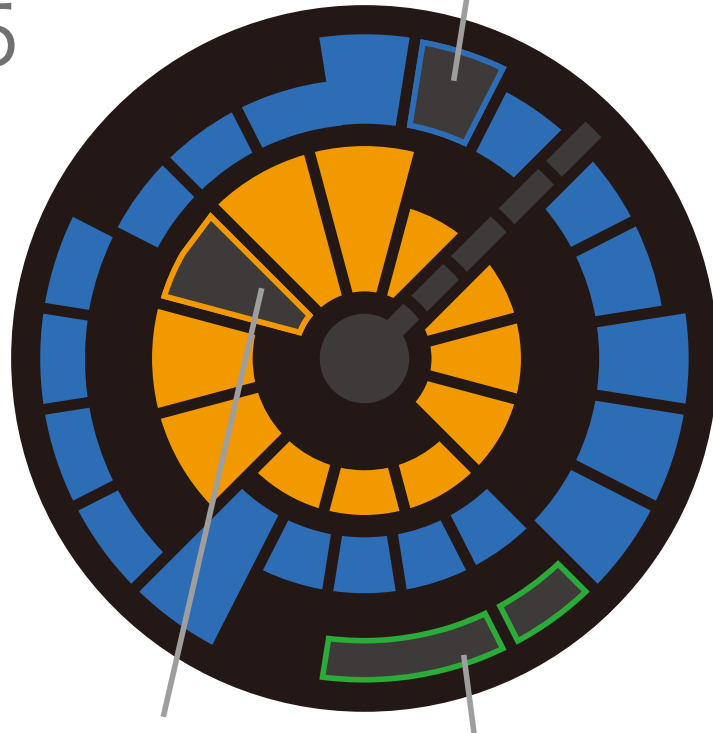


3 minute block
blinking

10 hour block
blinking

Single minute
blocks blinking

5:43

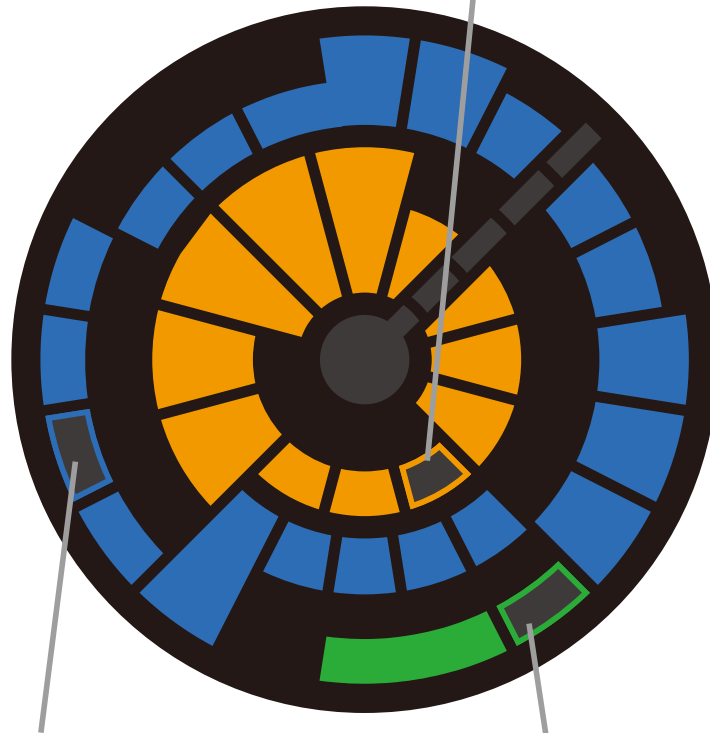

5 hour block
blinking

42 minute block
blinking


1 minute
block blinking

2. How to set the time and animation

- Press and hold button B for 3 seconds to enter setting mode.
* Note: after 7 seconds of inactivity setting mode will deactivate.

1. Setting the hour

- The hour LEDs will flash when you are in hour setting mode.
- Press button A to increase the hours as required.
- The PM indicator will flash to indicate PM mode.
- Press button B to confirm and move to the minutes.

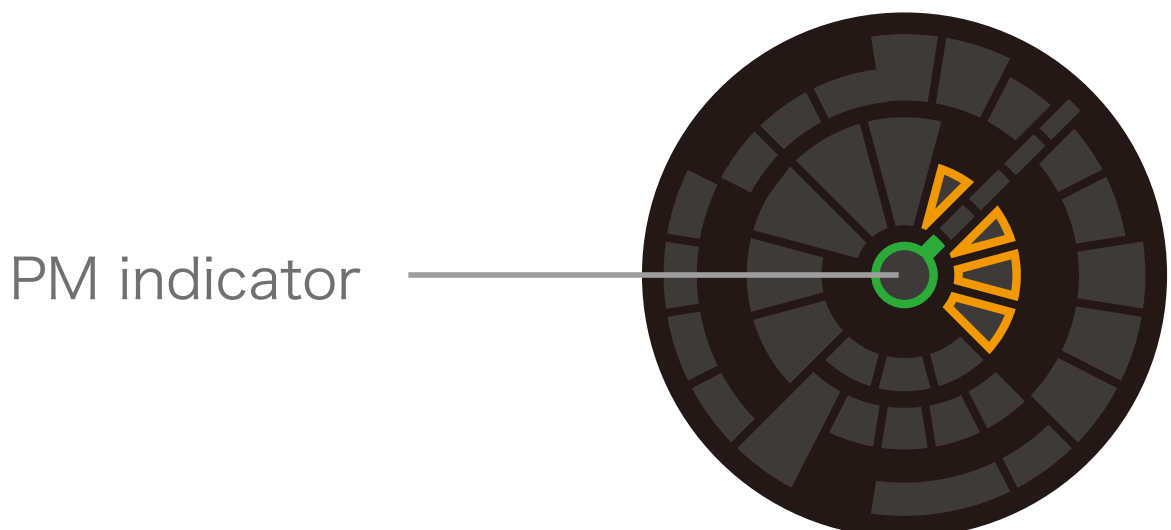

2. Setting the minutes

- The minute LEDs will flash when you are in minute setting mode.
- Press button A to increase the minutes as required.
- Press button B to confirm and move to the animation.

3. Setting the animation

* This watch has a light-up animation feature. You can set the LEDs to animate once every 15 minutes between 6pm and midnight.

- In setting mode, when the animation feature is on, the LEDs will animate.
- In setting mode, when the animation feature is off, all LEDs will flash.
- Press button A to turn the animation on or off.
- Press button B to confirm and when the LEDs go out, setting is complete.


* Note: after 7 seconds of inactivity setting mode will deactivate

3. How to recharge the battery


- This watch has a USB rechargeable battery.
- When the lights become dim or do not light up, you should recharge the battery.
- To recharge the battery, unscrew the USB cap and connect the USB charging cable to the USB charging jack.
- Connect the charging cable to a power source, e.g. your computer.
- When charging, the green LED charging indicator will blink.
- When the charging indicator stops blinking, the battery is 90% charged.

It is advised that you continue to charge the battery for a full 3.5 hours to ensure the battery is 100% charged.

charged: indicator on

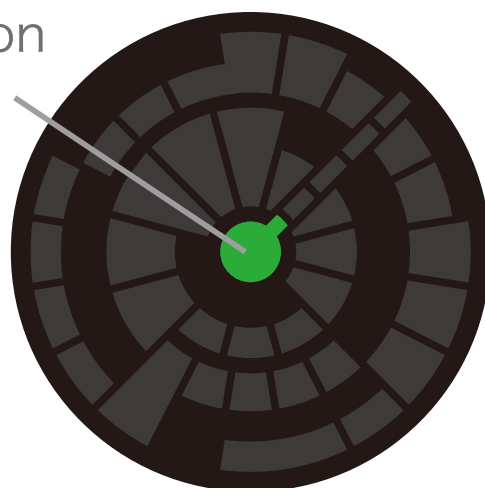


charging: indicator blinking

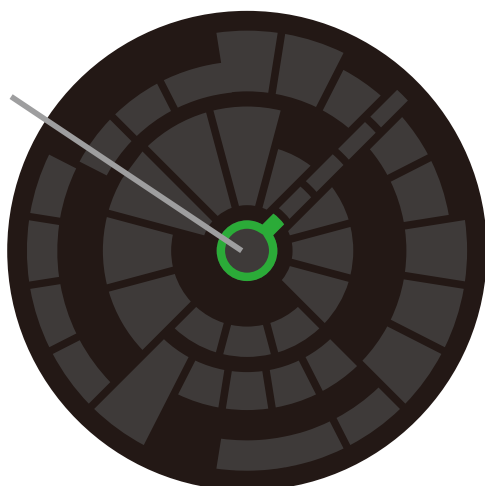

4. Items included in the box

Pocket watch version

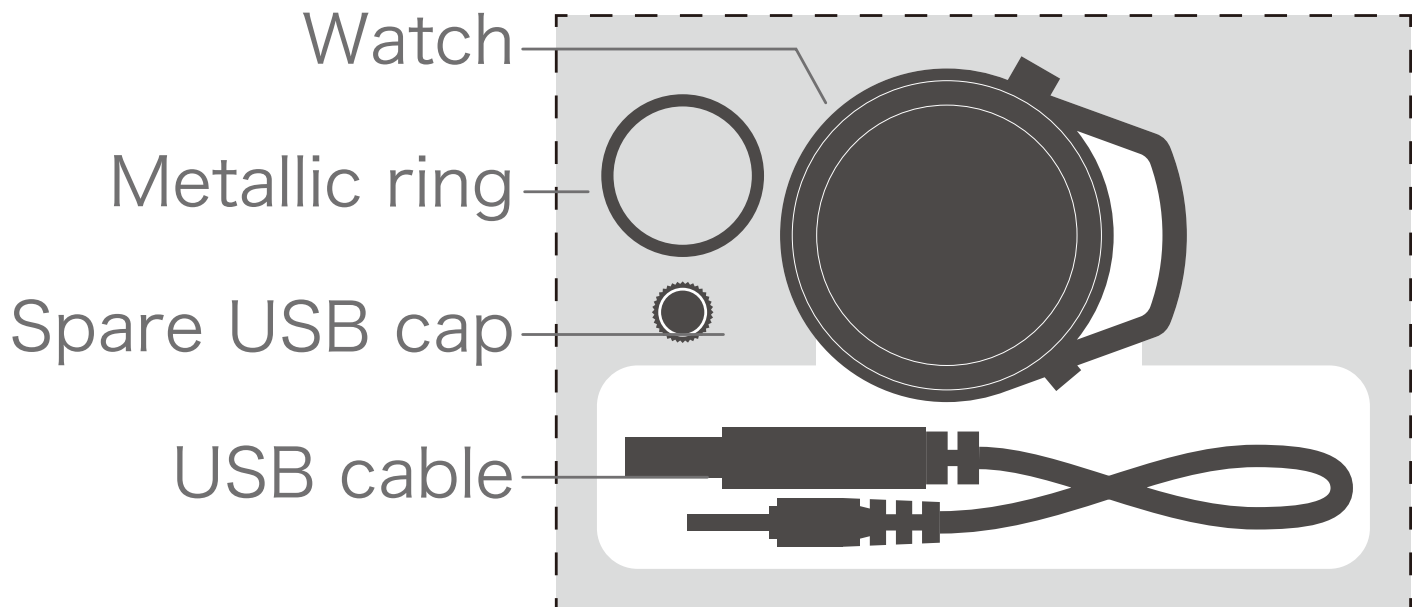

5. Battery

- This watch uses an LIR 2032 rechargeable battery only.
- The LIR 2032 rechargeable battery is replaceable.
- Battery lifetime will vary depending on use, but is estimated at approximately 300 charges.
- To maximize battery life, turn the animation off.
- The plug standard input voltage for the LIR 2032 battery is DC5V. You should use only the cable provided with the watch when recharging.

6. Caution

- This watch is water resistant to 3ATM. Please do not use the watch in the shower, for swimming or for other water related activities.
- Please take care when attaching the key ring to the pocket watch so as not to scratch the case.
- Please use only use the cable provided with the watch for recharging as it is designed especially for this watch.

7. Warranty

- This watch is covered by a 1 year manufacturers warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.


ROUND TRIP

取り扱い説明書



1.時刻の読み方


- Aボタンを押すと時刻表示がスタートします。
- 光のアニメーションが表示されたあとに、全てのLEDが点灯し時刻を表示します。
- LEDが点滅した箇所が現在時刻です。
- 時刻表示は7秒後自動的に終了します。

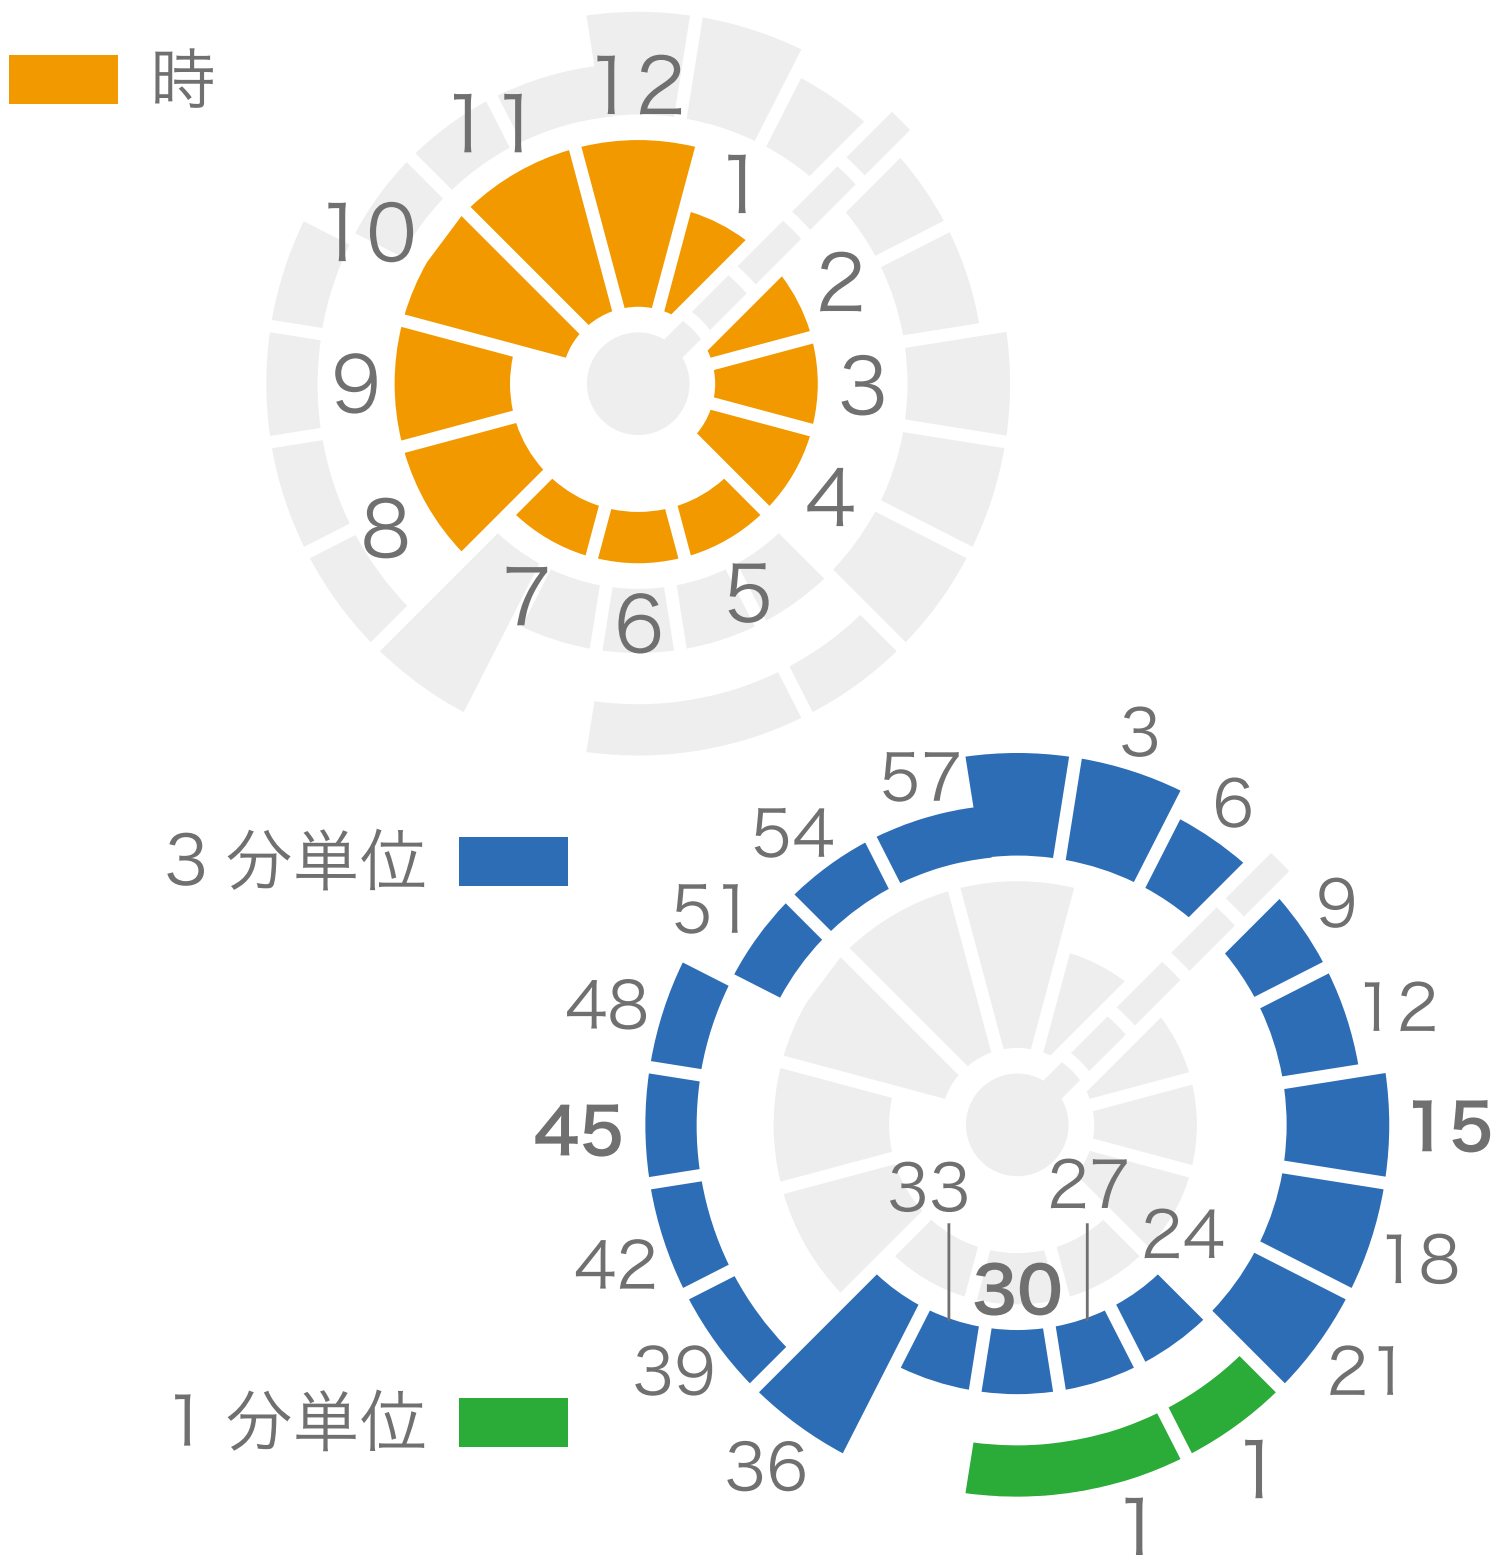

時刻表示例：

10:05

3分のブロックが点滅

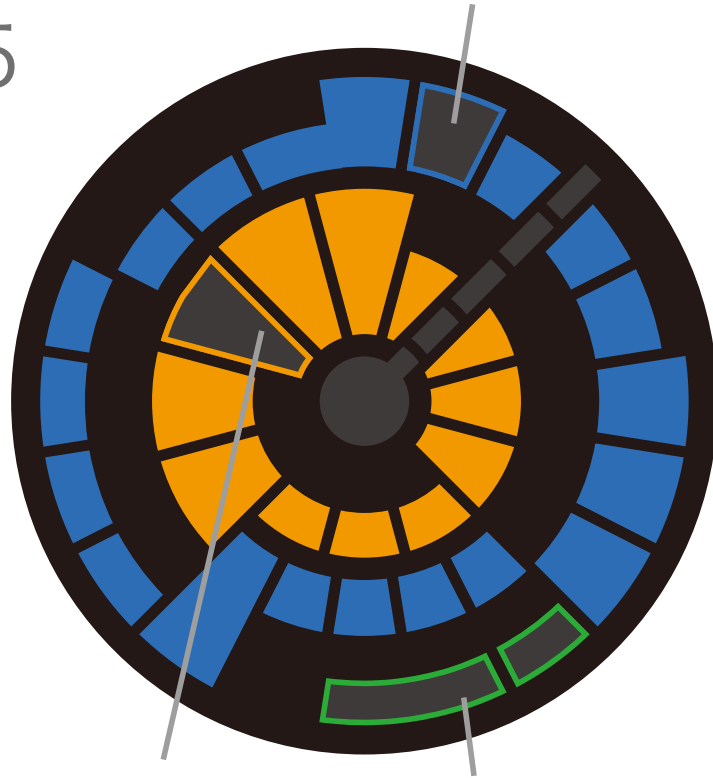


10時のブロックが点滅

1分単位のブロック
が2個点滅

5:43

5時のブロックが点滅

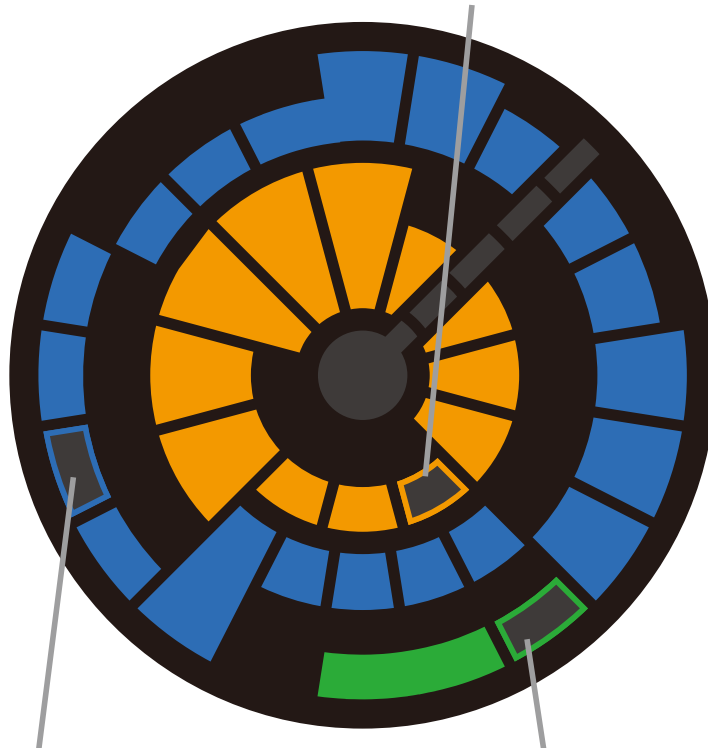

42分のブロック
が点滅

1分のブロック
が点滅


2. 時刻・アニメーションの設定

- Bボタンを3秒間押し続けると設定モードになります。
※7秒間何も操作をおこなわないと、設定モードは自動的に終了します。

1. 「時」の設定

- 「時」の設定時は、時間表示のLEDのみが点滅します。
- Aボタンで1時間ずつ増やすことができます。
- PM時間帯の設定時にはPMインジケータが点滅します。
- Bボタンを押すと確定して次の「分」の設定に移動します。

PM インジケータ

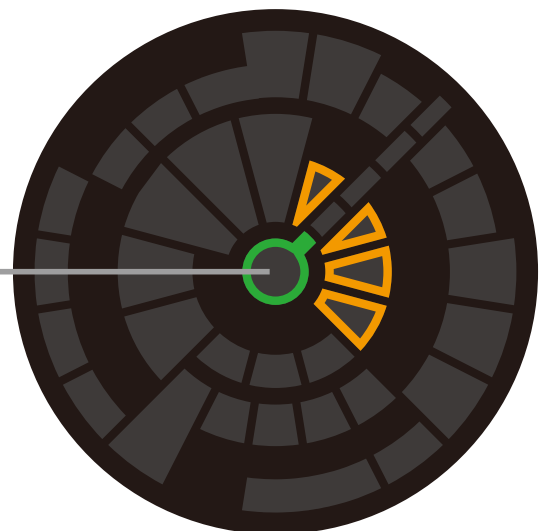

2. 「分」の設定


- 「分」の設定時は、分表示のLEDのみが点滅します。
- Aボタンで1分ずつ増やすことができます。
- Bボタンを押すと確定して次の「アニメーション」の設定に移動します。

3. 「アニメーション」の設定

- 本品にはLEDによる光のアニメーション表示があります。アニメーションを設定すると、6pmから12amの間、15分ごとに1回アニメーションが表示されます。
- 設定モードでは、アニメーションがONの場合はアニメーションが表示されます。
また、アニメーションがOFFの場合は全てのLEDが点滅します。
- AボタンでアニメーションのONとOFFの切り替えができます。
- Bボタンを押すと確定してLEDが消灯し、設定モードは終了します。
※7秒間何も操作をおこなわないと、設定モードは自動的に終了します。


3. バッテリーの充電方法

- 本品はUSB充電バッテリーを内蔵しています。
- LEDの輝度が弱くなったり、点灯しなくなった場合は、バッテリーを充電してください。
- 充電する場合は、USBキャップをはずし、USBケーブルをUSBジャックに接続してください。
- USBケーブルの片方の端子をパソコンなどの電源供給が可能なUSBジャックに接続してください。
- 充電中はグリーンLEDの充電インジケータが点滅します。
- バッテリーが90%まで充電されると、イエローLEDの充電インジケータが点灯に変わります。100%のフル充電をされる場合は、約3.5時間の連続充電をおこなってください。

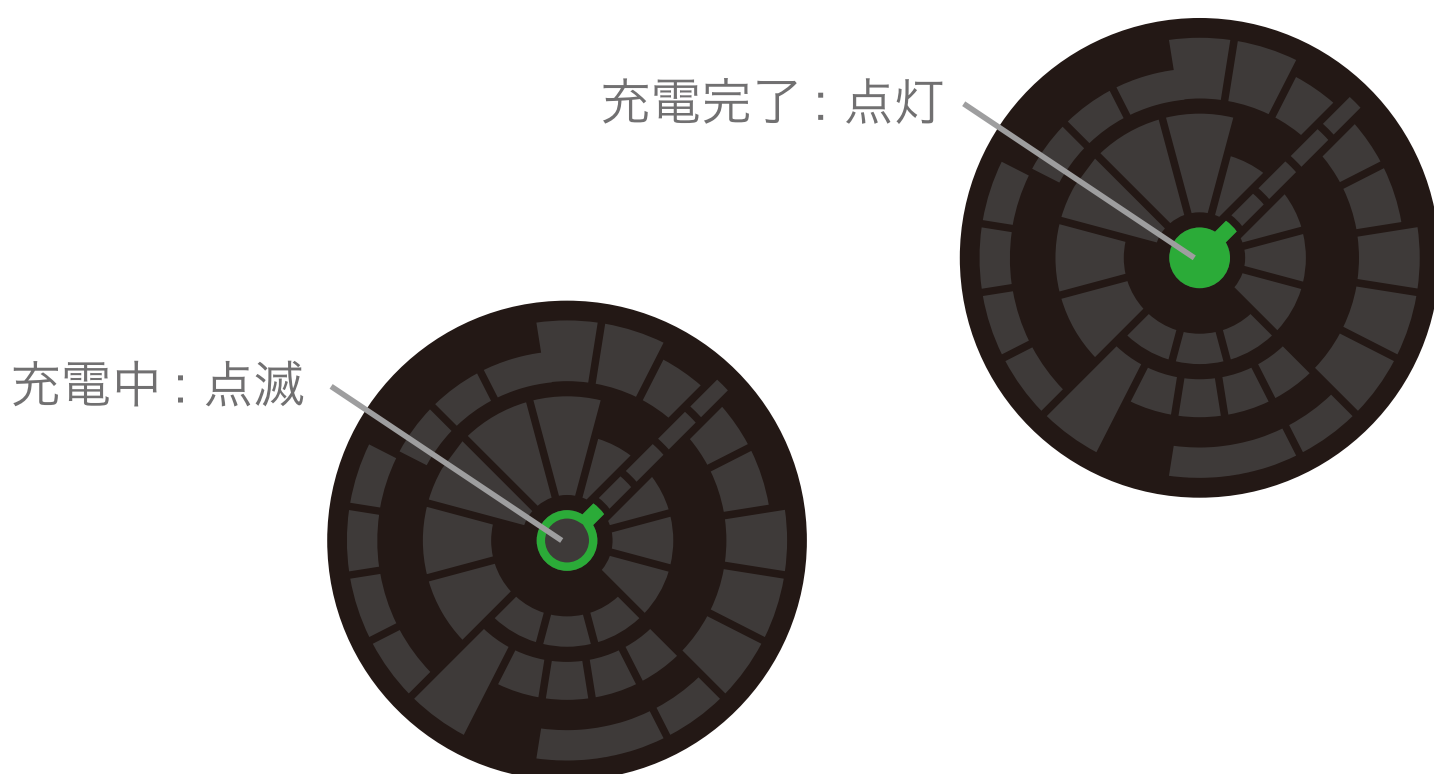

4. 付属品

ポケットウォッチタイプ

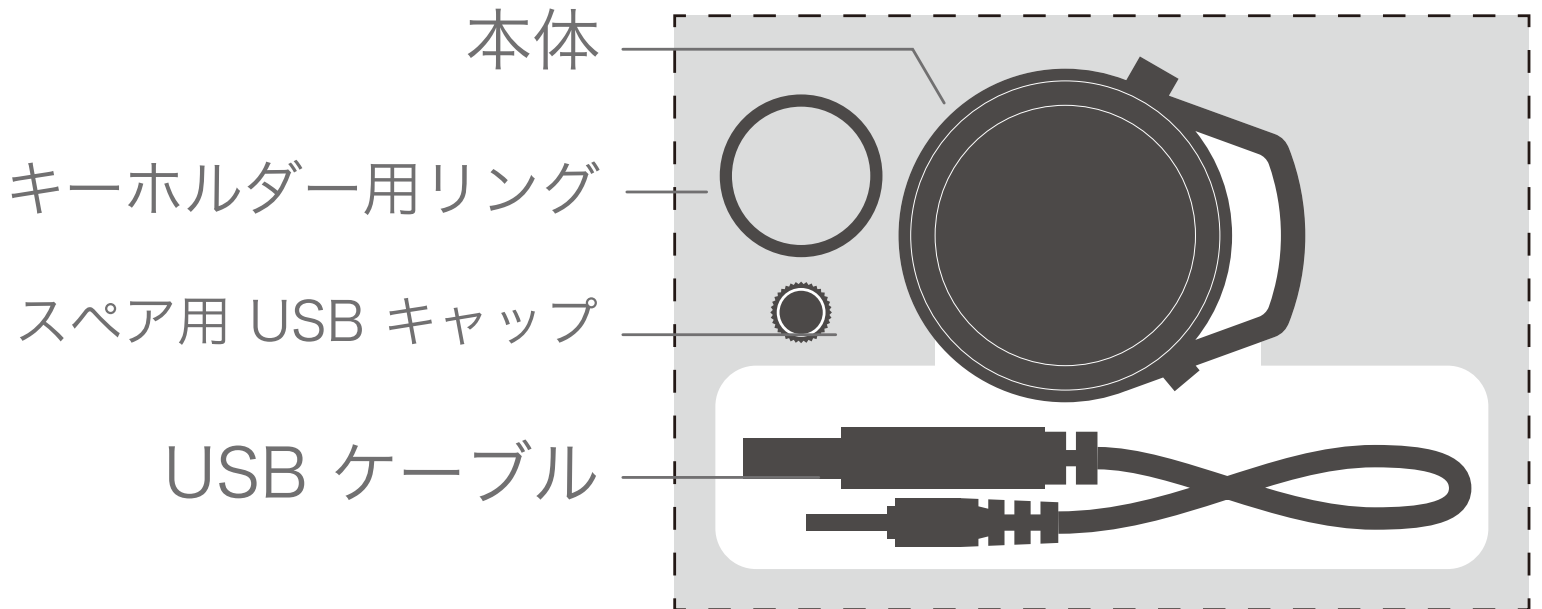

5. バッテリー

- 本品にはLIR 2032充電バッテリーが内蔵されています。
- LIR 2032充電バッテリーは交換可能です。
- バッテリーの寿命は使用状況によって異なりますが、およそ300回の充電が可能です。
- アニメーションの設定をOFFにすると、バッテリーの寿命を長くすることができます。
- LIR 2032充電バッテリーの入力電圧はDC5Vです。充電の際は必ず付属の専用USBケーブルをご使用ください。

6. ご注意

- 本品は3気圧防水(日常生活防水)です。シャワーやスイミング、または水を扱う際のご使用は避けてください。
- ポケットウォッチタイプに付属品として同梱されているキーリングを本体に取り付ける際は、ケースに傷がつかないようにご注意ください。
- 付属のUSBケーブルは本品専用のケーブルです。他のUSBケーブルを使用するとモジュールを破損させる可能性がございますので、充電の際は必ず付属のUSBケーブルをご使用ください。

7. 保証

- 生産時に生じた不良にのみ1年間の無償修理を保証します。不注意による故障、破損、水害等は保証期間内であっても有償修理となりますので、ご了承ください。