




Designed + Made in Japan

DMJ

TENMETSU

Instruction Manual

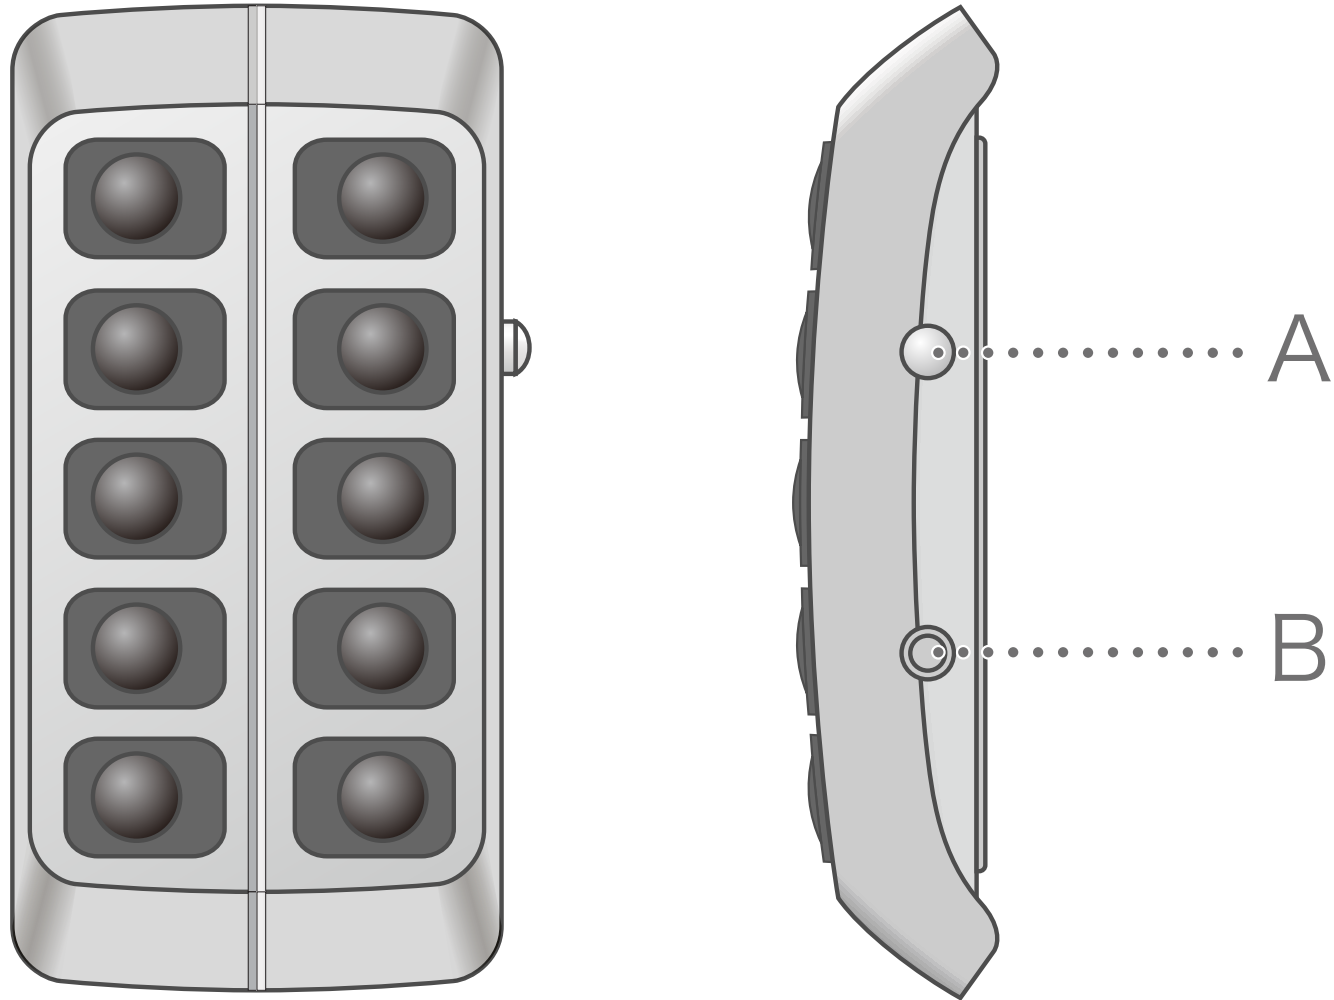


1. How to read the time

- Press button A once to display the time.
- The time is displayed in four stages; [Hours] [Minutes] [Month] and [Date].
- Each LED color indicates a different numerical unit. Add these together to get the total.

●... 15 units ●... 5 units ●... 1 unit

*Note you can "press button A between stages to read the time and date more quickly". Time is set in 24h format only.

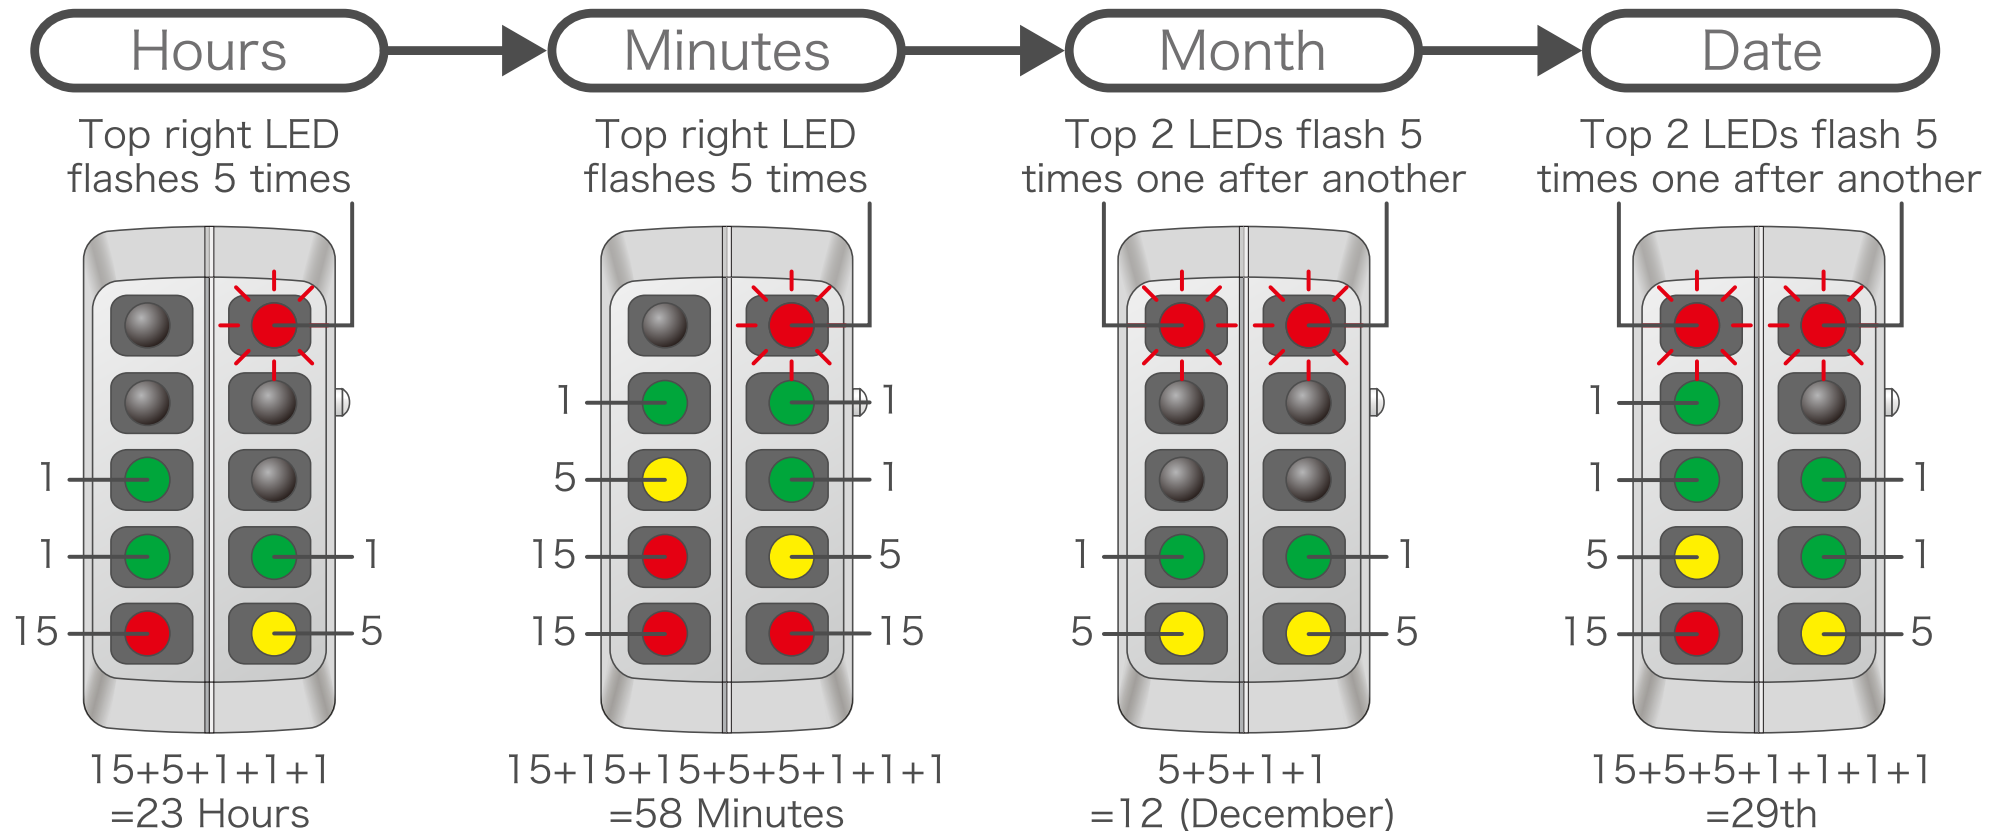

2. How to set the time and date

- Each setting mode will be displayed in the sequence shown below.
- Press button B to go to each setting mode.


Note after 5 seconds of inactivity setting mode will deactivate

1. Setting the hour

- Press button B once.
- Press button A to increase the LED lights.
 - 15 units
 - 5 units
 - 1 unit
- Press button B to confirm and set the minutes.

Note after 5 seconds of inactivity setting mode will deactivate

Top right LED flashes

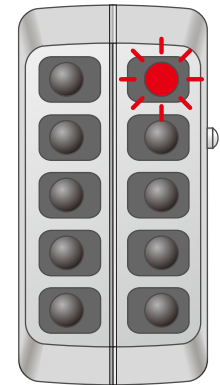


2. Setting the minutes

- Press button A to increase the LED lights.
 - 15 units
 - 5 units
 - 1 unit
- Press button B to confirm and set the month.

Note after 5 seconds of inactivity setting mode will deactivate

Top right LED flashes

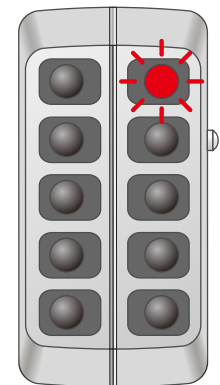


3. Setting the month

- Press button A to increase the LED lights.
●··· 5 units ●··· 1 unit
- Press button B to confirm and set the date.

Note after 5 seconds of inactivity setting mode will deactivate

Top 2 LEDs flash 5 times one after another

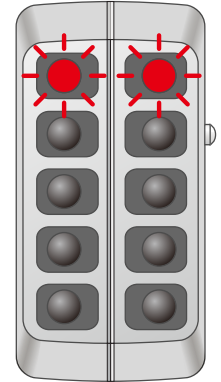


4. Setting the date

- Press button A to increase the LED lights.
●··· 15 units ●··· 5 units ●··· 1 unit
- Press button B to confirm.


Note after 5 seconds of inactivity setting mode will deactivate

Top 2 LEDs flash 5 times one after another

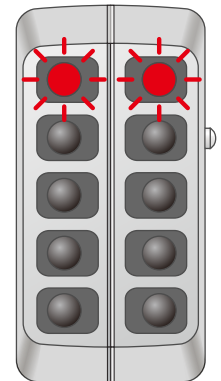

3. Activating animation ON/OFF

- The animation is the movement of the LED lights. The LED lights will animate once every minute for 12 minutes after the time is displayed.
 - Press button B five times to go to the animation setting mode.
 - Press button A to turn the animation ON or OFF.
 - When the setting is ON, the LED lights animate in an "up-down" pattern. When the setting is OFF, all the LED lights flash.
 - Press button B to confirm.
- *Note after 5 seconds of inactivity setting mode will deactivate*

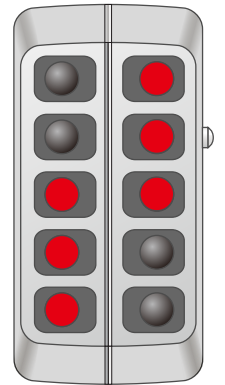

4. Battery Replacement

- This watch uses a CR2032 battery. We recommend that you take the watch to a specialist for battery replacement.
- To maximize battery life, turn the animation OFF.
 - *The battery in your watch may need to be replaced within one year after the date of purchase because it is a factory fitted monitor battery used to check the function and performance of the watch.

5. Cautions

- Your watch is water resistant to 3ATM. Please do not use the watch in the shower, for swimming or for other water related activities.

6. Troubleshooting


- If the watch is not functioning properly, you can reset it by holding buttons A and B together for 3 seconds.

7. Warranty

- This watch is covered by a 3 year manufacturers warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

TENMETSU

取扱説明書

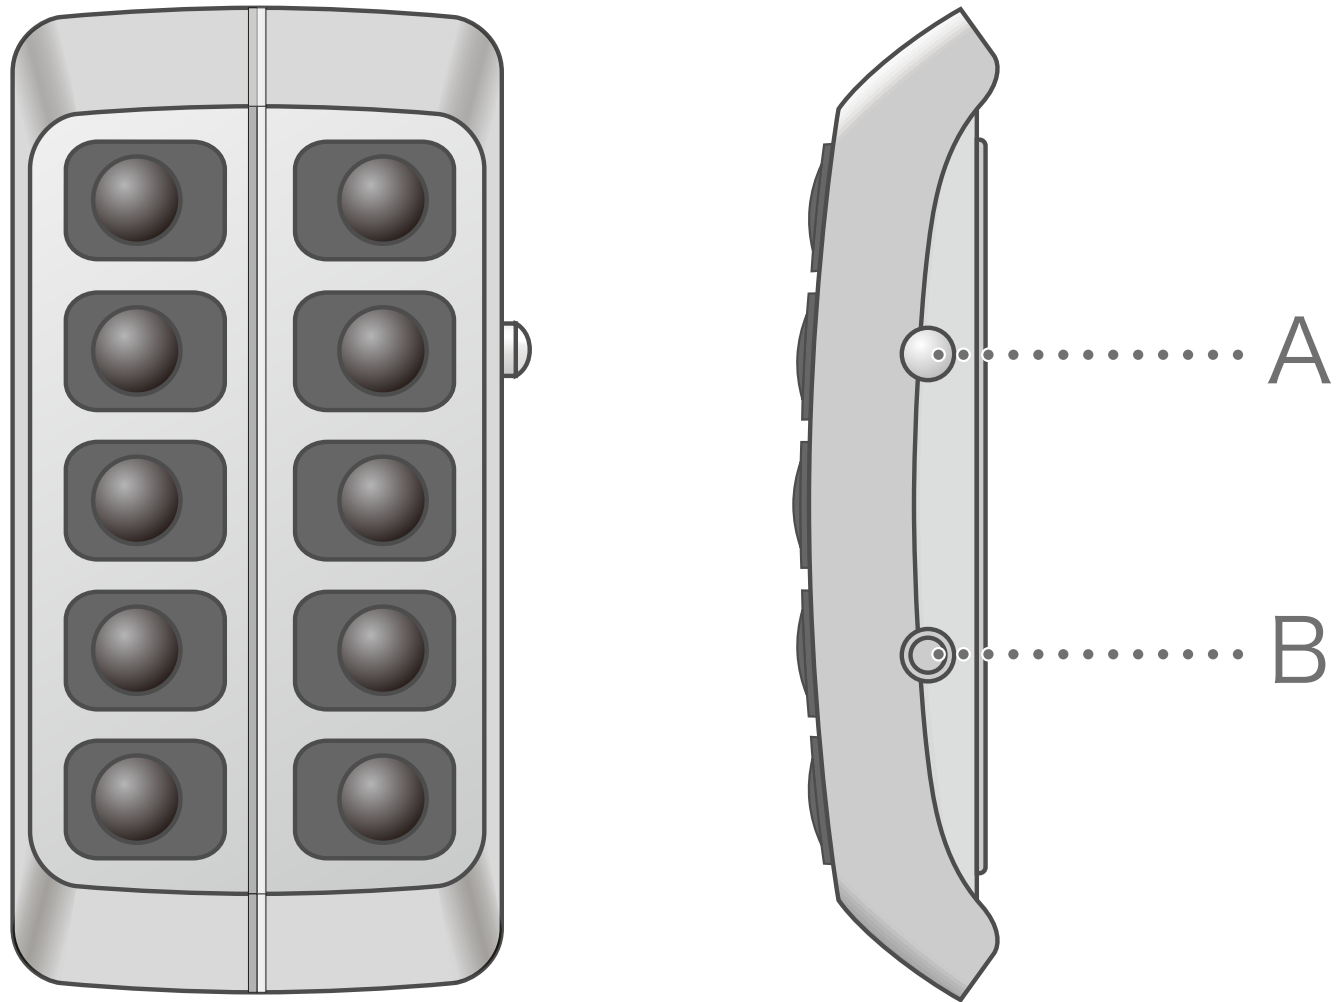


1. 時刻・日付の表示

- ・ A ボタンを 1 回押すと時刻表示がスタートします。
- ・ 表示は、時、分、月、日の順に 4 回に分けて行われます。
- ・ LED の点灯色によって単位が異なり、それぞれをたしたものが数値を表します。

●…15 単位 ●…5 単位 ●…1 単位

※ 時刻・日付を早く知りたい時は、表示中に A ボタンを押すと下図のように次の表示にスキップすることができます。

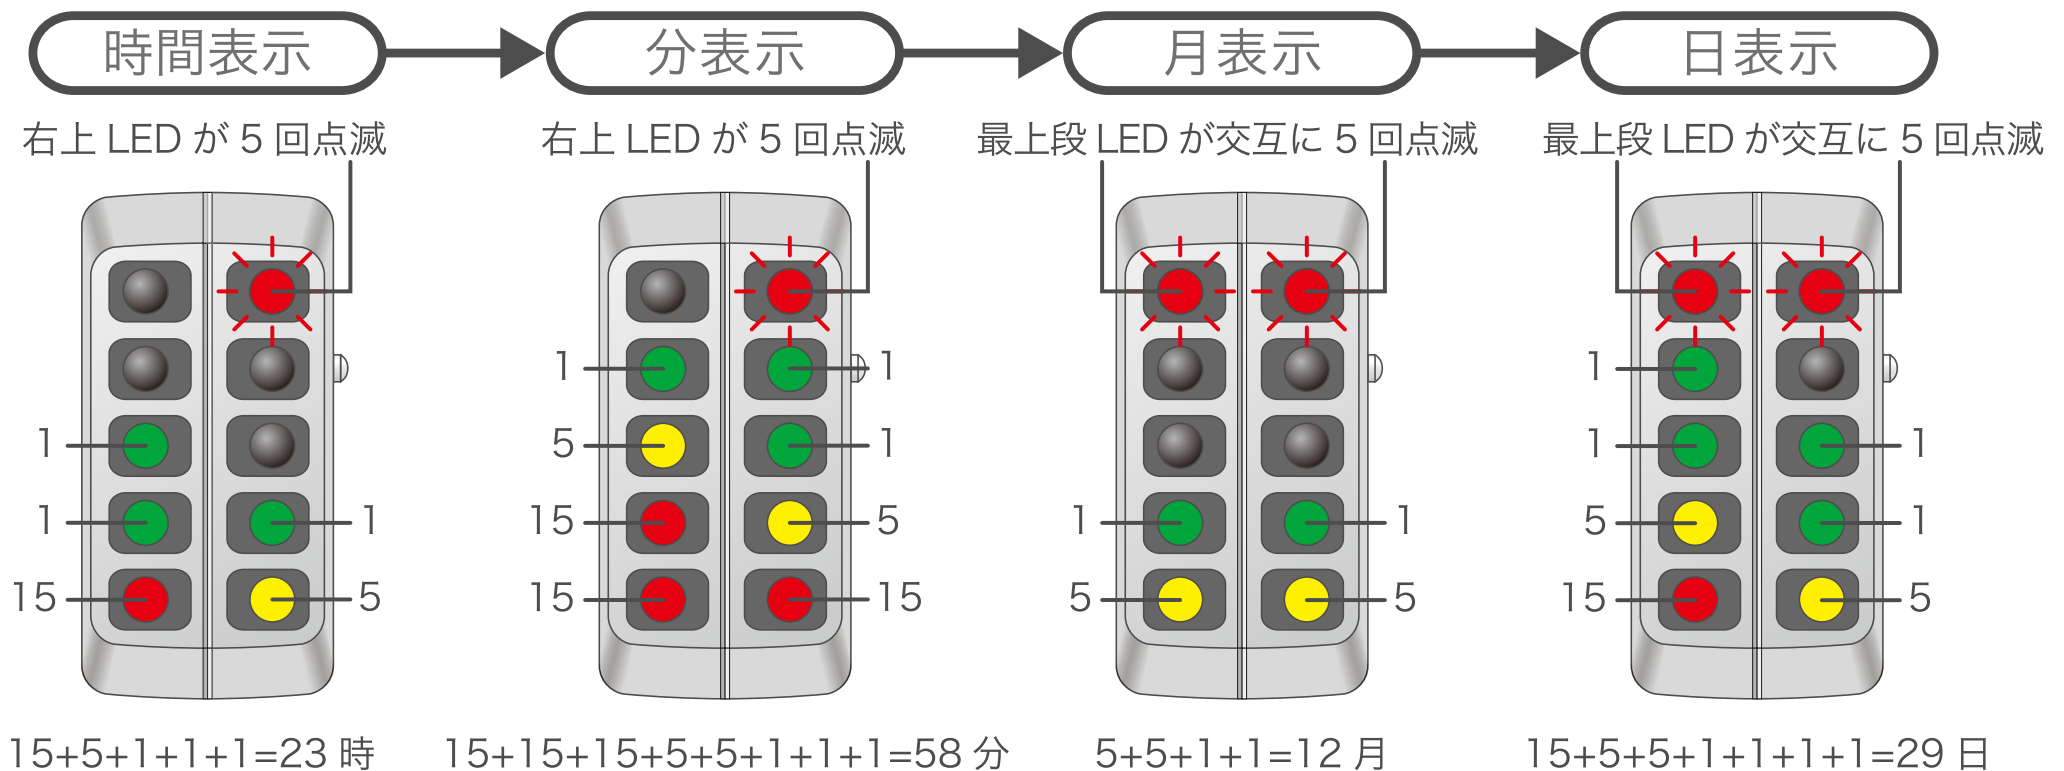


2. 時刻・日付の設定

- ・ 設定箇所が下記の順で表示されます。
- ・ B ボタンで各設定箇所まで移動することができます。
- ・ 設定モードは何も操作しない時間が 5 秒続くと自動的に確定し終了します。

1. 「時」の設定

- ・ B ボタンを 1 回押します。
- ・ A ボタンで 1 時間ずつ増やすことができます。
●…15 単位 ●…5 単位 ●…1 単位
- ・ B ボタンを 1 回押すと確定して次の「分」の設定に移動します。
※ 5 秒間何も操作しないと設定モードは自動的に確定し終了します。


設定時は右上 LED
が 1 カ所点滅します

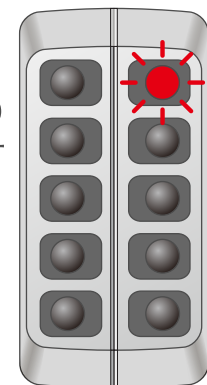

2. 「分」の設定

- ・ A ボタンで 1 分ずつ増やすことができます。
●…15 単位 ●…5 単位 ●…1 単位
- ・ B ボタンを 1 回押すと確定して次の「月」の設定に移動します。
※ 5 秒間何も操作しないと設定モードは自動的に確定し終了します。


設定時は右上 LED
が 1 カ所点滅します

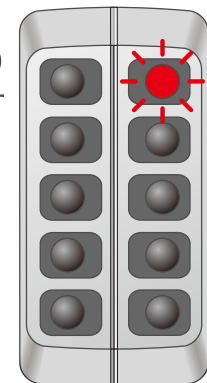

3. 「月」の設定

- ・ A ボタンで 1 月ずつ増やすことができます。
●…5 単位 ●…1 単位
- ・ B ボタンを 1 回押すと確定して次の「日」の設定に移動します。
※ 5 秒間何も操作しないと設定モードは自動的に確定し終了します。


設定時は最上段 LED
が交互に点滅します

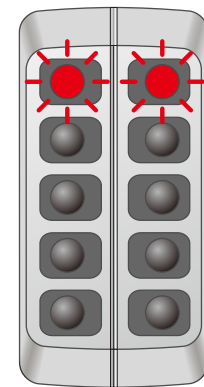

4. 「日」の設定


- ・ A ボタンで 1 日ずつ増やすことができます。
●…15 単位 ●…5 単位 ●…1 単位
- ・ B ボタンを 1 回押すと確定して、5 秒後に設定モードは終了します。

設定時は最上段 LED
が交互に点滅します

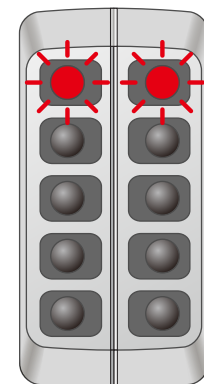

3. アニメーション ON/OFF の設定

- ・アニメーションとは LED の光の動きのことです。時刻表示させた後の 12 分間、1 分毎に自動的に点灯します。
- ・B ボタンを 5 回押してアニメーション設定モードにします。
- ・A ボタンで ON/OFF を選択します。
- ・ON の場合はアニメーションが点灯します。OFF の場合は LED が全点滅します。
- ・B ボタンを 1 回押すと確定して、5 秒後に設定モードは終了します。

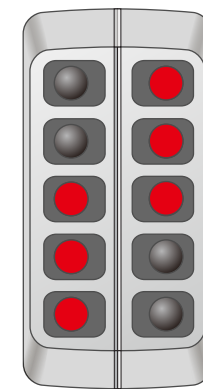

4. 電池交換

- ・本品は CR2032 を使用します。電池交換はお買い上げ店または、取扱店等にご依頼されることをおすすめします。
- ・アニメ設定を OFF にすると電池の消費を少なくすることができます。

※お買い上げ時に組み込まれている電池はモニター用で、上記期間に満たないうちに電池寿命が切れる場合があります。

5. 注意

- ・本品は 3 気圧防水 (日常生活防水) です。シャワーやスイミング、または水を扱う際のご使用は避けてください。

6. 故障かなと思ったら

- ・時刻や日付が正しく表示されないなど故障の疑いがある場合は、修理に出される前に一度、初期化をお試し下さい。A ボタンと B ボタンを同時に 3 秒間押し続けると、全ての設定が初期化されます。

7. 保証

- ・生産時に生じた不良にのみ 3 年間の無償修理を保証します。不注意による故障、破損、水害、電池の交換等は保証期間内であっても有償修理となりますので、ご了承ください。