SLIK®

CLAMP HEAD 38/32

Operating Instructions

Congratulations on the purchase of a Slik Clamp Head.
The Slik Corporation has designed your Clamp Head to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use.
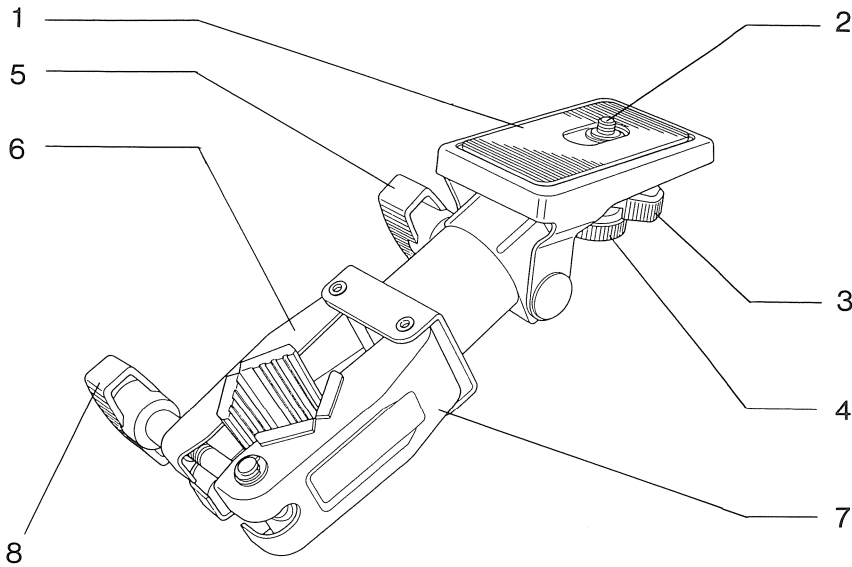
Please take a few moments to read this instruction sheet carefully so you can take full advantage of your Clamp Head's many fine features.
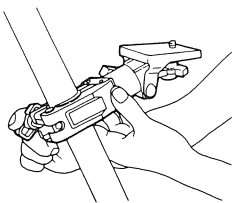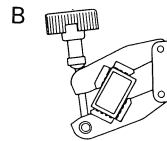
7134U

Components

1. Camera Platform
2. Camera Mounting Screw
3. Tightening Knob
4. Camera Locking Knob
5. Camera Platform Locking Knob
6. Clamp (A)
7. Clamp (B)
8. Clamp Lock

The aluminium tube included with the clamp is packing material and should be discarded.
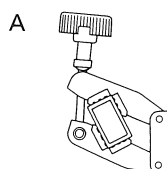
Attaching To A Leg
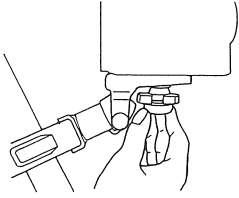

Clamp to leg, and tighten clamp lock.

When attaching the clamp to a rectangular leg section, fellow Figure A. Figure B shows the incorrect way to attach which can result in the clamp coming loose during tripod operation.
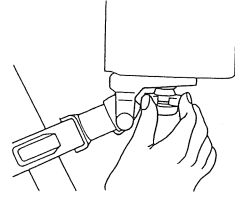
Note: Over tightening can cause damage to the legs.
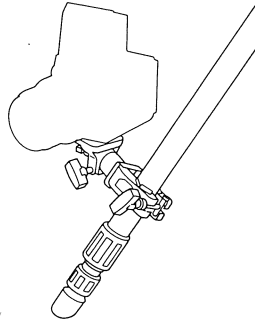
Attaching A Camera

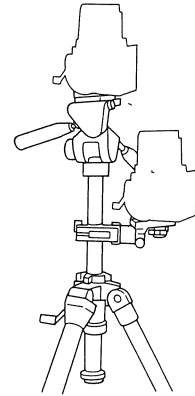Hold camera and engage threads by turning the Camera Locking Knob.

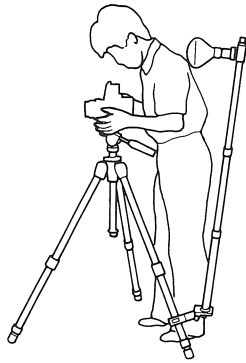Tighten camera by turning the Tightening Knob.

Example of Use

Low Angle Shooting.

Using two cameras on one tripod.

Use as a light boom with a SLIK Unipod/Extension Post.

How to Care for Your Product

· Do NOT apply any oil, grease to this product.
· To clean, use a mild detergent on a soft cloth.
· Do NOT bring close to fire. Avoid extreme heat, such as leaving it in a car on hot summer day.

Printed in Japan.