


USER'S MANUAL AND
PROGRAMING GUIDE

HDL-32E
High Definition LiDAR™ Sensor

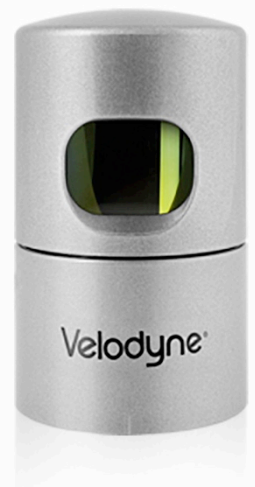

Velodyne®

1	SAFETY NOTICES
3	INTRODUCTION
4	PRINCIPLES OF OPERATION
5	SETUP
8	USAGE
9	External GPS Time Synchronization
11	Packet Format and Status Byte for GPS Time Stamping
11	Time Stamping Accuracy Rates
11	Taser Timing
12	Laser Firing Sequence
13	TROUBLESHOOTING
13	SERVICE AND MAINTENANCE
14	SPECIFICATIONS
16	APPENDIX A: Digital Sensor Recorder (DSR)
18	APPENDIX B: HDL-32E Sample Data Packets
24	APPENDIX C: Coordinate Calculation Algorithm Sample Code
25	APPENDIX D: Calibration and Orientation
26	APPENDIX E: Ethernet Transit Timing Table

IMPORTANT SAFETY INSTRUCTIONS



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN




Caution

To reduce the risk of electric shock and to avoid violating the warranty, do not open sensor body. Refer servicing to qualified service personnel.

The lightning flash with arrowhead symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

1. **Read Instructions** — All safety and operating instructions should be read before the product is operated.
2. **Retain Instructions** — The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** — All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions** — All operating and use instructions should be followed.
5. **Servicing** — The user should not attempt to service the product beyond what is described in the operating instructions. All other servicing should be referred to Velodyne.

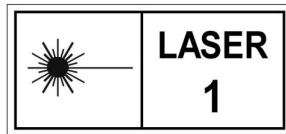

HDL-32E 345 Digital Drive
Velodyne LiDAR, Inc. Morgan Hill, CA 95037

Complies with 21 CFR 1040.10 and 1040.11
except for deviations pursuant to Laser
Notice No. 50, dated 24 June 2007.

Complies with IEC 60825-1:2014
Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007
Compliances with UL50/50E and CSA.C22.NO.94.2-07 (NEMA Type 4 Enclosure)

WARNING

**RISK OF DAMAGE OR FAILURE
DO NOT DIRECT LASERS TOWARD
ONE ANOTHER**

CAUTION

**Use of controls or
adjustments or performance
of procedures other than
those specified herein may
result in hazardous
radiation exposure**

CONSIGNES DE SÉCURITÉ IMPORTANT



ATTENTION
RISQUE DE CHOC ÉLECTRIQUE.
NE PAS OUVRIR



Attention

Pour réduire le risque de choc électrique et pour éviter de violer la garantie, ne pas le corps de capteur ouvert. Confiez l'entretien à du personnel qualifié.

L'éclair avec le symbole flèche est destiné à alerter l'utilisateur de la présence d'une "tension dangereuse" dans l'enceinte du produit qui peut être d'une ampleur suffisante pour constituer un risque d'électrocution pour les personnes.

Le symbole du point d'exclamation est destiné à alerter l'utilisateur de la présence d' exploitation et de maintenance (entretien) dans la documentation accompagnant le.

1. **Lisez les instructions de sécurité** -Tous et instructions de fonctionnement doivent être lues avant d'utiliser le produit.
2. **Conservez les instructions** - Les instructions de sécurité et de fonctionnement doivent être conservées pour référence ultérieure.
3. Tenez compte de mises en garde les avertissements sur le produit et dans les instructions de fonctionnement doivent être respectés.
4. **Suivez les instructions** -Tous les instructions de fonctionnement et d'utilisation doivent être.
5. **Entretien** - L' utilisateur ne doit pas tenter de réparer le produit au-delà de ce qui est décrit dans les instructions de fonctionnement. Toutes les autres réparations doivent être confiées à Velodyne.



ADVERTISSEMENT



**RISQUE DE LÉSIONS OU DE
L'ÉCHEC. AVEZ- LASERS NON
DIRECTS VERS L'AUTRE**



ATTENTION



**L'utilisation de commandes
ou de réglages
ou l'exécution de
procédures autres que ceux
spécifiés ici
peut entraîner une
exposition à des**

Congratulations on your purchase of a Velodyne HDL-32E High Definition LiDAR Sensor. This sensor provides state-of-the-art 3D imaging.

This manual describes how to set up and operate the HDL-32E, covers installation and wiring, addresses output packet construction and interpretation, along with GPS installation notes.

This manual is undergoing constant revision and improvement – check www.velodynelidar.com for updates.



Principles of Operation

The HDL-32E creates 360° 3D images by using 32 laser/detector pairs whose housing rapidly spins to scan the surrounding environment. This design allows for the lasers to each fire thousands of times per second, providing a rich, 3D point cloud.

Digital signal processing and waveform analysis provide high accuracy, extended distance sensing and intensity data.

The HDL-32E uses a direct drive motor system, employing no belts or chains in the drive train, to improve reliability and reduce maintenance. The unit provides:

- A 360° horizontal field of view (FOV)
- A 41.3° vertical FOV
- Usable returns up to 70 meters

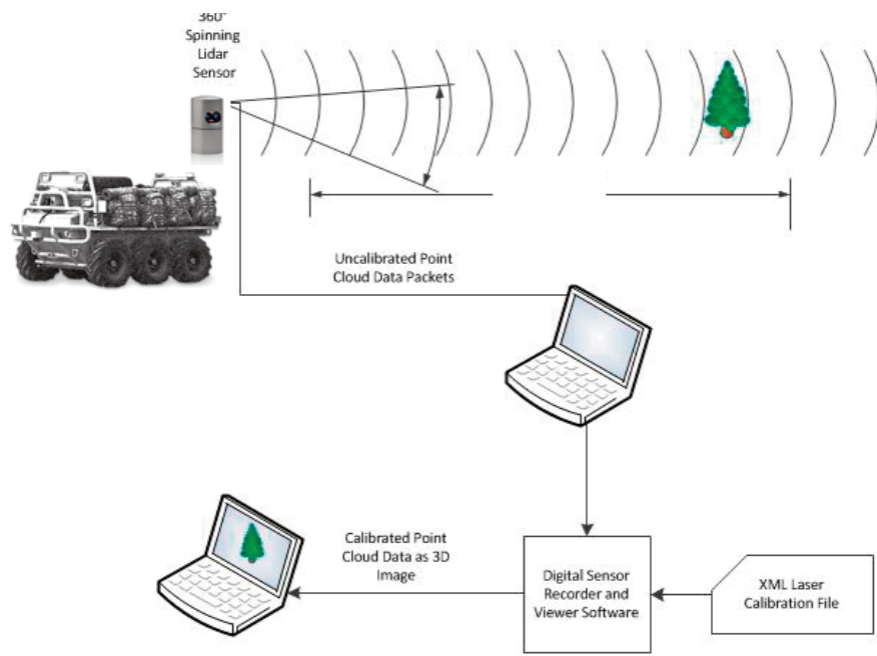


Figure 1. Overview of the LiDAR HDL-32E 3D Imaging System.

This section describes the standard set up assuming you are connecting the sensor to a standard computer or laptop and mounting the sensor on a vehicle. For other connections and mounting locations, please contact Velodyne for technical assistance.

The standard setup involves:

1. Unpacking the shipping case contents.
2. Securely mounting the sensor base to a vehicle or other scanning platform.
3. Connecting power to the sensor.
4. Connecting the sensor's data output to the computer.

Case Contents

The shipping case may contain some or all of the items listed below:

- HDL-32E sensor unit with approximately 3 meter cable terminated at an interface box.
- Desktop AC/DC power adapter.
- AC cord.
- 1 meter Ethernet cable.
- Garmin GPS-18LV GPS receiver with 5 meter cable.
- USB Flash Drive with:
 - User manual. Check www.velodynelidar.com for updates.
 - Additional Data

Mount Base

The sensor base provides mounting holes on the base. The sensor can be mounted at any angle from 0° to 360° with respect to the sensor base.

Refer to the figure below for location of the four 10-32 threaded, 3/8" deep mounting holes.

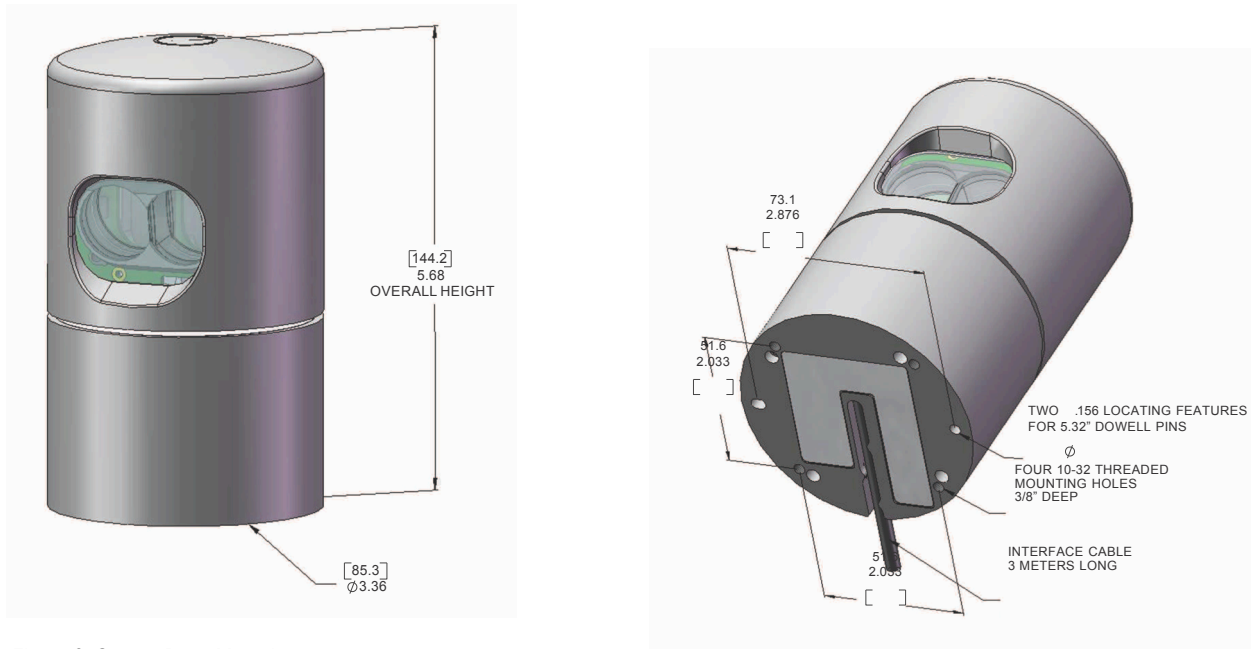


Figure 2: Sensor Base Mounting

Connect Power and Computer

The sensor units are commonly used in vehicle applications where standard 12 volt, 2 amp power is readily available.

1. Connect the interface module to power.
2. Connect the Ethernet connector to a standard PC or laptop RJ45 Ethernet port.

Operate

Before operating the sensor, make sure that:

- the sensor is in acceptable environmental conditions
- the sensor is securely mounted

Weather

The unit is weatherproofed to withstand wind, rain and other adverse weather conditions. The unit's spinning motion helps it shed excess water from the front window that could hamper performance. Refer to the specifications page for operational and storage temperature ranges.

Shock and Vibration

Be sure the unit is mounted securely to withstand vibration and shock without risk of detachment. The unit does not need shock proofing.

The unit is designed to withstand standard automotive G-forces; (500 m/sec² amplitude, 11 msec duration shock and 3 Grms 5 Hz to 2000 Hz vibration).

Wiring

The HDL-32E comes with an integral cable that is terminated at an interface box. The cable is approximately 3 meters (10') in length.

The interface box provides connections for Ethernet, power and GPS inputs.

Power. The 2.1 mm barrel plug jack fits the AC/DC power adapter included. The center pin is positive polarity.



Note: The HDL-32E does not have a power switch. It spins and operates whenever power is applied.

Ethernet. This standard RJ45 Ethernet connector is designed to connect to a standard PC.



Note: The HDL-32E is only compatible with network cards that have either MDI or AUTO MDIX capability.

GPS. The GPS connector fits the GPS receiver included. If you wish to wire your own GPS receiver, refer to the labeled connector within the interface box.

Cable. The cable is permanently attached from the sensor to the interface box. .

The HDL-32E sensor needs no configuration, calibration, or other setup to begin producing usable data. Once the unit is mounted and wired, supplying it power will cause it to start scanning and producing data packets. The quickest way to watch the HDL-32E in action is to use Digital Sensor Recorder (DSR), the viewer software included with the unit. DSR reads in the packets from the HDL-32E over Ethernet, performs the necessary calculations to determine point locations, then plots the points in 3D on the viewer's PC. If you have never used the HDL-32E before, this is the recommended starting point. For more on installing and using DSR, see Appendix A. You can observe both distance and intensity data through DSR.

Most users, however, will elect to create their own application-specific point cloud tracking and plotting and/or storage scheme. There are several fundamental steps to this process:

1. **Establish communication with the HDL-32E**
2. **Create a calibration table from the included db.xml data file**
3. **Parse the packets for rotation, distance and intensity data**
4. **Apply the vertical angle calibration factors to the data**
5. **Plot or store the data as needed**

Each of these steps is described in detail, below.

1. **Establish communication with the HDL-32E.** The HDL-32E outputs two separate broadcast UDP packets. (refer to page 16 in this manual). By using a network monitoring tool such as Wireshark you can capture and observe the packets as they are generated by the unit.

HDL-32 MAC ID and IP address format:

Mac ID

Each HDL-32E has a unique MAC address based on the serial number, with the last four hex digits mapping to the serial number of the unit. The following MAC ID shows serial number 4452:

60 76 88 20 11 64

IP Address

The Source IP address for the HDL-32E units maps to the last four digits in the Mac ID (and hence the serial number). In the above example, the Source IP address would be represented by IP address:

192.168.17.100

In this example, the 11 and 64 are shown as decimal numbers for the purposes of expressing the IP address.

For all HDL-32E units, the destination IP address remains fixed at 192.168.3.255.

2. **Create an internal calibration table from the included db.xml data file.** This table must be built and stored internal to the point-cloud processing software.

Alternatively, the calibration data can be found in the included db.xml file found on the CD included with the HDL-32E. The calibration data for vertical Correction is the vertical correction angle for each laser, as viewed from the back of the unit and stated in degrees. Positive values have the laser pointing up and negative values have the laser pointing down.

The calibration table, once assembled, will contain 64 instances of the calibration values to interpret the packet data to calculate each point's position in 3D space. Use only the first 32 instances.

3. Parse the packets for rotation, distance and intensity data. Each HDL-32E packet has a 1206 byte payload consisting of 12, 100 byte records followed by 6 bytes of GPS time stamp data. The zero degree position is 90 degrees to the right of the interface cable when looking at the bottom.

Each 100 byte record contains first a start identifier, then a two byte rotational value, followed by 32 3-byte combinations that report on each laser fired. Two bytes report distance to the nearest .2 cm, and the remaining byte reports intensity on a scale of 0 - 255.

There are 12 100 byte records. For more on packet construction, see Appendix B.

4. Apply the calibration factors to the data. Each of the HDL-32E's lasers is fixed with respect to vertical angle. For each data point issued by the sensor, vertical correction factors must be applied to determine the point's location in 3D space referred to by the return.



Note: The minimum return distance for the HDL-32E is approximately 1 meter. Ignore returns closer than this.



Note: It may be useful to timestamp the data so it can be referenced and coordinated with other sensor data later. The HDL-32E has the capability to synchronize its data with GPS precision time.



Note: There are no user service or maintenance procedures for the Velodyne HDL-32E. Velodyne does offer a preventative maintenance service for a fee. For service or maintenance, please contact Velodyne at +1 (408) 465-2800, or log on to our website at www.velodynelidar.com.

External GPS Time Synchronization

The HDL-32E can synchronize its data with precision GPS-supplied time pulses to enable users to ascertain the exact firing time of each laser in any particular packet.

This capability requires a GPS receiver generating a sync pulse and the \$GPRMC NMEA record over a dedicated RS-232 serial port. The output from the GPS receiver is connected to the HDL-32E via the user interface box. The customer can use the GPS receiver supplied with the HDL-32E or the customer can adapt their GPS receiver to provide the required sync pulse and NMEA record.

GPS Receiver Option 1: Velodyne Supplied GPS Receiver

A GPS receiver that is pre-programmed by Velodyne, is provided to HDL-32E users. This receiver is pre-wired with a connector that plugs into the HDL-32E interface box, and pre-programmed to output the correct GPS record and sync pulse.

GPS Receiver Option 2: Customer's GPS Receiver

Under this option the customer must configure their GPS device to issue a once-a-second synchronization pulse, typically output over a dedicated wire, and issue a once-a-second \$GPRMC NMEA record. No other output can be accepted from the GPS device. Further, the sync pulse and NMEA record must be issued sequentially. The sync pulse length is not critical (typical lengths are between 20ms and 200ms), but the \$GPRMC record must start between 50ms and 500ms after the end of the sync pulse.



Note: The \$GPRMC record can be configured for either hhmss format or hhmss.s format.



Note: The connector within the supplied interface box can be used to interface the GPS receiver, or it can be wired directly as indicated within the box.

The images below show the GPS receiver included with the HDL-32E.

GPS EQUIPMENT



Interface Box Front & Back View



Interface Box
Top view



Interface Box
Front view

Packet Format and Status Byte for GPS Time Stamping

The 6 extra bytes at the end of the HDL-32E data packet are used to report GPS timing. For every packet, the last 6 bytes are formatted as follows:

- 4 bytes: 32 bit unsigned integer time stamp. This value represents microseconds from the top of the hour to the first laser firing in the packet.
- 2 bytes: blank

Time Stamping Accuracy Rules

The following rules and subsequent accuracy apply for GPS time stamping:

1. If the GPS isn't connected (GPS Status 0), the HDL-32E starts running on its own clock starting at midnight Jan 1 2000. Expect a drift of about 5 seconds per day under this method. This date and time data is reflected in the H, M, S, D, N, and Y data values. Also note that the HDL-32E clock does not correct for leap years.
2. When the GPS is connected, the \$GPRMC NMEA record is reported in the second data packet as described in Appendix B. GPS time syncing runs in one of two modes:
 - a. The GPS has an internal clock that runs for several weeks that will be used first. The accuracy is as good as the GPS device employed.
 - b. When the GPS achieves lock, the HDL-32E clock will then be within +/-50ps of the correct time at all times.
3. If the GPS is then disconnected, the HDL-32E will continue to run on its own clock and be subject to a drift of approximately 5 seconds per day.

Laser Timing

If the GPS timestamp feature is employed, it may be useful to determine the exact firing time for each laser so as to properly time-align the HDL-32E point cloud with other data sources.

The Ethernet packet is assembled in real time, therefore the encoder angle is associated with the first laser shot in each collection of 32 laser shots, while the time stamp is reported in the last 6 bytes of the packet relates to the last shot of the last group in the entire sequence (of 12 records). The time stamp is synchronized to the leading edge of the GPS signal, as provided by the Garmin GPS-18LV GPS receiver or the user's GPS receiver programmed as described on page 7.

Lasers are fired on a clock running at 1.152 psec cycle time. There are 40 of these time periods per 32 firings with the dead time being used to recharge the lasers, making the total time to fire all 32 lasers 46.08 psec. There are 12 of these 32-laser firing groups per packet, for a total packet time of 552.96 psec. This totals to approximately 1808 packets per second, or approximately 694,292 laser shots per second. A table can be found in Appendix E showing timing for each laser shot based on these calculations.

Laser Firing Sequence

The laser firing order is the same as the order in the Ethernet packet. The most downward laser fires first, followed by the interleaved firings from the lower and upper "banks" of 16 lasers, as follows:

Firing order	DSR #	Vertical angle
1	0	-30.67
2	1	-9.33
3	2	-29.33
4	3	-8.00
5	4	-28.00
6	5	-6.66
7	6	-26.66
8	7	-5.33
9	8	-25.33
10	9	-4.00
11	10	-24.00
12	11	-2.67
13	12	-22.67
14	13	-1.33
15	14	-21.33
16	15	0.00
17	16	-20.00
18	17	1.33
19	18	-18.67
20	19	2.67
21	20	-17.33
22	21	4.00
23	22	-16.00
24	23	5.33
25	24	-14.67
26	25	6.67
27	26	-13.33
28	27	8.00
29	28	-12.00
30	29	9.33
31	30	-10.67
32	31	10.67

The interleaving firing pattern is designed to avoid potential ghosting caused primarily by retro-reflectors.



Note: Laser #9 from the top of the stack, or DSR #15, is set at a 0 vertical angle. This laser can be used as a reference to calibrate pitch and yaw of the sensor relative to the vehicle.

Use this chart to troubleshoot common problems with the HDL-32E.

Problem	Resolution
Unit doesn't spin	<p>Verify power connection and polarity.</p> <p>Verify proper voltage – should be between 9 and 32 volts drawing a minimum of one amp.</p> <p>Inspect the fuse in the interface module. Replace if necessary.</p>
Unit spins but no data	<p>Verify Ethernet wiring.</p> <p>Verify packet output using another application (e.g. Ethereal/Wireshark).</p> <p>Verify network settings. Set a static IP address in network settings. 192.168.3.255.</p> <p>Verify that no security software has been installed which may block Ethernet broadcasts.</p>

SERVICE AND MAINTENANCE

There are no user service or maintenance requirements or procedures for the Velodyne HDL-32E. Opening the sensor or severing the cable between the sensor and interface box will void the warranty.

For service or maintenance, please contact Velodyne at +1 (408) 465-2800, or log on to our website at www.velodynelidar.com.

Laser:	<ul style="list-style-type: none"> • Class 1 - eye safe • 903 nm wavelength • Time of flight distance measurement • Measurement range 70 m (1 m to 70 m) • Max Altitude of Operation 2000m
Sensor:	<ul style="list-style-type: none"> • 32 laser/detector pairs • +10.67 to -30.67 degrees field of view (vertical) • 360 degree field of view (horizontal) • 10 Hz frame rate • Operating temperature, -10° C to +60° C • Storage temperature, - 40° to 105° C • Accuracy: <2 cm (one sigma at 25 m) • Angular resolution (vertical) ~1.33° • Angular resolution (horizontal) ~0.16° at 600 rpm
Mechanical:	<ul style="list-style-type: none"> • Power: 12V @ 2 Amps • Operating voltage: 9-32 VDC • Weight: <2 kg • Shock: 500 m/sec² amplitude, 11 msec duration • Vibration: 5 Hz to 2000 Hz, 3 Grms • Environmental Protection: IP67/Type 4
Output:	<ul style="list-style-type: none"> • Approximately 700,000 points/second • 100 Mbps Ethernet connection • UDP packets <ul style="list-style-type: none"> - distance - rotation angle • Orientation – internal MEMS accelerometers and gyros for six-axis motion correction – external correction • GPS time-synchronized with included GPS receiver
Dimensions: (Height//Diameter)	<ul style="list-style-type: none"> • Unit: 5.68" x 3.36" [149.86mm x 85.3mm]
Sensor Weight	<ul style="list-style-type: none"> • 2.9 lbs [1.3 Kg]
Shipping Weight: (approx.)	<ul style="list-style-type: none"> • 14.35 lbs [6.5 Kg]
Wavelength	<p>903nm</p> <p>min/max range is 896/910 nm</p>
Pulse Duration/ Repetition Rate	<p>6ns (duration)</p> <p>1.44 μs* 32 lasers per pattern for a period of 46.1 μs=21.7KHz (repetition)</p>
Maximum Power/ Energy Output	<p>31.4 Watt.(0.19 uJ)</p>

Digital Sensor Recorder (DSR)

DSR is a windows-based 3D point cloud visualization software program designed for use with the HDL-32E. This software is an “out of the box” tool for the rendering and recording of point cloud data from the HDL unit.

You can develop visualization software using the DSR as a reference platform. A code snippet is provided on the CD to aid in understanding the methods at which DSR parses the data points generated by the HDL sensor.

Install

To install the DSR on your computer:

1. Locate the DSR executable program on the provided CD.
2. Double click on this DSR executable file to begin the installation onto the host computer. We recommend that you use of the default settings during the installation.



Note: Refer to the “Read me” file on the supplied CD for Windows Vista and Windows 7 installations.

Calibrate

The db.xml file provided with the HDL unit contains correction factors for the proper alignment of the point cloud information gathered for each laser. When implemented properly, the image viewable from the DSR is calibrated to provide an accurate visual representation of the environment in which the sensor is being used. Also use these calibration factors and equations in any program using the data generated by the unit.

Note: The HDL32E does not require additional calibration.

Live Playback:

For live playback, first secure and power up the HDL-32E sensor so that it is spinning. Connect the RJ45 Ethernet connector to your host computer's network connection. You may wish to utilize auto DNS settings for your computers network configuration.

DSR desktop icon =



Open DSR from your desktop icon created during the installation. Pull down the “Options” menu and select the proper input device. Go to “Options” again and deselect the “Show Ground Plane” option. (Leave this feature off for the time being or until the ground plane has been properly adjusted).

You can now go to “Options/Properties” to change the individual settings for each LASER channel if so desired.

REFRESH button =



Provided that your computer is now receiving data packets, click on the Refresh button to start live viewing of a point cloud. The initial image is of a directly overhead perspective. See page 15 for mouse and key commands used to manipulate the 3D image within the viewer.



Note: The image can be manipulated in all directions and become disorienting. If you lose perspective, simply press F1 to return to the original view.

Recording Data:

RECORD button =




Once the input of streaming data has been confirmed through the live playback feature, click on the Record button and the program will request the name and location for the pcap file to be created. Recording will begin immediately once the file information has been entered. Click on the Record button again to discontinue the capture. One can string multiple recordings together on the same file by performing the Record function repeatedly. A new file name will not be requested until after the session has been aborted.





Note: An Ethernet capture utility such as Wireshark can also be used as a pcap capture utility.

Playback of Recorded files:

Use the File > Open command to open a previously captured pcap file for playback. The DSR playback controls are similar to any DVD/VCR control features.



Press the Play button to render the file. The Play button will alternate to Pause when in playback mode.



Use the Forward and Reverse buttons to change the direction of playback.



Note: The X, Y, Z and distance figures at the bottom of the image represent the distance of the x, y, z crosshairs with respect to the origin point indicated by the small white circle. The concentric gray circles and grid lines represent 10 meter increments from the sensor.

Following is an example image of the calibration values as seen in DSR/File/Properties screen. Values will be different than those on your CD.

ID	Enabled	IsLocked	Color	Initial X (mm)	Dist. Per Com. (mm)	Dist. Per Com. (mm)	Dist. Com. in X (mm)	Dist. Com. in Y (mm)	Vert. Offset Com. (mm)	Horiz. Offset Com. (mm)	Max. Offset Com. (mm)	Max. Offset Com. (mm)	Max. Offset Com. (mm)	Max. Offset Com. (mm)	Max. Offset Com. (mm)
0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	30.670000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	-9.300000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
2	<input checked="" type="checkbox"/>	<input type="checkbox"/>	-7.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
3	<input checked="" type="checkbox"/>	<input type="checkbox"/>	-8.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
4	<input checked="" type="checkbox"/>	<input type="checkbox"/>	25.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
5	<input checked="" type="checkbox"/>	<input type="checkbox"/>	4.470000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
6	<input checked="" type="checkbox"/>	<input type="checkbox"/>	-5.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
7	<input checked="" type="checkbox"/>	<input type="checkbox"/>	-5.100000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
8	<input checked="" type="checkbox"/>	<input type="checkbox"/>	25.530000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
9	<input checked="" type="checkbox"/>	<input type="checkbox"/>	-9.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
10	<input checked="" type="checkbox"/>	<input type="checkbox"/>	-9.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
11	<input checked="" type="checkbox"/>	<input type="checkbox"/>	-2.670000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
12	<input checked="" type="checkbox"/>	<input type="checkbox"/>	22.470000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
13	<input checked="" type="checkbox"/>	<input type="checkbox"/>	-1.300000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
14	<input checked="" type="checkbox"/>	<input type="checkbox"/>	-21.200000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
15	<input checked="" type="checkbox"/>	<input type="checkbox"/>	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
16	<input checked="" type="checkbox"/>	<input type="checkbox"/>	20.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
17	<input checked="" type="checkbox"/>	<input type="checkbox"/>	7.200000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
18	<input checked="" type="checkbox"/>	<input type="checkbox"/>	-10.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
19	<input checked="" type="checkbox"/>	<input type="checkbox"/>	2.070000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
20	<input checked="" type="checkbox"/>	<input type="checkbox"/>	17.530000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
21	<input checked="" type="checkbox"/>	<input type="checkbox"/>	4.100000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
22	<input checked="" type="checkbox"/>	<input type="checkbox"/>	-10.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
23	<input checked="" type="checkbox"/>	<input type="checkbox"/>	5.200000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
24	<input checked="" type="checkbox"/>	<input type="checkbox"/>	14.470000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
25	<input checked="" type="checkbox"/>	<input type="checkbox"/>	9.470000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
26	<input checked="" type="checkbox"/>	<input type="checkbox"/>	-11.200000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
27	<input checked="" type="checkbox"/>	<input type="checkbox"/>	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000
28	<input checked="" type="checkbox"/>	<input type="checkbox"/>	12.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000	0.000000

Figure 3. Calibration values as seen in DSR/File/Properties

DSR Key Controls**Zoom:**

Z = Zoom in

Shift, Z = Zoom out

Z Axis Rotation:

Y = Rotate CW

Shift, Y = Rotate CCW

X Axis Rotation:

P = Rotate CW

Shift, P = Rotate CCW

Y Axis Rotation:

R = Rotate CW

Shift, R = Rotate CCW

Z Shift:

F = Forward

B = Back

X Shift:

L = Left

H = Right

Y Shift:

U = Up

D = Down

Aux. Functions:

Ctrl, (Z,Y,P,R,F,B,L,H,U,D) Direction = Fine Movement

Alt, (Z,Y,P,R,F,B,L,H,U,D) Direction = Very Fine Movement

DSR Mouse Controls**Rotational:**

Left Button/Move

Slide:

Right Button/Move

Zoom:

Scroll forward = Zoom In

Scroll backward = Zoom Out

Data Packet Format

The HDL-32E outputs two UDP Ethernet packets — a data packet containing laser firing data located on Port 2368 and a positioning packet which contains GPS and positioning data located on Port 8308. The packet at Port 2368 contains a header, a data payload of firing data and status data. Data packets are assembled with the collection of all firing data for twelve laser firing sequences. The laser distance and intensity data is collected in the same staggered order (0, 16, 1, 17 . . . 14, 30, 15, 31) as the laser is firing. The data packet is then combined with status and header data in a UDP packet transmitted over Ethernet. The firing data is assembled into the packets in the firing order, with multi-byte values transmitted least significant byte first.

The status data always contains a GPS 4 byte timestamp representing milliseconds from the top of the hour. In addition, the status data contains two reserved bytes not used at this time.

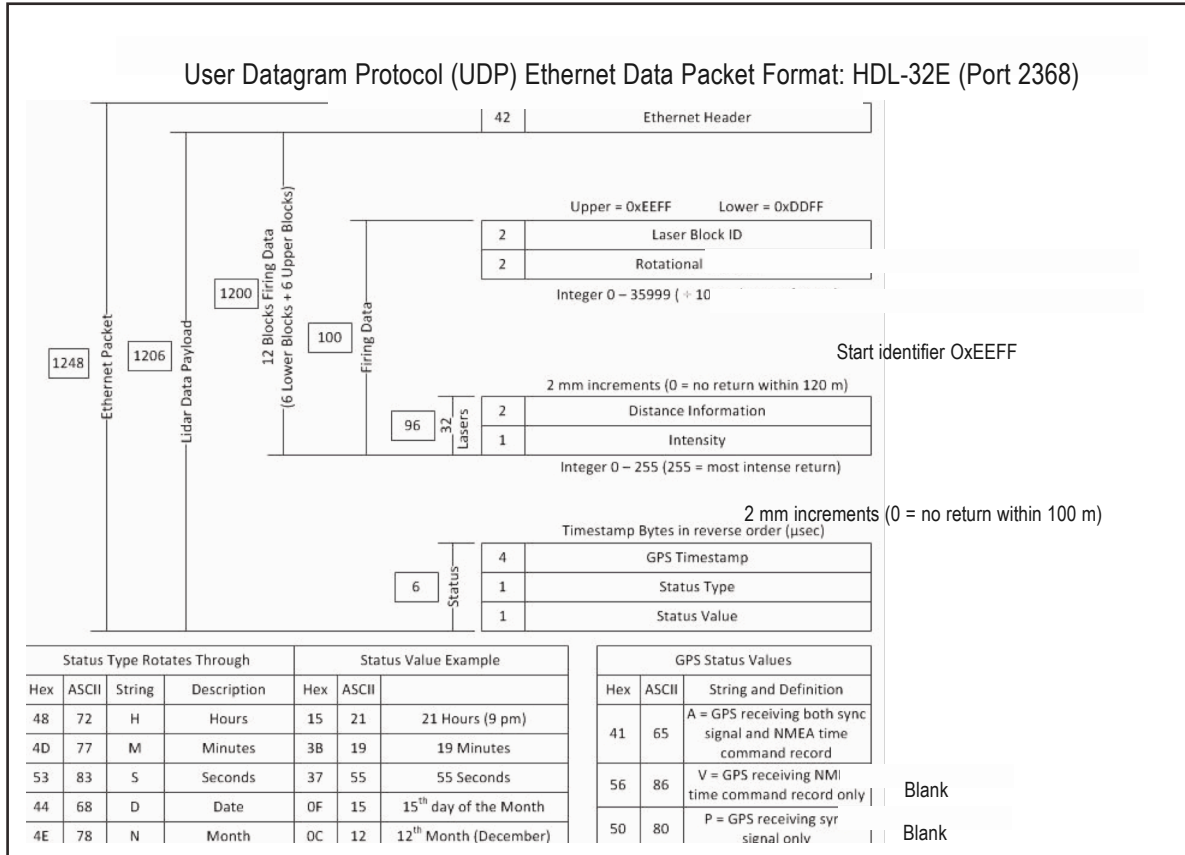


Figure B1.

Positioning Packet

Using outputs from onboard gryometers and 2-axis accelerometers, orientations shown below in Figure B2, the positioning ethernet Packet provides motion data (rotational and acceleration) for the stationary base of the HDL-32E unit. See the User Datagram Protocol (UDP) Positioning Ethernet Packet Format: HDL-32E, Figure B3, for interpretation of data output.

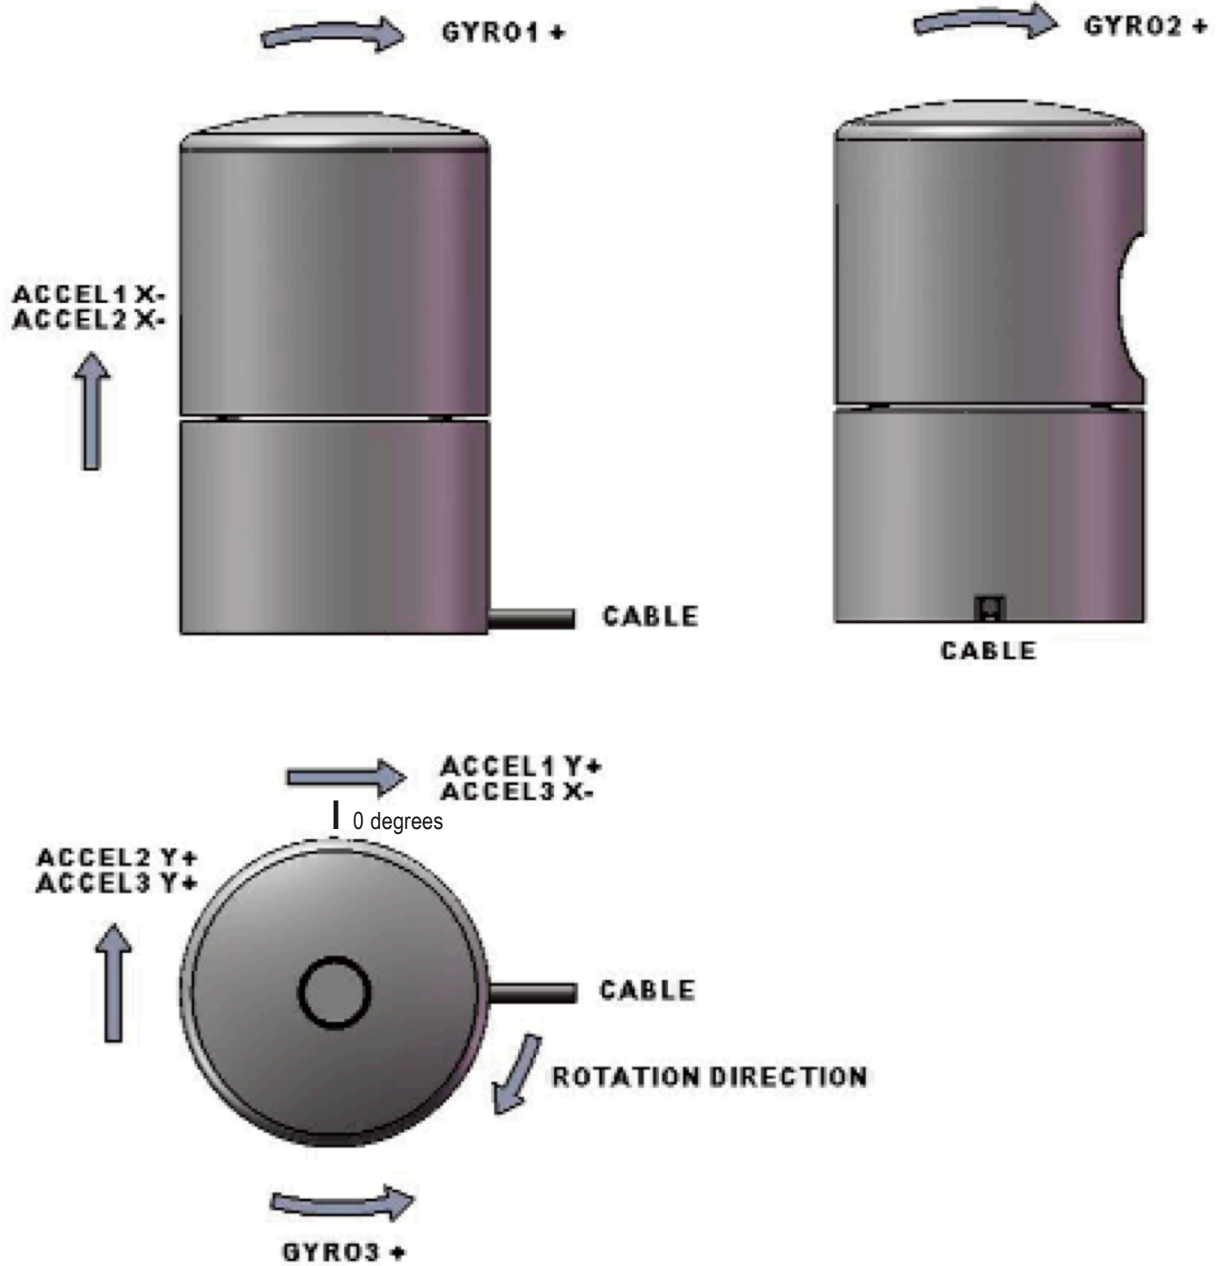


Figure B2.

Note: Each gyro incorporates a 2-axis accelerometer which results in redundancy in some axial directions.

User Datagram Protocol (UDP) Positioning Ethernet Packet Format: HDL 32E
 Destination port: 8308

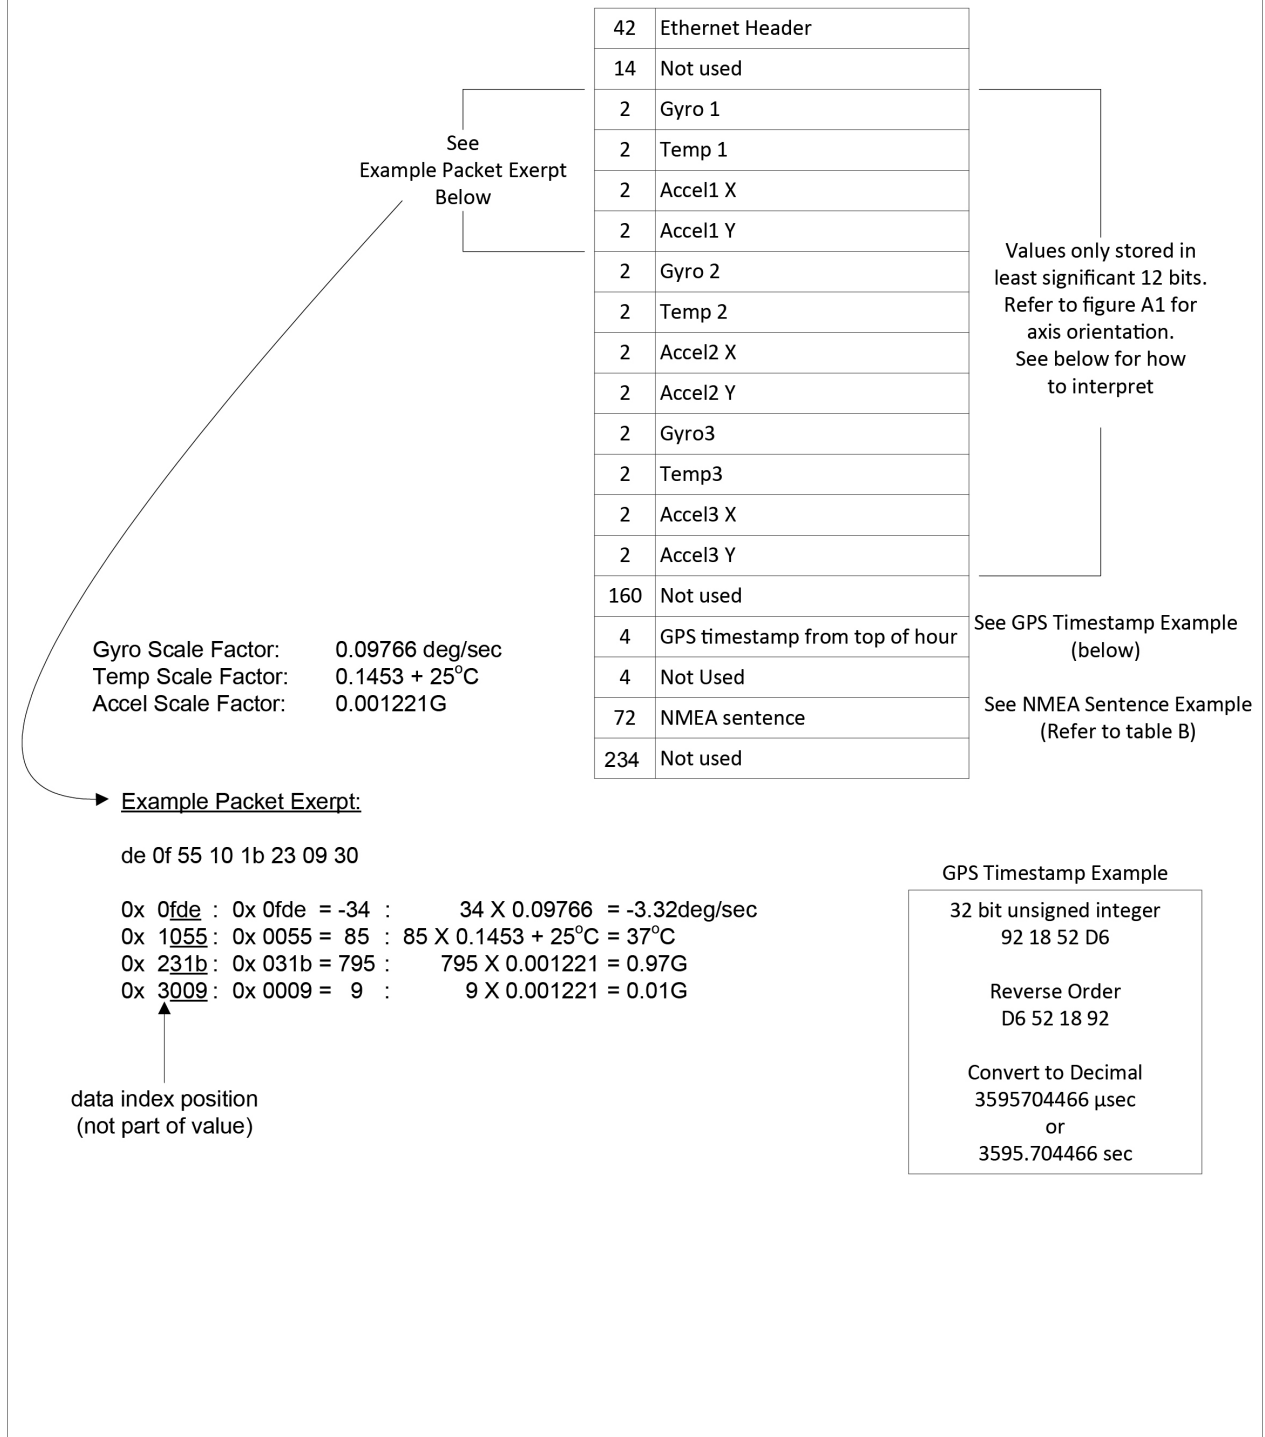


Figure B3.

Time Stamp:

"7c bd 9c 91" 2442968444(919cbd7c hex)usec = 2442.9sec

Time stamp from the head of the hour in usec.

NMEA Sentence:

"\$GPRMC, 214042, A, 3708.3087, N, 12139.5146W, 000.0, 000.0, 160311, 014.8, E, A 0C"

\$GPRMC,<1>,<2>,<3>,<4>,<5>,<6>,<7>,<8>,<9>,<10>,<11>,<12>*hh<CR><LF>

<1>	UTC time of position fix, hhmmss format for GPS 18 PC/LVC; hhmmss.s format for GPS 18-5Hz
<2>	Status, A = Valid position, V = NAV receiver warning
<3>	Latitude, ddmm.mmm format for GPS 18 PC/LVC; ddmm.mmmmm format for GPS 18-5Hz (leading zeros must be transmitted)
<4>	Latitude hemisphere, N or S
<5>	Longitude, ddmm.mmm format for GPS 18 PC/LVC; ddmm.mmmmm format for GPS 18-5Hz (leading zeros must be transmitted)
<6>	Longitude hemisphere, E or W
<7>	Speed over ground, GPS 18 PC and LVC: 000.0 to 999.9 knots, GPS 18-5Hz: 000.00 to 999.99 knots (leading zeros will be transmitted)
<8>	Course over ground, 000.0 to 359.9 degrees, true (leading zeros will be transmitted)
<9>	UTC date of position fix, ddmmyy format
<10>	Magnetic variation, 000.0 to 180.0 degrees (leading zeros will be transmitted)
<11>	Magnetic variation direction, E or W (westerly variation adds to true course)
<12>	Mode indicator (only output if NMEA 0183 version 2.30 active), A = Autonomous, D = Differential, E = Estimated, N = Data not valid

Ethernet Packet Example

Captured via Wireshark.

The screenshot displays the Wireshark interface for the file 'hdl-32-04032011-ROAD.pcap'. The main window shows a list of captured packets. Packet 73 is selected, and its details are expanded to show the following layers:

- Frame 73: 554 bytes on wire (4432 bits), 554 bytes captured (4432 bits)
- Ethernet II, Src: velodyne_20:11:69 (60:76:88:20:11:69), Dst: Broadcast (ff:ff:ff)
- Internet Protocol, Src: 192.168.17.105 (192.168.17.105), Dst: 192.168.3.255 (192.168.3.255)
- User Datagram Protocol, Src Port: https (443), Dst Port: 8308 (8308)
- Data (512 bytes)

The packet bytes panel shows the raw data in hexadecimal and ASCII. The ASCII portion of the data is as follows:

```

0000 ff ff ff ff ff ff 60 76 88 20 11 69 08 00 45 00 .....`v .i.E.
0010 02 1c 00 01 00 00 80 11 a2 17 c0 a8 11 69 c0 a8 .....i..
0020 03 ff 01 bb 20 74 02 08 00 00 00 00 00 00 00 00 ....t.....
0030 00 00 00 00 00 00 00 00 a8 0f 26 10 38 23 4b 30 .....&.8#K0
0040 f6 0f 21 10 32 23 41 30 cc 0f 40 10 d9 2f 59 30 ..!.2#A0 ..@../Y0
0050 00 00 00 00 00 00 dd dd 00 00 00 00 00 00 00 00 .....
0060 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0070 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0080 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0090 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00a0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00b0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00c0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00d0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00e0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00f0 93 0e db 1a 00 00 00 24 47 50 52 4d 43 2c 31 ..... $GPRMC,1
0100 39 30 37 32 39 2c 41 2c 33 37 30 38 2e 33 31 38 90729,A,3708.318
0110 34 2c 4e 2c 31 32 31 33 39 2e 32 38 33 39 2c 57 4,N,1213 9.2839,W
0120 2c 30 30 35 2e 31 2c 30 39 37 2e 37 2c 30 33 30 ,005.1,0 97.7,030
0130 34 31 31 2c 30 31 34 2e 38 2c 45 2c 44 2a 30 31 411,014. 8,E,D*01
0140 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0150 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0160 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0170 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0180 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0190 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
01a0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
01b0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
01c0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
01d0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
01e0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
01f0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0200 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0210 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0220 00 00 00 00 00 00 00 00 00 00 .....
    
```

The interface also shows a status bar at the bottom with the text 'Ready to load or capture'.

Coordinate Calculation Algorithm Sample Code

After removing all the correction parameters except vertical correction, the calculation code is:

```
firingData::computeCoords(guint16 laserNum, boost::shared_ptr<CalibrationDB> db,
GLpos_t &pos)
{
    guint16 idx = laserNum % VLS_LASER_PER_FIRING;
    boost::shared_ptr<CalibrationPoint> cal = db->getCalibration(laserNum);

    if (data->points[idx].distance == 0) {
        coords[idx].setX(0.0);
        coords[idx].setY(0.0);
        coords[idx].setZ(0.0);
        return;
    }

    float distance = db->getDistLSB() * (float)data->points[idx].distance;
    II Get measured distance, distancel

    float cosVertAngle = cal->getCosVertCorrection();
    float sinVertAngle = cal->getSinVertCorrection();

    float cosRotAngle = rotCosTable[data->position];
    float sinRotAngle = rotSinTable[data->position];

    float xyDistance = distance * cosVertAngle; II Convert to X-Y plane
    coords[idx].setX(xyDistance * sinRotAngle + pos.getX() IVLS_DIM_SCALE);
    II Calculate X coordinate
    coords[idx].setY(xyDistance * cosRotAngle + pos.getY() IVLS_DIM_SCALE);
    II Calculate Y coordinate

    IICalculate Z coordinate
    coords[idx].setZ(distance * sinVertAngle + pos.getZ() IVLS_DIM_SCALE);

}
```

Calibration and Orientation

There are six axes of variation when determining the exact location of any given laser firing for the HDL-32. The axes are x, y, z, along with rotational, horizontal, and vertical angles.

X, Y, Z. Both x and y offsets are zero and are calculated from the centerline of the device. The Z location of the firing should be considered to be the distance from the bottom of the base plane to the center of the lenses, or 3.575 inches (9.0805 cm).

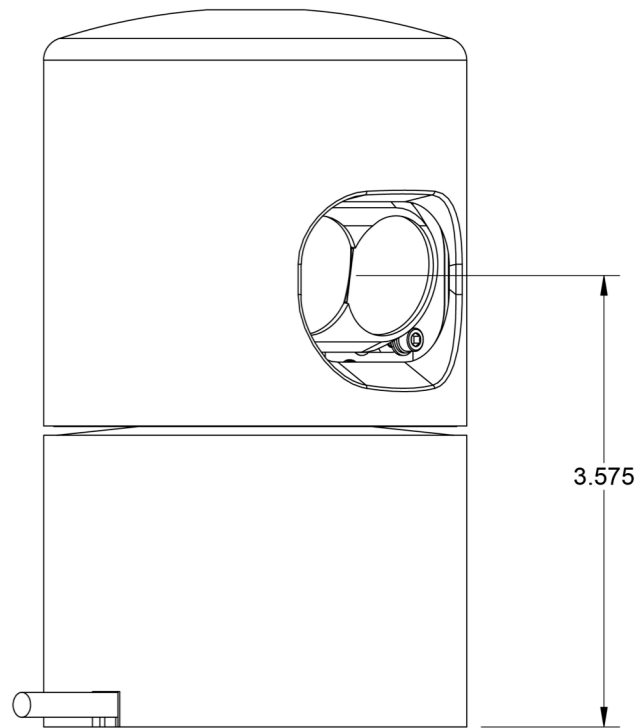


Figure D1.

The device isn't calibrated at the factory for angular accuracy. The angular precision is 1/100 of a degree, and the device should repeat to this level of accuracy. There are provisions for a pair of dowel pins to be located in the mating fixture, and this will provide repeatability in case the device is removed and remounted. The reason for this is that the device needs to be calibrated in situ to whatever defines either the x or y axis of the vehicle.

The HDL-32E's laser spots are aligned at the factory to be within 1/2" of their true position at 100 feet. Therefore, no calibration of either the deflection (horizontal) or rotational angle is necessary – both the horizontal angle and rotational laser angles are always zero.

The vertical angle of each laser is described in the XML file supplied with each unit and as listed above. This is the only calibration parameter necessary to plot points in 3D space, so for the HDL-32E all db.xml calibration files are identical and contain only the vertical angle values as listed above.

Laser Spot Size

The lasers project a well defined rectangular shaped spot that is approximately 4" wide by 2" tall at 100' distance. The spot size at the source of the HDL-32 is approximately 1/2" wide by 1/4" tall, causing the angular divergence to be 2.79 milliradians.

Distance Calibration

Distance calibration parameters are programmed into the HDL-32E firmware – no external adjustment for distance is needed. The HDL-32E uses $((1023/1024) * 300,000,000 \text{ meters/sec})$ as the reference speed of light. However, as the true speed is affected by local atmospheric conditions, the unit uses a closed-loop timing compensation scheme that calibrates each laser continuously and is the primary compensation for thermally induced timing corrections.

Packet Offset (bytes decimal)	Laser (DSR #)																															
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
0	-543	-541	-540	-539	-538	-537	-536	-535	-533	-532	-531	-530	-529	-528	-526	-525	-524	-523	-522	-521	-520	-518	-517	-516	-515	-514	-513	-511	-510	-509	-508	-507
100	-497	-495	-494	-493	-492	-491	-490	-488	-487	-486	-485	-484	-483	-482	-480	-479	-478	-477	-476	-475	-473	-472	-471	-470	-469	-468	-467	-465	-464	-463	-462	-461
200	-450	-449	-448	-446	-445	-444	-442	-441	-440	-439	-438	-437	-435	-434	-433	-432	-431	-430	-429	-427	-426	-425	-424	-423	-422	-420	-419	-418	-417	-416	-415	
300	-404	-403	-402	-401	-400	-399	-397	-396	-395	-394	-393	-392	-391	-389	-388	-387	-386	-385	-384	-382	-381	-380	-379	-378	-377	-376	-374	-373	-372	-371	-370	-369
400	-358	-357	-356	-355	-354	-353	-351	-350	-349	-348	-347	-346	-344	-343	-342	-341	-340	-339	-338	-336	-335	-334	-333	-332	-331	-329	-328	-327	-326	-325	-324	-323
500	-312	-311	-310	-309	-308	-306	-305	-304	-303	-302	-301	-300	-298	-297	-296	-295	-294	-293	-291	-290	-289	-288	-287	-286	-285	-283	-282	-281	-280	-279	-278	-276
600	-266	-265	-264	-263	-262	-260	-259	-258	-257	-256	-255	-253	-252	-251	-250	-249	-248	-247	-245	-244	-243	-242	-241	-240	-238	-237	-236	-235	-234	-233	-232	-230
700	-220	-219	-218	-217	-215	-214	-213	-212	-211	-210	-209	-207	-206	-205	-204	-203	-202	-200	-199	-198	-197	-196	-195	-194	-192	-191	-190	-189	-188	-187	-185	-184
800	-174	-173	-172	-170	-169	-168	-167	-166	-165	-164	-162	-161	-160	-159	-158	-157	-156	-154	-153	-152	-151	-150	-149	-147	-146	-145	-144	-143	-142	-141	-139	-138
900	-128	-127	-126	-124	-123	-122	-121	-120	-119	-118	-116	-115	-114	-113	-112	-111	-109	-108	-107	-106	-105	-104	-103	-101	-100	-99	-98	-97	-96	-94	-93	-92
1000	-82	-81	-79	-78	-77	-76	-75	-74	-73	-71	-70	-69	-68	-67	-66	-65	-63	-62	-61	-60	-59	-58	-56	-55	-54	-53	-52	-51	-50	-48	-47	-46
1100	-36	-35	-33	-32	-31	-30	-29	-28	-26	-25	-24	-23	-22	-21	-20	-18	-17	-16	-15	-14	-13	-12	-10	-9	-8	-7	-6	-5	-3	-2	-1	0

Notes: All times in microseconds. Combine the value shown from the packet timesamp (microseconds from the top of the hour), to arrive at actual laser firing time. Rotary encoder value is read at the beginning of packet creation at actual laser firing time. Timesamp is recorded and written at end of packet creation. Formula to determine timing is: $-542.592 + (\text{Packet Offset}/100 * 46.08) + (\text{Dsr} \# * 1.152)$.

Velodyne[®]

Velodyne LiDAR, Inc.

345 Digital Drive
Morgan Hill, CA 95037

408.465.2800 voice
408.779.9227 fax
408.779.9208 service fax

www.velodynelidar.com

Service Email: lidarservice@velodyne.com

Sales Email: lidar@velodyne.com

All Velodyne LiDAR products are made in the

U.S.A. Specifications subject to change

without notice

Other trademarks or registered trademarks are property of their respective owner.



63-9113 HDL-32E REV-K August 2016