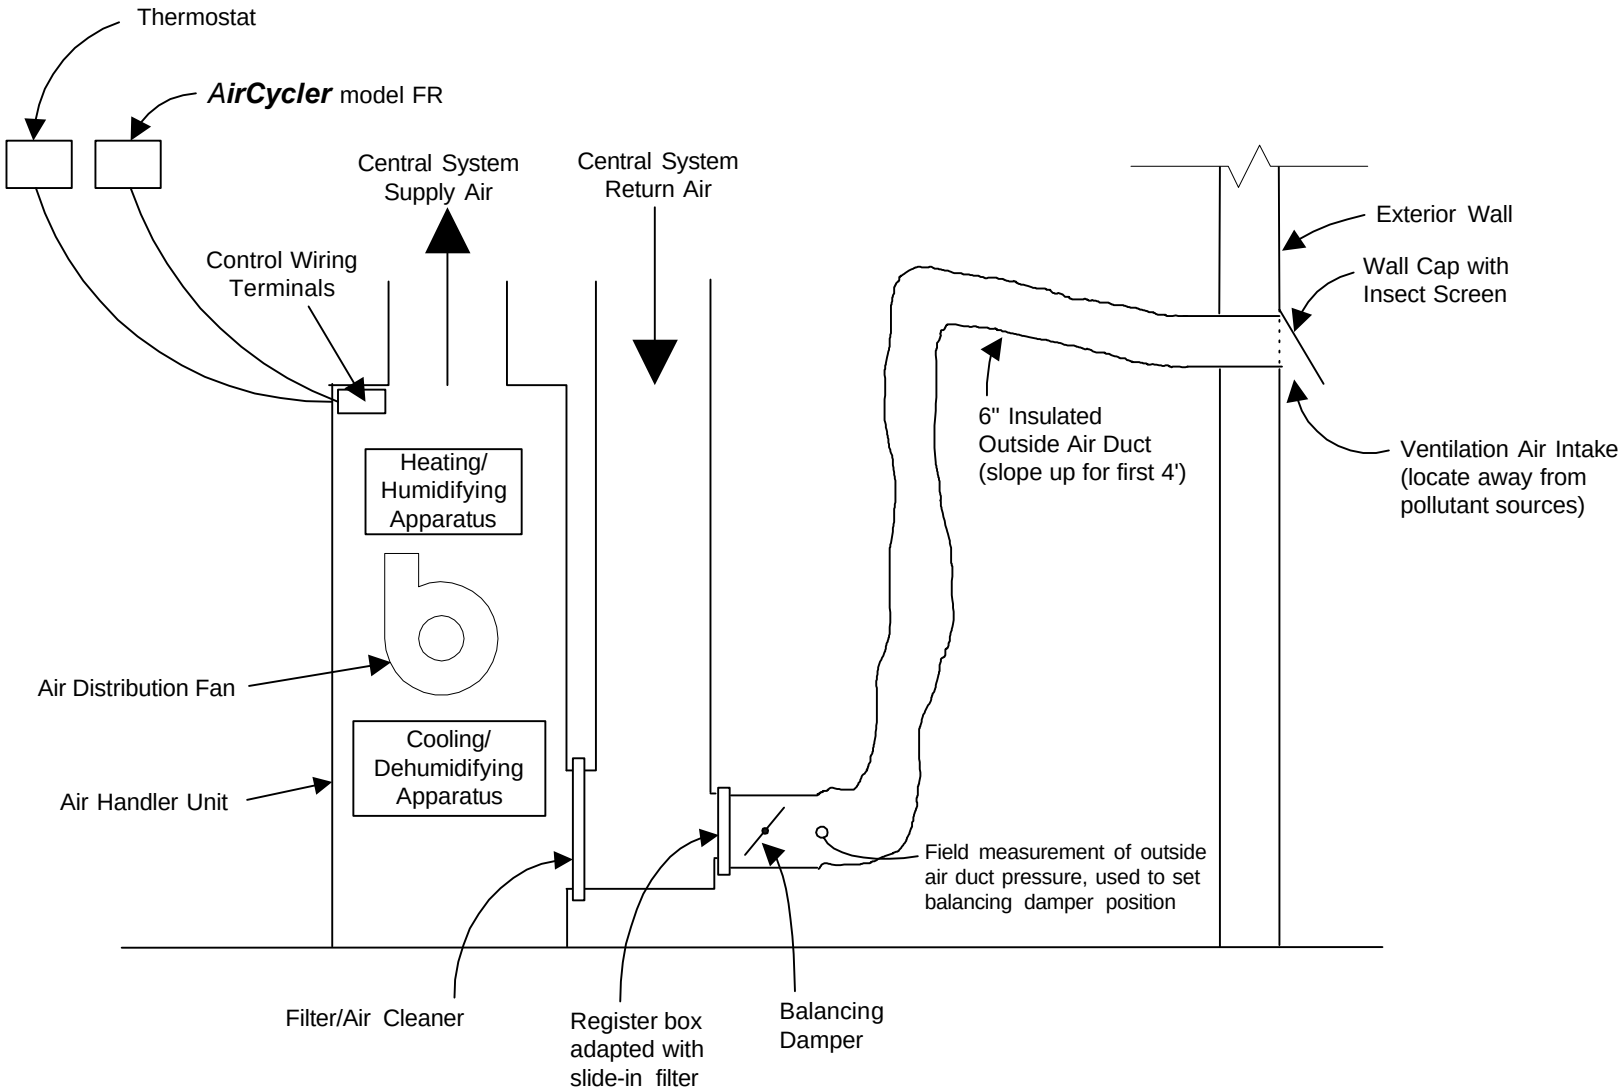
Thermostat
AirCycler model FR
Central System Supply Air
Central System Return Air
Exterior Wall
Wall Cap with Insect Screen
Control Wiring Terminals
6" Insulated Outside Air Duct (slope up for first 4')
Ventilation Air Intake (locate away from pollutant sources)
Heating/ Humidifying Apparatus
Air Distribution Fan
Cooling/ Dehumidifying Apparatus
Air Handler Unit
Field measurement of outside air duct pressure, used to set balancing damper position
Filter/Air Cleaner
Register box adapted with slide-in filter
Balancing Damper