Use the clip or the loop to connect

- POWERUP -

Plug-in RockitMan
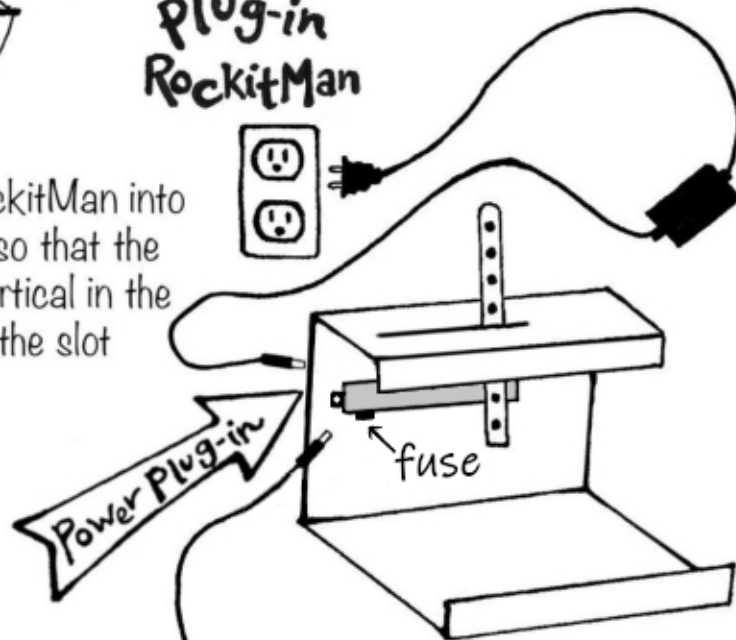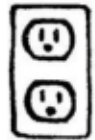
Hammock

Attach connector cord to the bottom of the hammock by your left <u>hip</u> →

10-20"
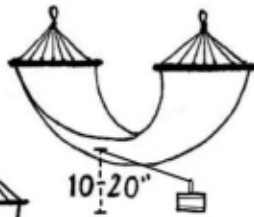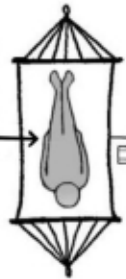
Move RockitMan into ← this area so that the lever is vertical in the middle of the slot

Porch swing

Attach connector cord near center of swing

10-20"

Hammock chair

Attach connector cord to **front** or **back** of chair

10-20"

Centered side to side

← Power Plug-in

fuse
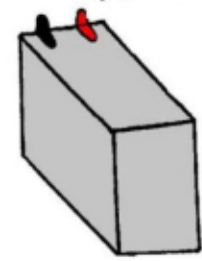
Battery RockitMan

NOTE:
The battery cable has one **RED** connecting wire and one **BLACK** connecting wire.

The **RED** wire must be connected to the **RED** battery post and the **BLACK** wire must be connected to the **BLACK** battery post.

If reversed, the RockitMan will *not* rock it, and you will need to replace the fuse on the green circuit board.

Hammock
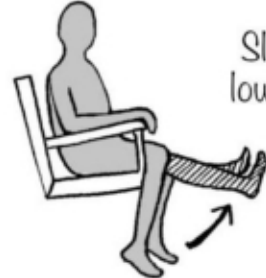
Get in on the side opposite RockitMan
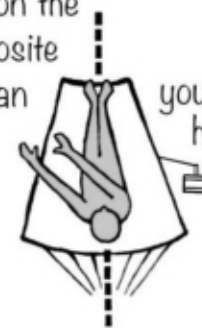
Center yourself in the hammock

Wave your arms side to side once per second to start

Porch swing

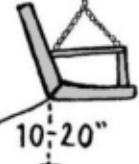Slowly kick lower legs to start

Hammock chair

Slowly kick lower legs to start

- TROUBLESHOOTING -

If your RockitMan™ won't rock:

Make sure you have POWER

Battery ✓ Battery fully charged?
RockitMan ✓ Check the fuse on the green circuit board

Plug-in ✓ Plugged in on both ends?
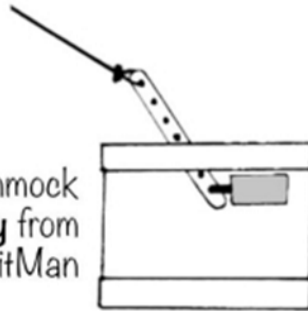**RockitMan** ✓ Check the circuit breaker

Make sure RockitMan is in the **right position**

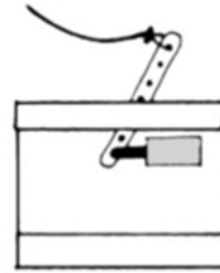When you are <u>lying/sitting still</u> in your hammock/swing, RockitMan should look like this:

Not like this:

or
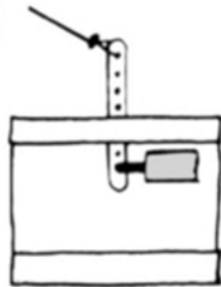
When you are <u>swinging</u>, RockitMan should look like this:
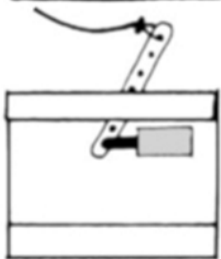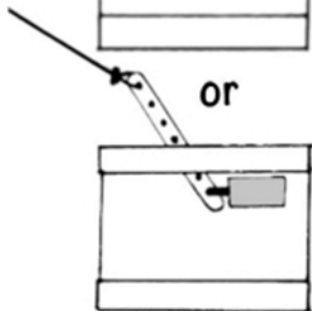
Taut when hammock swings **away** from RockitMan
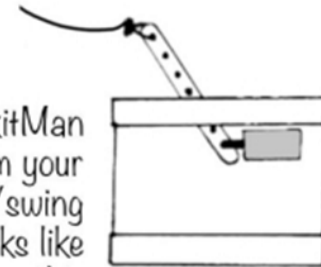
or

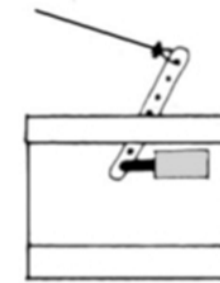Slack when hammock swings **toward** RockitMan

If it looks like this instead:

Move RockitMan **away** from your hammock/swing until it looks like this

or

Move RockitMan **toward** your hammock/swing until it looks like this

©2018 RockitMan LLC