Solar Hybrid Clock
Model 65902

Thank you for your purchasing our product, **Solar Travel Clock.** The clock we produced is characterized by its high quality, energy saving and environment -friendly. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.

FEATURES:

1.Continuous calendar up to 2059
2.Alarm clock and snooze function
3.12/24-hour format
4.Indoor thermometer
5.User selectable °C or °F, temperature format
6.Back light for 3 seconds
7.Solar energy

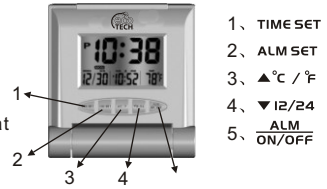

POWER SUPPLY

There two ways for power supply: battery and solar energy. At daytime the clock to be powered by solar energy (it is recommended that service condition is more than 200Lux). At nighttime the clock to be powered by battery.

INSTALLING BATTERY

1.Remove the Battery cover.
2.Replace battery with "+" up
3.Replace battery cover.

Be sure to insert the battery in the correct position (+,-) to prevent problems.
The time and date must be reset when the battery is changed.

NORMAL OPERATION

1.Press " ▲ /°C/°F" button to select temperature in Celsius or Fahrenheit display.
2.Press " ▼ /12/24" button to choose 12 or 24 Hr display format.
3.Press "ALM/ON/OFF' to turn on/off alarm

SETTING

Setting Time & Calendar

1. At normal time mode, hold "Time/Set" button until the **second** blinks.
2. Now use" ▲ /°C/°F" or "▼ /12/24" button to reset the current **second** to zero.
3. Press "Time/Set" button to confirm and the **hour** blinks.
4. Now use" ▲ /°C/°F" or " ▼ /12/24" button to select the correct hour.
5. Press "Time/Set" button to confirm and the **minute** blinks.
6. Now use"▲/°C/°F "or " ▼ /12/24" button to select the correct minute.
7. Press "Time/Set" button to confirm and the **year** blinks.
8. Now use" ▲ /°C/°F" or " ▼ /12/24" button to select the correct year.
9. Press "Time/Set" button to confirm and the **month** blinks.
10. Now use" ▲ /°C/°F" or "▼ /12/24" button to select the correct month.
11. Press "Time/Set" button to confirm and the **date** blinks.
12. Now use"▲ /°C/°F "or "▼ /12/24" button to select the correct date.
13. Press "Time/Set" button to confirm and return to normal state

Note: If you leave a screen with flashing digits for 60 second without performing any operation, the clock automatically saves anything you have input up to that point and exits from the setting mode.

Setting Alarm

1. At normal time mode, hold "ALM/Set" button until the **alarm hour** blinks.
2. Now use" ▲ /°C/°F "or " ▼ /12/24" button to set the alarm hour.
3. Press "ALM/Set" button to confirm and the **alarm minute** blinks.
4. Now use" ▲ /°C/°F" or " ▼ /12/24" button to the alarm minute.
5. Press "ALM/Set" button to confirm and return to normal state.
6. When the alarm is on, it rings for one minute when the preset time arrives. Press any key to stop the ring.

Note: The Snooze Function

When the alarm rings, press the "SNOOZE/LIGHT" button to activate the snooze function, the SNZ icon will continues to flash. Then it will ring twice again, and the snooze duration is 5 minutes.

BACK LIGHT FUNCTION

Press the "SNOOZE/LIGHT" button to turn on the display backlight and it will last for 3 seconds.

SAFETY INSTRUCTIONS

Do not expose the appliance to strong temperature variations, humidity, directs unlight or dust.
Keep the clock out of reach of small children.
Attention! Batteries can be life threatening, if swallowed.
Therefore, keep batteries and alarm clock out of reach of small children. If a battery has been swallowed, seek medical advice immediately. The batteries provided must not be charged or re-activated by any other means, taken apart, thrown into fire or short-circuited. Batteries need to be properly disposed of. For this purpose, shops selling batteries provide special containers for environmentally friendly disposal. Also, empty batteries will be taken at public waste collection points.

Two Year Warranty (U.S.A.)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired , or the product will be replaced at Equity's option. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your product is not working properly, please send:
- **the product**
- **a letter explaining the problem**
- **and $5.00 for postage and handling to:**

Equity by La Crosse
Warranty Department
2817 Losey Blvd. S
La Crosse, WI 54601

MADE IN CHINA
PRINTED IN CHINA

SE612说明书尺寸：105X148MM

型号：Se612说明书（暂无单号） 版本：A0 日期：2010-09-17

编制：_____ 主管：_____ 日期：_____