尺寸：65x88mm　材质：100g书纸　工艺：单色双面印刷　骑马钉

Jelly Comb

WEB CAMERA User Manual



1

EN

Introduction

Thank you for choosing our newest webcam! This is a product for real-time data transmission to PC via USB port. It has a high resolution and fast transmission rate, and it is also nice-looking and portable. This webcam enables you to share happy moments online with your family and friends!

Features

① Glass Lens ② Microphone ③ Manual Focus
④ Flexible Base/Clip ⑤ USB Cable
⑥ Tripod Screw Hole (Tripod is not included)
⑦ 360° Rotation ⑧ User Manual

2

EN

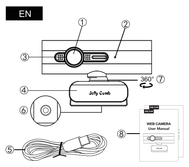

Parameters And Features

- High resolution COMS color sensors
- Video mode: 24bit true color
- Interface: USB port

3

EN

- Transmission rate:

320x240	25 FPS
640x480	25 FPS
1280x720	25 FPS
1920x1080	25 FPS

- Noise-signal ratio: greater than 48 dB(30 FPS 220LUX)
- Dynamic range: greater than 72 dB
- Image focus: 5cm to infinity
- Build-in image compression
- Automatic brightness adjustment
- Automatic color compensation
- Manual focus

4

EN

System Requirements

- IBM PC or compatible PC or laptop with USB port Pentium 200 or higher CPU
- Operation system: Windows XP/ 2000 /2003 / Vista/ 7/ 8/ 10, Mac OS, Android and Linux
- Over 200MB available hard disk space
- 32MB or higher memory
- Support Direct X VGA card

Install Your Webcam

1. Place Your Webcam

Place the webcam where you want it - on a computer display, desktop or a tripod.

5

EN

For Placement on the Display :

Open the webcam clip, and follow the steps and methods shown in the figure to place the webcam on the top of the display, please make sure the clip is firmly mounted.



6

EN

2. Connect the Webcam

Connect the camera to the computer via the USB interface.

Warm Tip: when using a desktop, it is better to connect the webcam to the USB interface on the back of the computer, because this will be much more smooth in using.

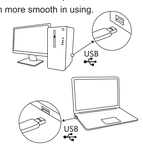

7

EN

3. When installation is finished, you can start using.

How to focus?

Manually Rotate the lens directly until it becomes clear

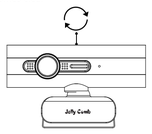

8

EN

GETTING STARTED
For Windows Users

Jelly Comb webcam is compatible with most Windows operation system included Windows Vista/2000/XP/Vista/7/8/8.1/10.

Installation

This webcam will automatically be installed when you connect it to your computer. You may open Skype, iMessenger or other instant messaging applications and start your recognize or video recording.

If you would like extra software(**AMCap V3.0.9**) for making videos, taking photos or testing the webcam, you can download it from our website: https://www.jellycomb.com/Software-tp176.html You can copy the software to your computer directly, no other steps needed.

9

EN

If you have more than one webcam installed or the picture does not immediately appear, open the **Devices** menu in **AMCap** and choose **1080P Webcam** from the listing. Make Sure that **Microphone(1080P Webcam)** is ticked as shown in the picture below.



To show the video signal for your webcam manually, click **Options** and then click **Preview**. With a short moment, the video signal from your webcam will show in the AMCap screen.

10

EN



Recording video

Note: You can focus the picture by manually turning the focusing ring around the camera lens.

- Before recording a video, select **Set Capture Directory...**from the **File** menu and choose a location on your computer where your recorded video will be saved. Then click **OK** to confirm.
- You can then record a video using the **Capture** menu in **AMCap**.
- If you would like sound in your video, make sure that the **Capture Audio** option is ticked as shown.
- Click **Start Capture** to begin recording and **Stop Capture** to finish.

11

EN



Setting up the microphone

(Win 7/8/8.1/10 &Vista)

- Open your **Control Panel** from the **Start** menu and select the **Hardware and Sound** Panel.
- In the **Sound** menu, click **Manage Audio** Devices and then the Recording tab along the top of the settings window which appears.
- Make sure that **1080P Webcam** is selected as the default device under **Voice Recording**, and click **OK** to save your changes.

12

EN

- If the microphone is too quiet or too loud, you can adjust it with the **Properties(Levels)** setting in the same **Recording** panel.
- You may also need to set up the default device for the individual applications you use.

Setting up the microphone(Win 2000/XP)

- Open your **Control Panel** from the **Start** menu and select the **Sound and Audio Devices** panel.
- Click the **Voice** tab along the top of the settings window which appears.
- Make sure that **1080P Webcam** is selected as the default device under **Voice Recording**, then click OK to save your changes.
- If the microphone is too quiet or too loud, you can adjust it with the **Volume...**setting in the same **Voice Recording** panel.

13

EN

- You may also need to set up the default device for the individual applications you use.

Skype

Before running the Skype software, make sure that the webcam program(**AMCap**) and other applications are fully closed. Failure to do so will mean that Skype may not recognize the webcam.

Open your Skype application,

- Select the **Tools** menu and go to **Options.** In the **General** tab, make sure that your settings are as follows:
- **Audio Settings**: Select **1080P Webcam** for **Microphone** and your **Windows Default Device** (or your soundcard) for **Speakers** and

14

EN



Ringing:

- Video Settings: Select 1080P Webcam from the dropdown menu.

We recommend that users also **uncheck** the box below the Microphone dropdown menu marked "**Automatically adjust microphone settings**". This option, when checked, can sometimes cause sound interruptions during voice calls. Initially it is best to set the volume Slider a little less than halfway along the bar. You can adjust this later to suit your preferences.

15

EN

For Mac OS X Users

The Jelly Comb webcam will automatically installed when you connect it to a Mac; No addition software is required. You will need to open camera software such as QuickTime, Photo Booth, Skype or FaceTime to start streaming the video. QuickTime and Photo Booth are preinstalled on all Macs as standard.

To check if the webcam is detected or not, you may click the **Apple** menu(in the top left corner of your screen) and then click **About t his Mac.** Click on **System Report** from the pop-up window that appears. The system information window for your Mac will appear. Navigate to the **USB section** and check to see if the webcam is listed as a connected devices (Show as "**1080P Webcam**" like the photo below).

16

EN

17

EN

APP Configuration:

Note: You can focus the picture by manually turning the focusing ring around the camera lens.

1. **Photo Booth**

Your system should automatically detect the webcam in Photo Booth if it has no internal camera of its own. In rare cases where it does not, please try disconnecting the camera and reconnecting it does not, please try disconnecting the camera and reconnecting it once Photo Booth is already running, or you may try to restart your Mac.

If your Mac has a built-in camera already, you may open **Photo Booth**, click the **Camera** on the top left of your screen, and choose the 1080P Webcam to use this webcam(like in the photo below).

18

EN

2. **FaceTime**

So long as the Mac being used meets App's guidelines for running FaceTime (having either OS X v10.5 installed or, on a small number of models, a built-in iSight camerca on OS X v10.4), simply follow the installation instructions for Macs. Your system should automatically detect the webcam in FaceTime.

If your Mac has a built-in camera already, you may open **FaceTime**, click **Video** on the top left of your screen, and choose **1080P Webcam** to use the webcam(like in the photo below).

19

EN

3. Skype

Before running the Skype, make sure that any other applications that are using the webcam are fully closed. Failure to do so will mean that Skype may not recognize the webcam. It is highly recommended to **update your Skype to latest version.**

Once you have installed Skype and started it up, select **Prefereces...** from the **Skype** menu (in the top left corner of your screen):

20

EN

In the **Audio/Video** tab, Select **1080P Webcam** in the **Microphone** dropdown menu, select **1080P Webcam** in the **Camera** dropdown menu,We recommend that users **uncheck** the box below the **Microphone** dropdown menu marked **Automatically adjust microphone setting.** This option, when checked, can sometimes cause sound interruptions druing voice calls. Initally it is best to set the volume slider a little less than halfway

21

EN

along the bar. You can adjust this later to suit your preferences.

Remember to save your changes before closing the window.

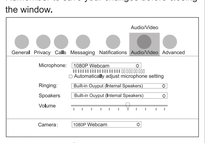

Setting up audio

Please make sure that Jelly Comb webcam is selected as the input device in the application you are using to access this feature.

22

EN

You can also select it in the Mac's **System Preferences** - choose the **Sound** panel and go to the **Input** tab to designate the webcam's microphone (**1080P Webcam**) as your system default. You can manual adjust the **Input** or **Output** volume of the webcam as you prefer.

FQAs - Frequently ASKED QUES TIONS

Troubleshooting for windoes Users

1. My system does not recognize the webcam:

- Right click on **Start** or the **Windows** icon in the lower left corner of your desktop.
- From the **Start** screen choose **Device Manager.**
- Find the **Imaging Devices**(show as **Audio Controller, Video** and **Games** in Win 7 or Vista) to see if there is a device **1080P**

23

EN

Webcam. Right click **1080P Webcam** and click **Enable.**

If the device is missing, please check that camera is properly connected to the computer.

Try plugging the camera into a different USB port. If the camera is plugged into one of the ports in the front, try one of the ports in the rear of the computer.

2. **The webcam works in AMCap but in Skype the screen is blank:**

Please make sure that AMCap is completely closed before starting up the Skype.

3. **The microphone cuts out when making Skype calls:**

Please check the Skype setup chapter of this manual for a solution to this problem.

24

EN

4. **The Snapshot button is not working:**

Please Open the AMCap software, and from link, and then press the snapshot button on the top of the webcam, the picture will then pop up.

5. **Windows reports that no video device was recognized:**

Please Open **AMCap** and check that the correct **1080P Webcam** is selected in the **Devices** menu.

Troubleshooting for Mac OS X Users

1. **The webcam is not recognized when I connect it to my Mac. I am using OS X 10.4.2 or earlier.**

If you are using an early version of the OS X 10.4 software, please install the free Apple Software Update to 10.4.3 or later for the automatic webcam detection to work. We recommend updating to latest version if possible for full Face Time webcam support to be available as well.

25

EN

2. **The webcam is not recognized on Mac, I am using latest OS X.**

Find if the **1080P Webcam** is listed in **System Report**. If not, you may try this way:

- Close all open apps that may try to use the camera
- Open **Terminal**, found in the /**Applications/ Utilities** directory in OS X
- Enter the following command strings exactly, then hit return:

Sudo Killall VDCAAssistant

- Still at the terminal, issue the following command as well:

Sudo Killall AppleCameraAssistant

- Enter the administrator password when requested, this is required to excute a command with superuser privileges as prefixed by sudo

26

EN

- Relaunch the app that was attempting to use the camera.

3. **Can't use the Snapshot Button.**

The Snapshot Button is not able to use in Mac. You may use the snapshot button on your applications to take pictures.

Other Problems

1. **The picture/video is blurry:**

Turn the focusing ring on the webcam's lens until the picture appears sharp/

2. **Where I can download the AMCap software:**

Please download the software from our website: https://www.jellycomb.com/Software-tp176.html

3. **I cannot download it from the website:**

Please check that your antivirus software is not blocking access and that you have permission to install software on your computer.

27

EN

4. **I have installed the software but nothing happens when I plug the webcam into the USB port:**

Please try a different USB port. We recommend directly connecting webcams to a USB port on your computer, not through a USB hub.

5. **My video is choppy, the frame rate is worse than expected.**

Please note that in low light situations the frame rate of the capture will drop, making the video appear choppier. To obtain the highest possible frame rate, use the webcam in a well lit area where the light source is behind the camera and out of picture.

Notice

1. Do not use it in hot, cold, dusty or humid circumstances.

28

EN

2. Avoid touching the lens with hands, sharp or coarse stuff, please use clean and soft cloth for cleaning.
3. Avoid falling as much as possible. Severe falling may cause damages to the lens, malfunction or scratches to the surface.

Warranty

1. This product is warranted by non-human factors.

What the warranty does not cover:

- Man-made damage.
- Repair or disassembled by other company's technicians.
- Damage due to dropping or impact.

2. Any problems, you can contact the seller to get the best solutions.

29

DE

Anleitung

Vielen Dank, dass Sie sich für unsere neue Generation von Webcams entschieden haben! Dies ist ein Webcam für die Echtzeit-Datenübertragung zum PC über den USB-Port. Es hat eine hohe Auflösung und schnelle Übertragungsrate. Genießen Sie HD-Videogespräche in 1080P. Jetzt können Sie sofort mit HD-Videochats loslegen! Es ist leicht mitzunehmen, bringt es eine intime und bequeme Lebenserfahrung mit Ihren entfernten Freunden und Familien!

Übersicht

① Linse ② Mikrofon ③ Manuellefokus
④ Flexible Halterung ⑤ USB-Kabel
⑥ Stativhalterung (Hinweis: Halterung nicht im Liferumfang)
⑦ Das Ganze kann um 360 Grad gedreht werden ⑧ Bedienungsanleitung

30

DE

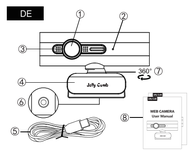

Parameter und Eigenschaften

- Hochauflösende CMOS-Farbsensoren
- Videomodus: 24bit Echtfarbe
- Schnittstelle: USB-Anschluss

31

DE

- Übertragungsrate:

320x240	25 F/S
640x480	25 F/S
1280x720	25 F/S
1920x1080	25 F/S

- Rauschabstand: größer als 48 dB (30 F/s, 220LUX)
- Dynamikbereich: größer als 72 dB
- Bildfokus: 5cm bis unendlich
- Eingebaute Bildkompression
- Automatische Helligkeitsanpassung
- Automatische Farbkompensation
- Manueller Fokus

32

DE

Systemvoraussetzungen

- IBM PC oder kompatibler PC oder Laptop mit USB-Anschluss
- Pentium 200 oder höher CPU
- Kompatibel mit Windows XP/ 2000 /2003 / Vista/ 7/ 8/ 10, Mac OS, Android und Linux
- Über 200MB freier Festplattenplatz

Webcam Installieren

1. Platzieren Sie Ihre Webcam

Entwickelt für die Art und Weise, wie Sie einen Videogespräch führen möchten, platzieren Sie die Webcam an der gewünschten Stelle auf einem Computerbildschirm, Desktop oder Stativ.

33

DE

Für die Platzierung auf einem Monitor:

Fassen Sie die Webcam wie abgebildet und öffnen Sie den flexiblen Clip/Fuß mit der anderen Hand. Montieren Sie die Webcam und achten Sie darauf, dass der Fuß auf dem flexiblen Clip/Fuß bündig mit der Rückseite des Monitors abschließt.



34

DE

2. Webcam anschließen

Schließen Sie die Webcam an einen USB-Anschluss des Computers an.

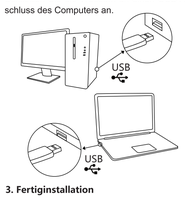

3. Fertiginstallation

35

DE

Wie kann man sich fokussieren?

Drehen Sie die Linse direkt und stellen Sie sie manuell ein, um das Bild deutlich zu sein.

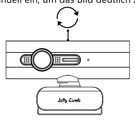

36

DE

Vorsichtsmaßnahmen

1. Vermeiden Sie den Kontakt der Linse mit der Hand, scharfen oder groben Gegenständen; verwenden Sie zum Reinigen ein sauberes und weiches Tuch.
2. Verwenden Sie es nicht in heißen, kalten, staubigen oder feuchten Umgebungen.
3. Vermeiden Sie es, so weit wie möglich zu fallen. Starke Fallen können Schäden an der Linse, Fehlfunktionen oder Kratzer an der Oberfläche verursachen.

37

DE

Garantie

- Dieses Produkt unterliegt der Garantie von nicht-menschlichen Faktoren:

Was NICHT abgedeckt ist: Von Menschen verursachte Schäden, die von anderen Firmen demontiert wurden, oder Schäden durch Herunterfallen und / oder Aufprall sind für die Garantie nicht lesbar.

- Bei Problemen mit unseren Produkten, die Sie erwerben, senden Sie diese bitte mit einem entsprechenden Vermerk an den zuständigen Vertriebsmitarbeiter vor Ort zurück.

38

FR

Introduction

Merci d'avoir choisi notre nouvelle webcam! C'est un produit pour la transmission de données en temps réel vers un PC via un port USB. Il a une haute résolution et un taux de transmission rapide, et il est également beau et portable. Cette webcam vous permet de partager des moments heureux en ligne avec votre famille et vos amis!

Caractéristiques

① Webcam ② Microphone ③ Manual focus
④ Base ⑤ Câble USB
⑥ Bouche de la vis du trépied
(Note: Le paquet ne contient pas un support)
⑦ Corps peut tourner à 360 degrés
⑧ Manuel d'instruction

39

FR

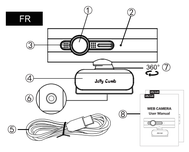

Paramètres et caractéristiques

- Capteurs de couleur CMOS haute résolution
- Mode vidéo :Couleur vraie 24bit

40

FR

- Interface :Port USB

Taux de transmission :

320x240	25 FPS
640x480	25 FPS
1280x720	25 FPS

- 1920x1080 25 FPS

Rapport signal/ bruit :Supérieur à 48dB (30 FPS 220LUX)

- Gamme dynamique : Supérieur à 72 dB
- Image focus : 5 cm à l'infini
- Compression d'image intégrée
- Réglage automatique de la luminosité
- Compensation de couleur automatique
- Focalisation manuelle

41

FR

Configuration requise

- IBM PC ou compatible PC ou ordinateur portable avec port USB
- Processeur Pentium 200 ou supérieur
- Système d'exploitation :Windows XP/ 2000 /2003 / Vista/ 7/ 8/ 10, Mac OS, Android et Linux
- Plus de 200 MB d'espace disque disponible
- 32 MB ou plus de mémoire
- Soutenir la carte VGA DirectX.

Installez votre webcam

1. Placez la webcam

Placez la webcam où vous le souhaitez - sur un écran d'ordinateur, un ordinateur de bureau ou un trépied

42

FR

Placez la webcam sur un écran d'ordinateur : Prenez la webcam comme indiqué sur la figure, et utilisez l'autre main pour ouvrir le clip / la base pour installer la webcam et assurez-vous que le pied du clip / de la base accrocher fermement à l'arrière d'ordinateur



43

FR

2. Connectez la webcam

Connectez la webcam à l'ordinateur via le port USB

Recommandation: Lorsque vous utilisez un ordinateur de bureau, connectez le port USB à l'arrière de l'ordinateur pour plus de stabilité.

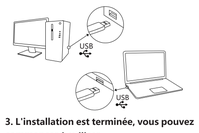

3. L'installation est terminée, vous pouvez commencer à utiliser

44

FR

Comment se concentrer?

Tournez l'objectif directement, ajustez manuellement l'objectif pour rendre l'image nette



45

FR

Précautions

1. Ne pas utiliser dans des circonstances chaudes, froides, poussiéreuses ou humides.
2. Évitez de toucher l'objectif avec des mains, des objets pointus ou grossiers, veuillez utiliser un chiffon propre et doux pour le nettoyage.
3. Évitez de tomber autant que possible. Une chute importante peut entraîner des dommages à l'objectif, un dysfonctionnement ou des rayures sur la surface.

46

FR

Garantie

1. Ce produit est garanti par des facteurs non humains.

Ce que la garantie ne couvre pas:

- Dommages causés par l'homme.
- Réparer ou démonter par des techniciens d'autres sociétés.
- Dommages dus à la chute ou à l'impact.

2. Pour tout problème de qualité, vous pouvez contacter le vendeur pour obtenir les meilleures solutions.

47

Jelly Comb

Jclly Comb ウェブカメラ 取扱説明書



この度は、弊社の Jclly Comb ウェブカメラをお買い上げ頂き、誠に有難うございます。
この取扱説明書をよくお読みになり、正しくお使いください。また、お読みになった後も大切に保管してください。

48

JP

安全にお使いいただくための ご注意（必ずお守りください）

本書では本製品を安全にお使いいただき、お客様への危害や財産の損害を未然に防止するために、次の表示を使用して説明しています。注意事項を守っていただけない場合どの程度の影響があるかを示しています。
＊警　告＊　この表示事項を無視して注意事項を守っていただけないと、人が死亡又は重症を負う可能性があることを示しています。
＊注　意＊　この表示事項を無視して注意事項を守っていただけないと、人が障害を負ったりパソコンやデータなどの物的損害のみの発生が想定される内容を示しています。

警　告

●【分解や改造の禁止】
本製品の分解、改造、ご自分での修理は絶対に避けてください。
▲ 火災や感電、怪我、故障の恐れがあります。また、本製品に対する保証が適用外となります。

49

JP

●【液体混入の禁止】
本製品に水、ジュースなどの液体に浸さないでください。また、濡れた手で操作しないでください。
▲ ショート、感電、火災の恐れがあります。また、故障の原因になります。

●【火中への投入や加熱の禁止】
本製品の火中への投入、ストーブやヒーターなどの熱源のそばでの使用や保管は絶対に避けてください。
▲ 火災や怪我、故障の原因となります。

●【落雷使用の禁止】
雷が鳴っているときに、本製品やケーブルに触れないでください。
▲ 落雷により感電する恐れがあります。落雷時は接続を切ってください。

50

JP

注　意

●お子様が本製品や付属品を口の中に入れないようにご注意ください。
▲お子様の怪我や本製品の故障の原因となることがあります。
●本製品に、物を当てたり、落としたり、踏むなどの衝撃を加えないでください。
▲故障の原因となります。
●本商品を次のような場所に置かないでください。
▶直射日光の当たる場所
▶暖房器具の近くなど高温になる場所
▶湿気やほこりの多い場所
▶幼児の手が届く場所
▶平でない、振動するなど不安定な場所
▲火災や感電、故障、怪我の原因になります。
●本製品の汚いところは乾いた柔らかい布で拭いてください。シンナー、ベンジン、アルコールなどの揮発性の高い薬品では拭かないでください。
▲製品をいためたり、変色させる恐れがあります。
●本製品を廃棄するときは、お住まいの地域の条例に従って廃棄してください。

51

JP

各部の名称

1 ウェブカム　2 マイク　3 マニュアルフォーカス
4 フレキシブルベース/クリップ　5 USBケーブル
6 三脚ネジ穴(三脚別売り)　7 360°回転可能
8 取扱説明書

52

JP

使用方法

1. ウェブカメラの設置：
本製品はお好みの設置方法でテレビ電話が出来るようにデザインされています。パソコンなどのディスプレイ、デスクトップ、三脚など、お好きな場所に設置できます。

パソコンなどのディスプレイに設置する場合:
図のようにウェブカメラをつかんで、もう一方の手でフレキシブルクリップベースを開きます。ウェブカメラを取り付けて、フレキシブルクリップ ベースの脚がモニターの背面にぴったりと接触するようにします。

53

JP

2. ウェブカメラの接続：
ウェブカメラのUSB接続端子をパソコンのUSBポートに接続します。ドライバーが自動的にインストールされます。インストールが完了してから、使い始めます。

ノートブック：

デスクトップパソコン：



54

JP

【ヒント】Webカメラをパソコンの裏面にあるUSBポートに接続するほうがもっとスムーズに使用できます。

レンズのフォーカスの調整方法：
画像がクリアーになるまでに手動でレンズを回転してください。



55

JP

仕様：

センサー	200万画素　CMOSセンサー
伝送レート	320×240　25FPS 640×480　25FPS 1280×720　25FPS 1920×1080　25FPS
インターフェース	USBポート
ダイナミックレンジ	72 dB以上
ノイズシグナルレシオ	48dB以上（30FPS　220LUX）
フォーカス	マニュアルフォーカス
画像フォーカス	5cm - ∞
明るさ	自動調節
USBケーブル長	2.0m
対応システム	Windows XP / 2000/2003 / Vista / 7/8/10, Mac OS, Android , Linux
セット内容	1 x Jelly Combウェブカメラ 1 x USBケーブル 1 x 取扱説明書

56

JP

製品保証書

保証規定
保証期間：お買い上げ日より1年間
1.保証期間内に取扱説明書に従った使用状況で、本体が万が一故障した場合には、新品と交換いたします。部品が故障した場合、新しい部品を発送いたします。
2.保証期間内に故障・破損した場合は、故障・破損の詳細を弊社までご連絡ください。
3.保証期間内でも、次の場合は、本保証書規定の対象外となります。

- 本書、及びアマゾンでの注文履歴がない場合
- ご家庭以外（業務用としてなど）で使用した場合の故障および損傷
- 移動、落下などによる故障および損傷
- 使用上の誤りや本書を無視した使用による故障及び損傷
- 不当な修理や改造による故障及び損傷
- 火災・地震などの天災、騒乱などの人災、公害や異常電圧などの環境による故障および損傷
- 保証期間経過後のご依頼

57

JP

4.本書は再発行いたしませんので、紛失しないように大切に保管してください。
5.本規定は、以上の保証規定により交換をお約束するためのもので、これによりお客様の法律上の権利を制限するものではありません。
6.弊社製品につきましては、万全を期して製作しておりますが、万が一初期不良などがありましたら、弊社までお気軽にお問い合わせください。
7.ご使用に関してご不明、ご要望等ございましたら、弊社までお気軽にお問い合わせください。

注：アマゾンでは返品処理しかできないため、交換希望などございましたら、必ず事前に弊社までご連絡ください。弊社はいつもお客様により良い体験やサービスを提供しております。

アマゾンでのお問い合わせ：アカウントサービス→注文履歴→出品者に連絡する