MODERN FLAMES

Multiview Wifi Instructions

For iPhone and IOS users
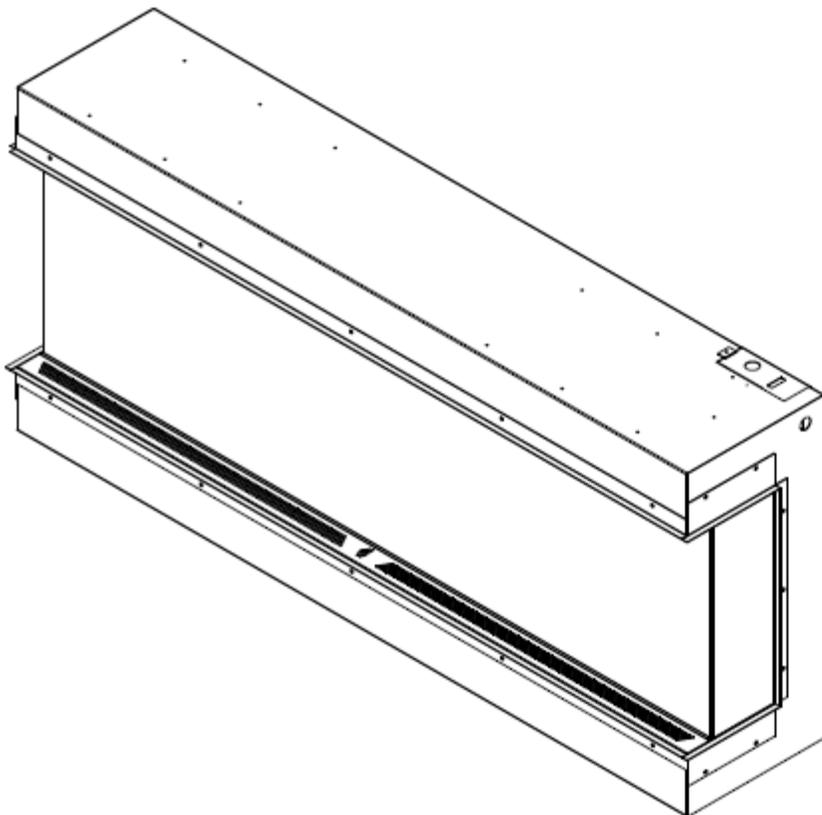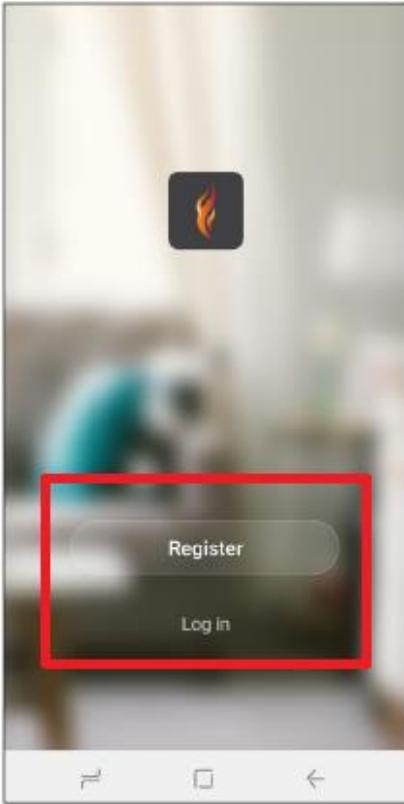
1. Get started by downloading the Modern Flames app from the Apple App Store or the Google Play Store. New users will need to register. Existing users can log in.

2. Enter your login information and click Log in.

Log in

USA +1

support@modernflames.com

············

☑ I agree with Service Agreement and Privacy Policy

Log in

Verify via SMS   Forgot Password

MODERN FLAMES

No devices, please add

Add Device

Home   Smart   Me
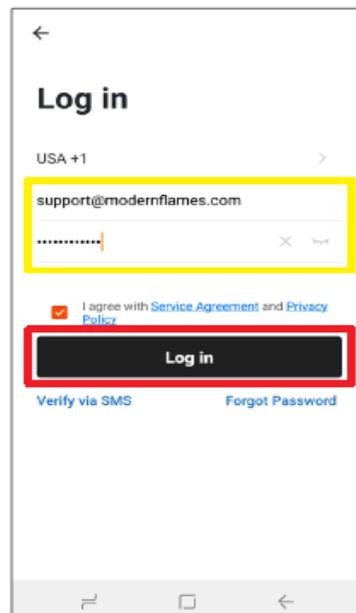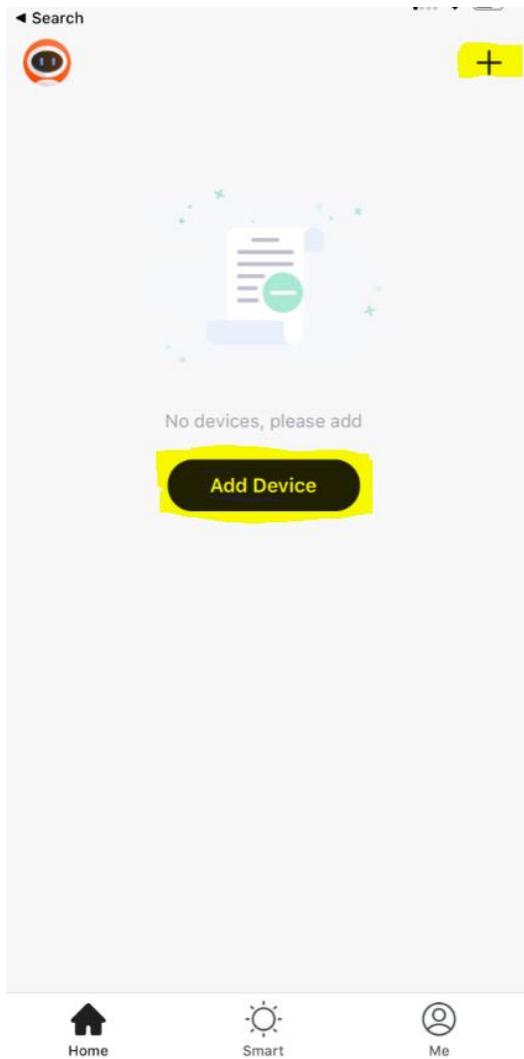
3. You will be able to add device by pressing the '+' on the top right or on the main button in the middle.

MODERN FLAMES

Ensure that the device is ready for network connection.

Help
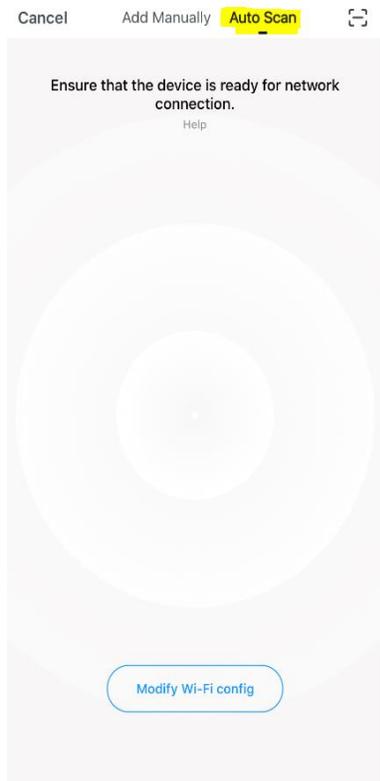
Modify Wi-Fi config

4. Click on the 'Auto Scan' button at the top and the radar will begin pulsating.

Note the 'Modify Wi-Fi Config' button at the bottom, press to insert Wi-Fi information and change to 2.4ghz.

Enter Wi-Fi Password

Only 2.4 GHz Wi-Fi networks are supported >

Modernflames...   Change Network

Password
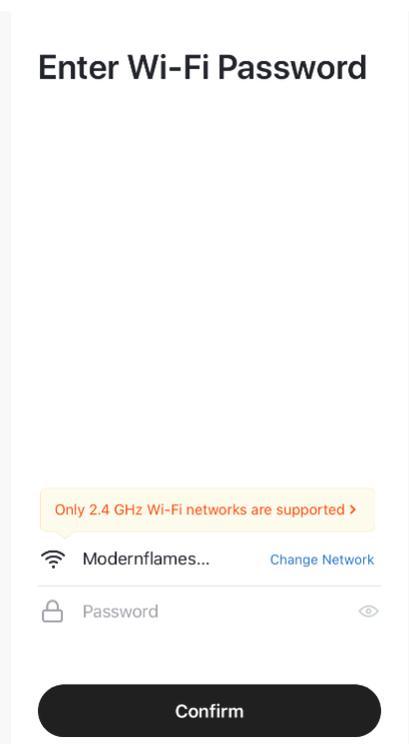
Confirm

5. Insert Wi-Fi info at the bottom and change network to 2.4 ghz. Once entered hit 'Confirm' and you will be brought back to the radar screen.

MODERN FLAMES

Power   Heater   Light   Power Switch
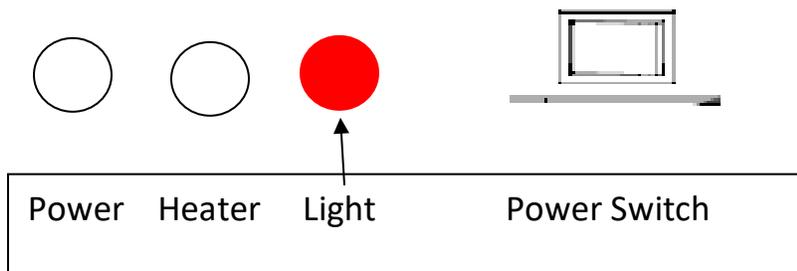
6. Once back at the radar screen. Turn power on and press and hold, for a few seconds, the light control button on the top right-hand side of the unit.

-You will hear an audible beep and the flame image should begin to flash a few times. Then the unit will power off. Wait a few more seconds.

Available devices found

Multiview

7. At this point the unit and mobile device should be linked. And the fireplace will turn back on. Select 'Next' to finish synching.

Next

MODERN FLAMES
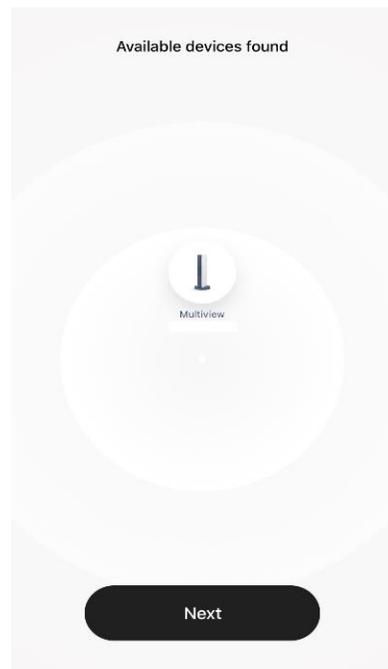
8. The next screen should give you access to the remote that will control this fireplace.

-You will have light control, color and dim.

-Thermostat control for the heat along with high and low settings.

-Dim and bright are controlled by the power bar in the middle.

-Each light zone is controlled at the top and they can sync together as well.

Flame   Ember Bed   Downlight   ⇄ Sync

80°F

100

Power   Fade   Heat   Timer   °F/°C

MODERN FLAMES