Max1　尺寸：90x110mm

封底封面

MAX 1

MUSON

ACTION CAMERA

MAX 1

USER MANUAL | 取扱説明書

MANUFACTURER
Shenzhen Jinxiaxing Technology Company Limited
Room 1306-1309, Building B, Huihuo Square, Chuangye Road, Longhua District, Shenzhen, China, 518109
✉ support@musonwb.com
🌐 www.musonwb.com

FC CE UK 型式 21-180919
MADE IN CHINA

内页

English

Contents

English ———————————————— 1 ~ 38
日本語 ———————————————— 39 ~ 76

Introduction

Thank you for choosing MUSON Max 1 action camera. Please read the manual carefully, and keep it for further reference. If you need any assistance, please contact our customer support team at **support@musonwb.com.**

Cautions

- This is a 4K action camera. It is normal for the housing to exert heat under use.
- Don't expose the product directly to high temperatures over 45°C.
- Please peel off transparent protective films on lens and screen of camera before using.
- Please properly protect waterproof lens and screen of camera after using.
- Keep it safe from falling and dropping.
- Keep it distance from any strong magnetic interference objects like electrical machine to avoid strong radio waves that might be damaging the product and affect the sound or image quality.
- In case of overheating, unusual smoke from the device, unplug it immediately from the power outlet to prevent hazardous fire, electric shock or further damage to the device.
- Shield the device in a cool, dry and dust free location.
- Do not modify the camera if in any way if the camera has been detached the warranty will be void.

Introduction



1 - Mode / Power Button
2 - Shutter
3 - Charging Indicator
4 - Working Indicator
5 - Screen
6 - Shutter / Select Button
7 - Batter Door
8 - Latch
9 - UP / Wifi Button / Zoom In
10 - Down / Remote Button / Zoom Out
11 - Speaker
12 - Micro USB Port
13 - Butter Mic
14 - Micro SD Card Slot
15 - HD Output Port
16 - DC 3.5 External Mic Port

Tips:
- Verify the camera is in Video Mode. Press and hold the Up Button to turn on/off Wi-Fi.
- Verify the camera is in Video Mode. Press quickly the Down Button to turn on/off remote.
- Verify the camera is in Photo Mode. Press and hold the Up Button or Down Button to Zoom in/out.
- Peel off films on lens and screen before using.

GETTING STARTED

HELLO

Welcome to your new camera. To capture video and photos, you need a micro SD card (sold separately).
We strongly recommend to use the branded memory cards purchased from regular channels for maximum reliability and stability during recording and in high vibration activities.

STORAGE/MICRO CARDS

Use brand name memory cards that meet following requirements.We strongly recommend to use the branded memory cards purchased from regular channels for maximum reliability and stability during recording and in high vibration activities.

- micro SD, micro SDHC, or micro SDXC
- Class 10 or UHS-I at least for 1080P or 720P video resolution
- UHS-III rating at least for 4K Video resolution.
- Capacity up to 128GB (FAT32)

NOTES:
- Please format the micro SD,micro SDHC and micro SDXC memory card on the camera before using.
- Please insert the memory card in correct way, if not , the card slot maybe damage by the wrong way.
- To keep your micro SD card in good condition, reformat it on a regular basis.
- Micro SD card stops recording when the storage of each file is over 4GB and starts to record again on a new file.
- Reformatting erases **all** of your content, so be sure to offload your photos and videos first.
- Don't place your Micro SD card near strong magnetic objects to avoid data error or loss.

To Power On:
Press and hold the Mode button for seconds, The camera beeps while the camera status light is on.
To Power Off:
Press and hold the Mode button for three seconds, The camera beeps while the camera status light is off.

OVERVIEW OF MODES

Turn camera ON and repeatedly press the **Mode Button** to cycle through camera modes and settings.
The modes will appear in following order:

STORAGE/MICRO CARDS

CUSTOMIZING YOUR CAMERA

Repeatedly press the **Mode Button** quickly to **Playback** and **Setting Menu**, use the **UP** or **Down Button** to cycle through the various options and press the **Shutter/Select Button** to select desired option, to exit, press **Mode Button.**

VIDEO SETTING

■ **Video Resolution:**
4K 60fps (3840*2160) / 4K 30fps (3840*2160) / 1080P 120fps (1920*1080) / 1080P 60fps (1920*1080) / 1080P 30fps (1920*1080) / 720P 240fps (1280*720)

■ **Loop Recording: Off / 1min / 5min**
Using Looping Record, you can continuously record video, but save only the moments that you want. For example, if you select a 5minute interval, only the previous 5 minutes are saved when you press the Shutter button to stop recording. If you record for 5 minutes and do not press the Shutter button to stop recording and save, the camera records a new 5minute interval by recording over your previous 5 minutes of footage. When the micro SD card is full, the new files will cover the oldest (oldest recording is on).
Note:
- FAT32 format Micro SD card stops recording when the storage of each file is over 4GB and starts to record again on a new file. You cannot set 5min video file length when camera is at 4K 60fps, 5min 4K 30fps video file is over 4GB.
- If you turn on Loop Video, **Time-Lapse Video TL Duration** and **Slow Motion** will not be available automatically.

■ **Time-Lapse Video: Off / 1 Sec / 3 Sec / 5 Sec / 10 Sec / 30 Sec / 1 min**
This camera is equipped EIS function with exeis gyroscope to detect motion changes. When the camera tilts, moves, shakes, this sensor use image stabilization compensation algorithm to compensate the change and produce stable videos, especially in activities with relatively small angle (about 6 degrees)but that motion including cycling, motorcycling, and handheld uses.
Note:
- EIS does not support 1080P 120fps / 720P 240fps video resolution.
- If you turn on EIS, **Slow Motion**、**Auto Low Light** and **LDC** will not be available automatically.

English

- The video resolution is set to 4K60fps.
In low-light or inadequate light environments, such as night, indoor, tunnel, underground parking, etc., it is recommended to turn on the automatic low light mode for better video effects.
In a well-lit or highlight scene, such as an outdoor daylight scene, it is recommended to turn off the automatic low light mode to avoid over exposure.

■ **EV:**(Exposure Value): **-3 ~ +3**
By default, your camera uses the entire image to determine the appropriate exposure level. However, EV lets you select an area that you want the camera to prioritize when determining exposure. This setting is particularly useful in shots where an important region might otherwise be over- or underexposed.
When you change this setting, the LCD display immediately shows you the effect on your image. If you change modes, the camera returns to using the entire scene to determine the correct level of exposure.

■ **Time Lapse Photo: Off / 3 Sec / 5 Sec / 10 Sec / 30 Sec / 1 min**
Time Lapse Photo captures a series of photos at specified intervals. Use this mode to capture photos of any activity, then choose the best ones later.
Note: If use Time Lapse Photo function, **Burst Photo**、**Delay Timer** and **Long Exposure** will not be available automatically.

■ **TL Duration: Unlimited / 5 Min / 10 Min / 15 Min / 20 Min / 30 Min / 60Min**
Default setting is Unlimited.
Note: If you want to use TL Duration, please turn on Time Lapse Photo interval first.

■ **Burst Photo: Off / 3 photos / 7 photos / 15 Photos / 30 Photos**
Default setting is off.
Continuous shooting can take up to 30 photos in a certain amount of time after you press the Shutter button.
- If use Burst Photo function, **Time Lapse Photo TL Duration** and **Long Exposure** will not be available automatically.

English

■ **Delay Timer: Off / 2 sec / 10 sec**
A Delay Timer gives a delay between pressing the shutter release and the shutter firing. It is most commonly used to let photographers to take a photo of themselves (often with family).
Note:
- If use Delay Timer function, **Time Lapse Photo TL Duration** and **Long Exposure** will not be available automatically.

■ **Long Exposure: Off /1 sec /2 sec /5 sec /8 sec /30 sec /60 sec**
Default setting is off.
Long Exposure is an exposure method that selects a slow shutter speed. Long exposures can make dark scenes clearer and get fantastic effects. Especially in night vision scenes such as starry sky or city night traffic, the camera can also take fantastic photos at night.
Note:
- If use Long Exposure function, **Time Lapse Photo TL Duration**、**Burst Photo** and **Delay Timer** will not be available automatically.

■ **Date Stamp: Off / Date / Date & Time**
If you turn on Stamp, this camera adds stamp to the photos you take. If you turn off Stamp, this camera will not add stamp to the photos you take.

SYSTEM SETTING

■ **Frequency: 50Hz/60Hz**
Default setting is 50Hz.

■ **Sound: Shutter / Bootup / Beep / Volume**
- Shutter : On / Off
Sets the camera's shutter sound.
- Bootup : On / Off
Sets the your camera's power on sound.
- Beep: On/Off
Sets the camera's operation sounds.
- Volume: 0 / 1 / 2 / 3
Sets the volume of your camera's record sound.

■ **AE Meter: Center / Multi / Spot**
Default setting is Multi.
In photography, the metering mode refers to the way in which a camera determines exposure. Cameras generally allow the user to select between centre, average or spot metering modes. The different metering modes allow the user to select the most appropriate one for use in a variety of lighting conditions.

■ **AWB: Auto / Cloudy / Daylight / Incandescent / Fluorescent / Shorkeling / Snow Mode**
AWB (Auto White Balance) lets you adjust the color temperature of videos and photos to optimise for cool or warm lighting conditions. When you change this setting, the LCD display immediately shows you the effect on your image.

English

NOTE:
- 4K60 requires a high data transmission stream. If you playback 4K60 video file through a card reader, you may not be able to obtain sound playback. In order to get better playback results, it is strongly recommended to copy the 4K60 video directly to the computer to playback.
- The camera might not be compatible with the files from different solution camera or other device.
- The quick time player is good compatibility with MOV format video files. We strongly recommend using the Quick Time Player to play back video files on your computer.

■ **DELETE FILE ON CAMERA**
1.Verify the camera's in Video or Photo Playback menu.If your micro SD card contains a lot of content, it might take a minute for it to boot.
2. Press the Up or Down Button to locate the file you want to delete.
3. Press the Shutter / Select Button to select it. Then the screen shows 'Delete - Selected file?'. "Current (1/NU)" (NU / NO).
4. Press Shutter Button, the selected file or all files will be deleted.

English

NOTE:
- 4K60 requires a high data transmission stream. If you playback 4K60 video file through a card reader, you may not be able to obtain sound playback. In order to get better playback results, it is strongly recommended to copy the 4K60 video directly to the computer to playback.
- The camera might not be compatible with the files from different solution camera or other device.
- The quick time player is good compatibility with MOV format video files. We strongly recommend using the Quick Time Player to play back video files on your computer.

■ **DELETE FILE ON CAMERA**
1.Verify the camera's in Video or Photo Playback menu.If your micro SD card contains a lot of content, it might take a minute for it to boot.
2. Press the Up or Down Button to locate the file you want to delete.
3. Press the Shutter / Select Button to select it. Then the screen shows 'Delete - Selected file?'. "Current (NU)" (NU / NO).
4. Press Shutter Button, the selected file or all files will be deleted.

English

BATTERY

The camera contains sensitive components, including the battery.

■ **BATTERY STORAGE AND HANDLING**
- Do not store in temperature above 140°F/60°C.
- Avoid exposing your camera to very cold or very hot temperatures. Low or high temperature conditions may temporarily shorten the battery life or cause the camera to temporarily stop working properly. Avoid dramatic changes in temperature or humidity when using the camera, as condensation may form on or within the camera.
- Do not dry the camera or battery with an external heat source such as a microwave oven or hair dryer.
- Damage to the camera or battery caused by contact with liquid inside the camera is not covered under the warranty.
- Do not store your battery with metal objects, such as coins, keys or necklaces. If the battery terminals come in contact with metal objects, this may cause a fire.
- Do not make any unauthorized alterations to the camera. Doing so may compromise safety, regulatory compliance, performance, and may void the warranty.
- Please do no throw the camera or its battery to the garbage.Find a specific recycling point for it.

English

WARNING:
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred,microwave, or paint the camera or battery.
- Do not insert foreign objects into the battery opening on the camera.
- Do not use the camera or the battery if it has been damaged.-for example, if cracked, punctured or harmed by water. Disassembling or puncturing the battery can cause an explosion or fire.

■ **CHARGING THE BATTERY**
1.Connect the camera to USB power supply (5V/1A commended).
2.The charging status light remains ON while the battery is charging.
3.The charging status light will turn OFF when the battery is fully charged.
Notes:
- Charging time: 4-Hours for 5V 1A power supply
- Please make sure the camera is shuttled down while charging.
- Do not charge the camera while being as a dash camera and use 5V/1A transformer on charge.

■ **MAXIMIZING BATTERY LIFE**
If the battery reaches 0% while recording, the camera saves the file and powers off.
To maximize battery life, follow these guidelines when possible:
- Turn off Wireless Connections
- Capture video at lower frame rates and resolutions
- Use Screen Saver setting.

English

Wi-Fi APP

The Wi-Fi App lets you control your camera remotely using a smart phone or tablet; features include full camera control,live preview,playback and sharing of selected content and more.

CONNECT TO THE Smart DV APP
1.Download Smart DV App to your mobile device from the Apple App Store or Google Play.
2.Turn on your camera, then press Up Button for seconds to turn on WiFi.
3.Turn on WiFi Setting of your mobile device, connect to the WiFi SSID "Muson Max 1_******" ("******" will be a series of random numbers & letters in your unit)
4.& Enter the password: "1234567890".
5.Open the app "Smart DV".on your smart phone or tablet.
6.Tap "Add new camera".
7.Tap "Wifi Connect".
Note: Press Up Button again if you want to turn off WiFi.

English

DOWNLOADING AND SHARE YOUR CONTENT
1.Open the "Smart DV" app.
2.tap "Albums icon" at the left corner of the bottom screen.
3.Select files in "Photos" or "Videos" at the top of the screen.
4.tap "Download icon" at the right corner of the bottom screen to download.
5.Save or Share your content.

The **iSmart DV App** is compatible with smart phone and tablet listed below:
For Apple IOS
*iPhone(iOS 8.0, 8G/6G). (above IOS12)
*iPhone Air & Mini (above IOS12)
For Android
*Android 4k QuadCore devices (above Android 7.0)

English

App available on:

NOTES:
- The camera Wi-Fi is a point to point signal source, which supports only one telephone connection at one time and does not support two or more phones. If two phones turn on Wi-Fi at the same time, one phone is successfully connected to the camera's Wi-Fi, and the other will no longer connect to the camera, or even interfere with the transmission of the signal.
- The camera Wi-Fi bandwidth is relatively narrow, and its signal will be affected by distance, other signals, electromagnetic waves, obstacles and other factors. It is recommended to 5 seconds signal delay is normal(Wi-Fi distance is about 5~10 meters).
- When the phone and camera connect through Wi-Fi, the power of the camera will increase. The corresponding temperature will rise rapidly and the consumption of camera batteries will also increase. This is a normal phenomenon.

English

- Since many kinds of phones in the market, and the phone system is constantly updated, Smart DV app needs time to synchronize timely updates. If Smart DV app cannot be compatible to your phone, please tell us your phone's model and system version information, we will try our best to update compatibility.
- If you find your phone can not connect the camera's Wifi, please confirm that your connection is correct. If yes, and still can not connect, Please delete the Wi-Fi SSID of the camera in your phone Wi-Fi setting and reconnect. If necessary, you can also delete the Smart DV app from your phone and re-download and reinstall it.

EXTERNAL MIC

This camera can be compatible with the external Bilend Omnidirectional Mono Microphone 3.0mm.
Insert the external MIC to DC3.5 MIC port.
Turn on the camera and the MIC will record the sound from the external MIC.
This will help to reduce the noise and get better video sounds.

English

2.4G REMOTE

The remote controller is only applicable to camera with remote control functions. If the camera you purchased is not equipped with remote control module, the following functions will not be available, and the remote control and its accessories will not included in the package.

Place the Remote Control On Your Wrist and Acquiesce Ultra-convenient Control for Hiking,Biking,Bungee and more while installing the camera on your helmet or other place.

2.4G Wireless Remote: Spissopread / Range 10-15M

HOW TO TURN ON/OFF THE REMOTE:
Way1: Select **ON/OFF** in the Setting Menu to turn on/off the 2.4G remote controller.
Way2: In the Video mode, press the **Down Button** for seconds to turn on/off the 2.4G remote controller quickly.

English

- **Video**
To start recording:
Press the Video Button.
To stop recording:
Press the Video Button again.

- **Photo**
To take a photo:
Press the Photo Button.

NOTES:
- Verify the camera's in Video/Photo Mode first. If the camera is set in Playback or Setting Menu, the camera can not be controlled by the remote.
- Be sure to remove the remote control battery and put it in a safe and reliable place, if do not use for a long time.
- The remote control will always be in standby state, if the indicator is not on, the battery was out of power.In order to confirm the normal use of the remote control, please replace the remote control battery regularly and in time as following steps:

English

WATERPROOF CASE

Specially designed for diving, surfing, snorkeling and other water sports activities. The waterproof case does not only offer greater waterproof protection to your camera, it also offers extra protection against dust, shock and impact. Made of durable, high-quality polycarbonate material enclosed it with high-qualityBuilt-in the use of the waterproof case, you can record activities even 40M under water and it won't damage the shooting effect, dirt and wind,Your movement and photographic effect won't be affected by sunheat pressure, Convenient to take camera with other accessories mount through this waterproof case.

Note: Camera does not record sound when it is in the waterproof case.

English

HOW TO OPEN:

1)Pick the black latch up on the top of the case.
2)Pull up the buckle of the case.
3)Open the back cover of the case.

HOW TO CLOSE:



1)Place close the back door of the case.
2)Pull down the latch and lock it to the back door.
3)Press down the buckle.

English

Tips:
1.Please tear the protective films on the waterproof case lens before shoot / record.
2.To achieve better waterproof performance, the voice record within the waterproof case will be weakened.

DUSTPROOF BACKDOOR REPLACEMENT:

1)First the dot of the waterproof case as circled place.
2)Hold the case with one hand, pull the waterproof back cover off.
3)Insert the lower half of the dustproof backdoor in the dot, then push the upper half into the dot until the whole backdoor being totally installed.

NOTES:
- In order to capture a clear video or photo, please tear off the lens protection film of the waterproof shell before use, and protect well the lens window from scratch after use.

English

- Before sealing the waterproof case, keep the camera housing's White Silicone Seal Ring clean, a single hair or grain of sand cause a leak. You can test by closing the case without inserting the camera. Submerse the case in water for about a minute. Remove the case from the water, dry off its exterior with a towel, and then open the case. If the interior is dry the case is safe for use under water.
- Before sealing the waterproof case, make sure the waterproof case is sealed well before use.If the white silicone sealing ring is found to be damaged, it should be replaced immediately.Rinse with clean water and replace the new waterproof shell in time.
- Please dry it in time after use, otherwise the waterproof shell metal button will dust and reduce the waterproof performance. After use in in seawater or seaside, you will need to rinse the outside of the housing with fresh water and then dry. This will prevent corrosion of the hinge pin and salt buildup in the seal, which can cause failure. Do not flush the interior with water.
- When use the camera with the waterproof in low temperature, such as Winter, Rainy Day, Underwater and so on, please do the anti fogging treatment so as to avoid the blurred video. It is recommended to add antifog film / insert the antifog film into the waterproof case to prevent the lens from fogging in low temperature or humid environment.
- Keep it safe from falling and dropping and high temperature above 45°C.
- Waterproof shell is a disposable product, we strongly recommend according to the usage of the environment and frequency, to replace the waterproof shell in time.

English

ACCESSORIES

English

English

Mounting Your Camera

Attach your camera to helmets, gear and equipment.
The following assembly methods are for reference only!

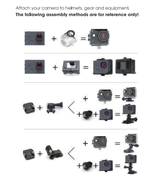

English

English

Notes:
- Our standard accessories are the basic version, If you need different types of accessories, you need to purchase them separately.
- With different types of accessories, the camera can be used in different occasions. Please purchase different types of accessories kit according to your needs.
- Our camera can be partially compatible with accessories from other brands such as GoPro. We recommend purchasing the corresponding accessories separately from Amazon.

Warranty
We warrant this device 12 MONTHS from date of the original purchase for manufacturer defects.
If the device fails due to a manufacturing defect, please contact seller directly to initiate return and warranty process.
The following are excluded from MUSON warranty cover:
Device purchased as second hand, used or from unauthorized seller.
Damage resulted from misuse and abusive action.
Damage resulted from chemical, fire, radioactive substance, poison, liquid.
Damage resulted from natural disaster.
Damage caused to any third party / person / object and beyond.

Statement
We can only provide after sale service for products purchased directly from MUSON or MUSON authorized distributor. If you have purchased from a different seller, please contact them for any exchange or request.

English

Introduction

Thank you for choosing MUSON Max 1 action camera. Please read the manual carefully, and keep it for further reference. If you need any assistance, please contact our customer support team at **support@musonwb.com.**

Cautions

- This is a 4K action camera. It is normal for the housing to exert heat under use.
- Don't expose the product directly to high temperatures over 45°C.
- Please peel off transparent protective films on lens and screen of camera before using.
- Please properly protect waterproof lens and screen of camera after using.
- Keep it safe from falling and dropping.
- Keep it distance from any strong magnetic interference objects like electrical machine to avoid strong radio waves that might be damaging the product and affect the sound or image quality.
- In case of overheating, unusual smoke from the device, unplug it immediately from the power outlet to prevent hazardous fire, electric shock or further damage to the device.
- Shield the device in a cool, dry and dust free location.
- Do not modify the camera if in any way if the camera has been detached the warranty will be void.

English

Introduction

1 - Mode / Power Button
2 - Shutter
3 - Charging Indicator
4 - Working Indicator
5 - Screen
6 - Shutter / Select Button
7 - Batter Door
8 - Latch
9 - UP / Wifi Button / Zoom In
10 - Down / Remote Button / Zoom Out
11 - Speaker
12 - Micro USB Port
13 - Butter Mic
14 - Micro SD Card Slot
15 - HD Output Port
16 - DC 3.5 External Mic Port

Tips:
- Verify the camera's in Video Mode. Press and hold the Up Button to turn on/off Wi-Fi.
- Verify the camera's in Video Mode. Press quickly the Down Button to turn on/off remote.
- Verify the camera's in Photo Mode. Press and hold the Up Button or Down Button to Zoom in/out.
- Peel off films on lens and screen before using.

GETTING STARTED

HELLO

Welcome to your new camera. To capture video and photos, you need a micro SD card (sold separately).
We strongly recommend to use the branded memory cards purchased from regular channels for maximum reliability and stability during recording and in high vibration activities.

STORAGE/MICRO CARDS

Use brand name memory cards that meet following requirements.We strongly recommend to use the branded memory cards purchased from regular channels for maximum reliability and stability during recording and in high vibration activities.

- micro SD, micro SDHC, or micro SDXC
- Class 10 or UHS-I at least for 1080P or 720P video resolution
- UHS-III rating at least for 4K Video resolution.
- Capacity up to 128GB (FAT32)

NOTES:
- Please format the micro SD,micro SDHC and micro SDXC memory card on the camera before using.
- Please insert the memory card in correct way, if not , the card slot maybe damage by the wrong way.
- To keep your micro SD card in good condition, reformat it on a regular basis.
- Micro SD card stops recording when the storage of each file is over 4GB and starts to record again on a new file.
- Reformatting erases **all** of your content, so be sure to offload your photos and videos first.
- Don't place your Micro SD card near strong magnetic objects to avoid data error or loss.

To Power On:
Press and hold the Mode button for seconds, The camera beeps while the camera status light is on.
To Power Off:
Press and hold the Mode button for three seconds, The camera beeps while the camera status light is off.

English

OVERVIEW OF MODES

Turn camera ON and repeatedly press the **Mode Button** to cycle through camera modes and settings.
The modes will appear in following order:

STORAGE/MICRO CARDS

CUSTOMIZING YOUR CAMERA

Repeatedly press the **Mode Button** quickly to **Playback** and **Setting Menu**, use the **UP** or **Down Button** to cycle through the various options and press the **Shutter/Select Button** to select desired option, to exit, press **Mode Button.**

VIDEO SETTING

■ **Video Resolution:**
4K 60fps (3840*2160) / 4K 30fps (3840*2160) / 1080P 120fps (1920*1080) / 1080P 60fps (1920*1080) / 1080P 30fps (1920*1080) / 720P 240fps (1280*720)

■ **EIS** (Electronic Image Stabilization) **On /Off**
This camera is equipped EIS function with exeis gyroscope to detect motion changes. When the camera tilts, moves, shakes, this sensor use image stabilization compensation algorithm to compensate the change and produce stable videos, especially in activities with relatively small angle (about 6 degrees)but that motion including cycling, motorcycling, and handheld uses.
Note:
- EIS does not support 1080P 120fps / 720P 240fps video resolution.
- If you turn on EIS, **Slow Motion**、**Auto Low Light** and **LDC** will not be available automatically.

English

- The video resolution is set to 4K60fps.
In low-light or inadequate light environments, such as night, indoor, tunnel, underground parking, etc., it is recommended to turn on the automatic low light mode for better video effects.
In a well-lit or highlight scene, such as an outdoor daylight scene, it is recommended to turn off the automatic low light mode to avoid over exposure.

■ **EV:**(Exposure Value): **-3 ~ +3**
By default, your camera uses the entire image to determine the appropriate exposure level. However, EV lets you select an area that you want the camera to prioritize when determining exposure. This setting is particularly useful in shots where an important region might otherwise be over- or underexposed.
When you change this setting, the LCD display immediately shows you the effect on your image. If you change modes, the camera returns to using the entire scene to determine the correct level of exposure.

■ **Time Lapse Photo: Off / 1 Sec / 3 Sec / 5 Sec / 10 Sec / 30 Sec / 1 min**
Time Lapse Photo captures a series of photos at specified intervals. Use this mode to capture photos of any activity, then choose the best ones later.
Note: If use Time Lapse Photo function, **Burst Photo**、**Delay Timer** and **Long Exposure** will not be available automatically.

■ **TL Duration: Unlimited / 5 Min / 10 Min / 15 Min / 20 Min / 30 Min / 60Min**
Default setting is Unlimited.
Note: If you want to use TL Duration, please turn on Time Lapse Photo interval first.

■ **Burst Photo: Off / 3 photos / 7 photos / 15 Photos / 30 Photos**
Default setting is off.
Continuous shooting can take up to 30 photos in a certain amount of time after you press the Shutter button.
- If use Burst Photo function, **Time Lapse Photo TL Duration** and **Long Exposure** will not be available automatically.

English

■ **Delay Timer: Off /2 sec /10 sec**
A Delay Timer gives a delay between pressing the shutter release and the shutter firing. It is most commonly used to let photographers to take a photo of themselves (often with family).
Note:
- If use Delay Timer function, **Time Lapse Photo TL Duration** and **Long Exposure** will not be available automatically.

■ **Long Exposure: Off /1 sec /2 sec /5 sec /8 sec /30 sec /60 sec**
Default setting is off.
Long Exposure is an exposure method that selects a slow shutter speed. Long exposures can make dark scenes clearer and get fantastic effects. Especially in night vision scenes such as starry sky or city night traffic, the camera can also take fantastic photos at night.
Note:
- If use Long Exposure function, **Time Lapse Photo TL Duration**、**Burst Photo** and **Delay Timer** will not be available automatically.

■ **Date Stamp: Off / Date / Date & Time**
If you turn on Stamp, this camera adds stamp to the photos you take. If you turn off Stamp, this camera will not add stamp to the photos you take.

SYSTEM SETTING

■ **Frequency: 50Hz/60Hz**
Default setting is 50Hz.

■ **Sound: Shutter / Bootup / Beep / Volume**
- Shutter : On / Off
Sets the camera's shutter sound.
- Bootup : On / Off
Sets the your camera's power on sound.
- Beep: On/Off
Sets the camera's operation sounds.
- Volume: 0 / 1 / 2 / 3
Sets the volume of your camera's record sound.

■ **AE Meter: Center / Multi / Spot**
Default setting is Multi.
In photography, the metering mode refers to the way in which a camera determines exposure. Cameras generally allow the user to select between centre, average or spot metering modes. The different metering modes allow the user to select the most appropriate one for use in a variety of lighting conditions.

■ **AWB: Auto / Cloudy / Daylight / Incandescent / Fluorescent / Shorkeling / Snow Mode**
AWB (Auto White Balance) lets you adjust the color temperature of videos and photos to optimise for cool or warm lighting conditions. When you change this setting, the LCD display immediately shows you the effect on your image.

English

NOTE:
- 4K60 requires a high data transmission stream. If you playback 4K60 video file through a card reader, you may not be able to obtain sound playback. In order to get better playback results, it is strongly recommended to copy the 4K60 video directly to the computer to playback.
- The camera might not be compatible with the files from different solution camera or other device.
- The quick time player is good compatibility with MOV format video files. We strongly recommend using the Quick Time Player to play back video files on your computer.

■ **DELETE FILE ON CAMERA**
1.Verify the camera's in Video or Photo Playback menu.If your micro SD card contains a lot of content, it might take a minute for it to boot.
2. Press the Up or Down Button to locate the file you want to delete.
3. Press the Shutter / Select Button to select it. Then the screen shows 'Delete - Selected file?'. "Current (NU)" (NU / NO).
4. Press Shutter Button, the selected file or all files will be deleted.

English

BATTERY

The camera contains sensitive components, including the battery.

■ **BATTERY STORAGE AND HANDLING**
- Do not store in temperature above 140°F/60°C.
- Avoid exposing your camera to very cold or very hot temperatures. Low or high temperature conditions may temporarily shorten the battery life or cause the camera to temporarily stop working properly. Avoid dramatic changes in temperature or humidity when using the camera, as condensation may form on or within the camera.
- Do not dry the camera or battery with an external heat source such as a microwave oven or hair dryer.
- Damage to the camera or battery caused by contact with liquid inside the camera is not covered under the warranty.
- Do not store your battery with metal objects, such as coins, keys or necklaces. If the battery terminals come in contact with metal objects, this may cause a fire.
- Do not make any unauthorized alterations to the camera. Doing so may compromise safety, regulatory compliance, performance, and may void the warranty.
- Please do no throw the camera or its battery to the garbage.Find a specific recycling point for it.

English

WARNING:
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred,microwave, or paint the camera or battery.
- Do not insert foreign objects into the battery opening on the camera.
- Do not use the camera or the battery if it has been damaged.-for example, if cracked, punctured or harmed by water. Disassembling or puncturing the battery can cause an explosion or fire.

■ **CHARGING THE BATTERY**
1.Connect the camera to USB power supply (5V/1A commended).
2.The charging status light remains ON while the battery is charging.
3.The charging status light will turn OFF when the battery is fully charged.
Notes:
- Charging time: 4-Hours for 5V 1A power supply
- Please make sure the camera is shuttled down while charging.
- Do not charge the camera while being as a dash camera and use 5V/1A transformer on charge.

■ **MAXIMIZING BATTERY LIFE**
If the battery reaches 0% while recording, the camera saves the file and powers off.
To maximize battery life, follow these guidelines when possible:
- Turn off Wireless Connections
- Capture video at lower frame rates and resolutions
- Use Screen Saver setting.

English

Wi-Fi APP

The Wi-Fi App lets you control your camera remotely using a smart phone or tablet; features include full camera control,live preview,playback and sharing of selected content and more.

CONNECT TO THE Smart DV APP
1.Download Smart DV App to your mobile device from the Apple App Store or Google Play.
2.Turn on your camera, then press Up Button for seconds to turn on WiFi.
3.Turn on WiFi Setting of your mobile device, connect to the WiFi SSID "Muson Max 1_******" ("******" will be a series of random numbers & letters in your unit)
4.& Enter the password: "1234567890".
5.Open the app "Smart DV".on your smart phone or tablet.
6.Tap "Add new camera".
7.Tap "Wifi Connect".
Note: Press Up Button again if you want to turn off WiFi.

English

DOWNLOADING AND SHARE YOUR CONTENT
1.Open the "Smart DV" app.
2.tap "Albums icon" at the left corner of the bottom screen.
3.Select files in "Photos" or "Videos" at the top of the screen.
4.tap "Download icon" at the right corner of the bottom screen to download.
5.Save or Share your content.

The **iSmart DV App** is compatible with smart phone and tablet listed below:
For Apple IOS
*iPhone(iOS 8.0, 8G/6G). (above IOS12)
*iPhone Air & Mini (above