QUICK START GUIDE

poooliprint. L1/L2

TABLE OF CONTENTS

In the box ____ 1
My PoooliPrinter parts ____ 2
How to use ____ 3
Download the Poooli App ____ 4
Bluetooth connection ____ 5
Magnetic beak ____ 6
How to replace a paper roll ____ 7

IN THE BOX



PoooliPrinter

Quick Start Guide

PoooliPrinter
White Roll x1
(Inside the Printer)

USB Cable

MY POOOLIPRINTER PARTS

1. Power Button
2. Detachable Magnetic Beak
3. USB Connector
4. Reset Button

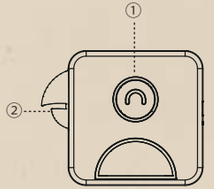

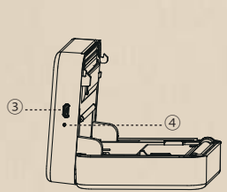

HOW TO USE

Powering ON/OFF

Hold power button for 2 seconds to turn ON/OFF PoooliPrinter.

Light Status

Continuous: Standby / Charging Completed
Slow Flash: Charging / Updating
Fast Flash: Out of paper roll / Cover Open / Low Battery

Recharging

Fully recharge your device before the first time use.
It can be recharged from a USB charger.
It takes about 90 minutes to fully recharge.

DOWNLOAD THE POOOLI APP

SCAN ME

BLUETOOTH CONNECTION

Open the App and click "CONNECT".

Connect to the device by searching for Bluetooth or Double tap the Power Button on your PoooliPrinter to print a QR Code and scan to connect.

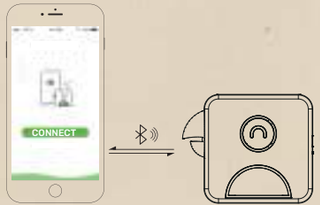

MAGNETIC BEAK

You can simply move the magnetic beak as follow:

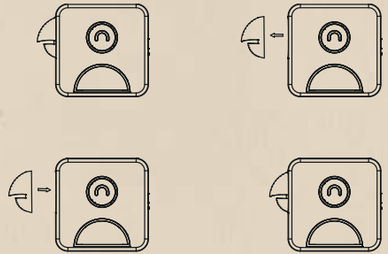

HOW TO REPLACE A PAPER ROLL

Hold your PoooliPrinter vertically as shown on Figure 1
Push down the cover as shown on Figure 2
When replacing a paper roll, place the roll of paper coming out in the direction as shown on Figure 3
Note: Some paper rolls may have to be placed upside-down.
Once the paper roll is properly installed you can close the cover back to its original shape.

Figure 1

Figure 2

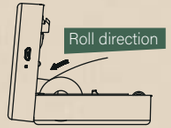

Figure 3

pooolipri**n**t.

your daily life

ENJOY 15% OFF YOUR ORDERS
LIFETIME WITH CODE **LIFE15**

PLEASE TAG US ON SOCIAL MEDIA
FOR YOUR CHANCE TO BE FEATURED!

www.poooliprint.com