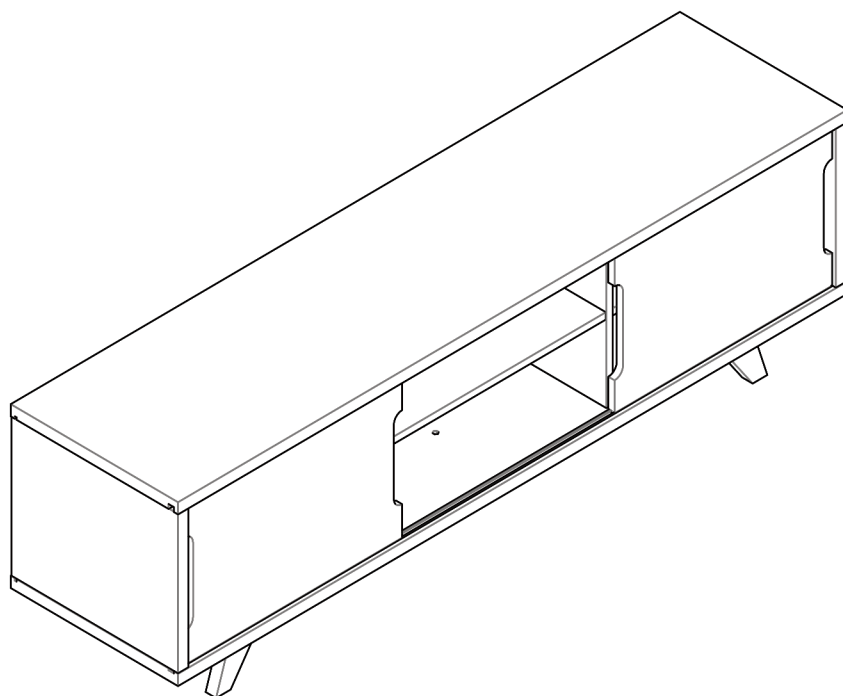# ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED

Phillips Screwdriver
(Not Included)

Hammer
(Not Included)

2 - Persons Recommended

ASSEMBLY RATING

EASY ⟶ DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

CHECK
BEFORE STARTING

Are you missing anything?

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.

Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.
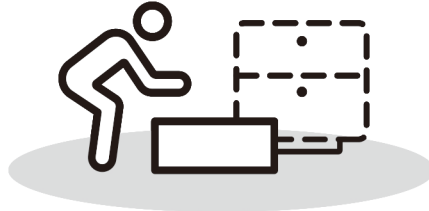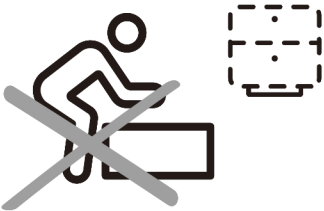
PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.
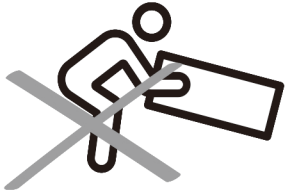
Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

Suitable Location

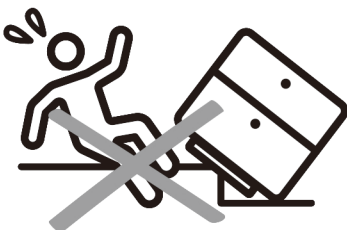Assembling near the area of the intended location is highly recommended.

Sufficient Space

Make sure you have enough space to move around during the assembly.

Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

Flat Surface

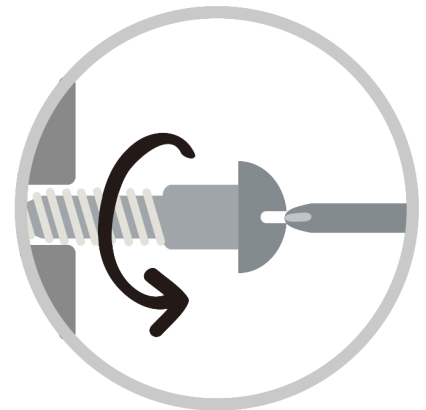Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY
AND
CARE ADVICE

⚠️ **FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.**

Position each part correctly and insert screws or bolts into their respective holes.

Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.

Save the instructions and store any supplied tools for later maintenance.
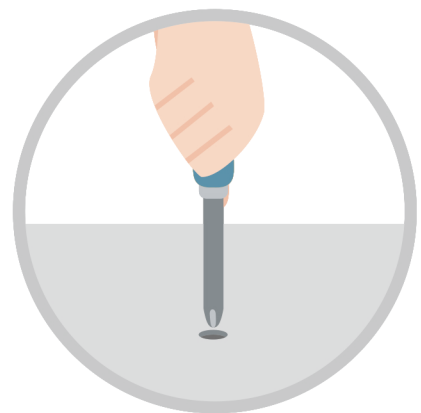
After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

Note :
Every cam lock bolt must have a cam lock connector in order to fasten the parts together.
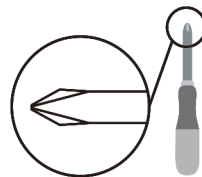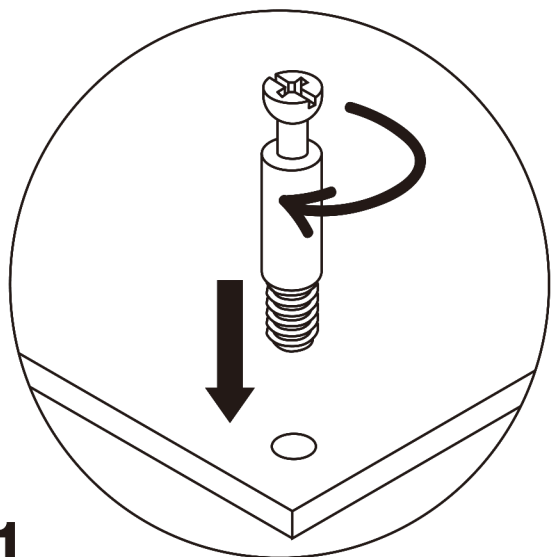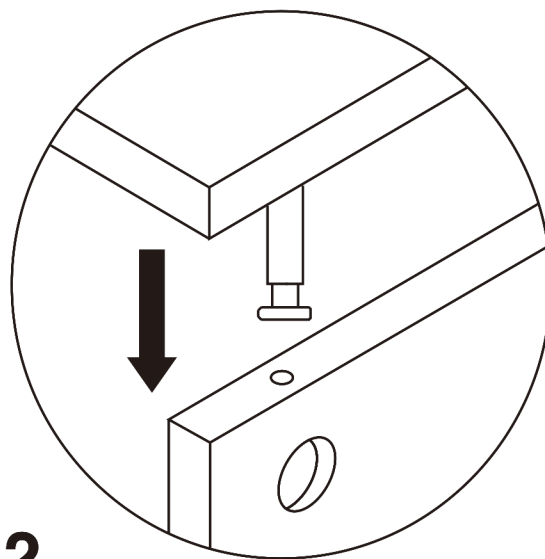
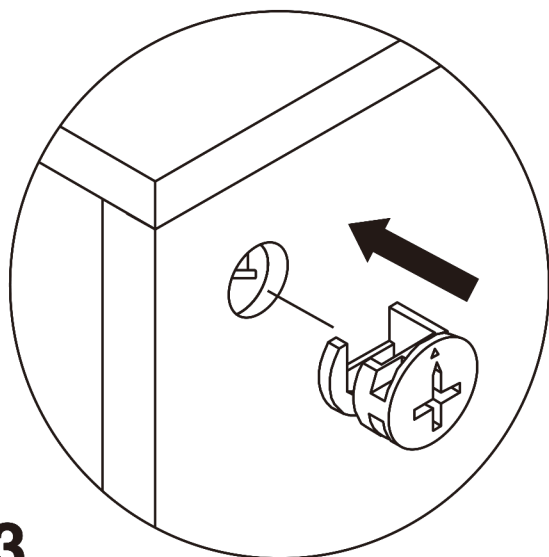cam bolt   cam lock   screwdriver
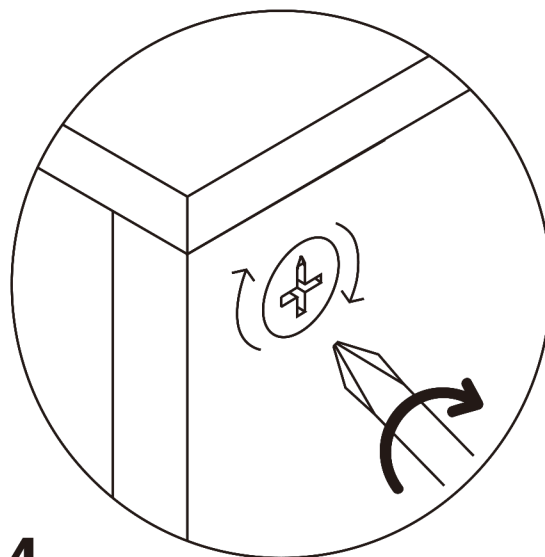
1

Screw the cam bolt into panel.

2

Insert the cam bolt into the bolt hole of joint panel.

3

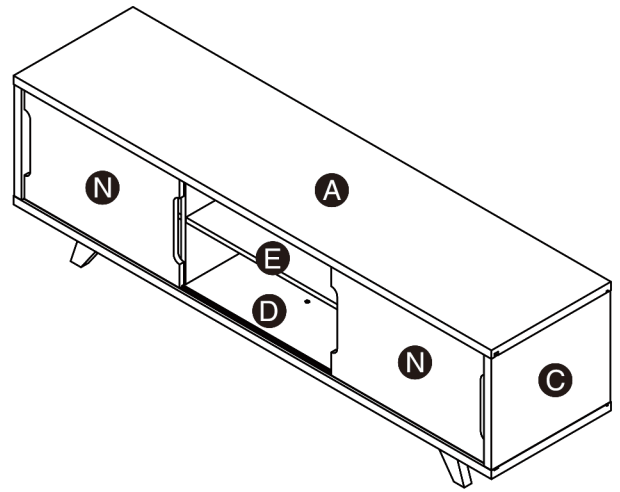Align the cam lock with its side opening (or arrow) pointing to cam bolt.

4

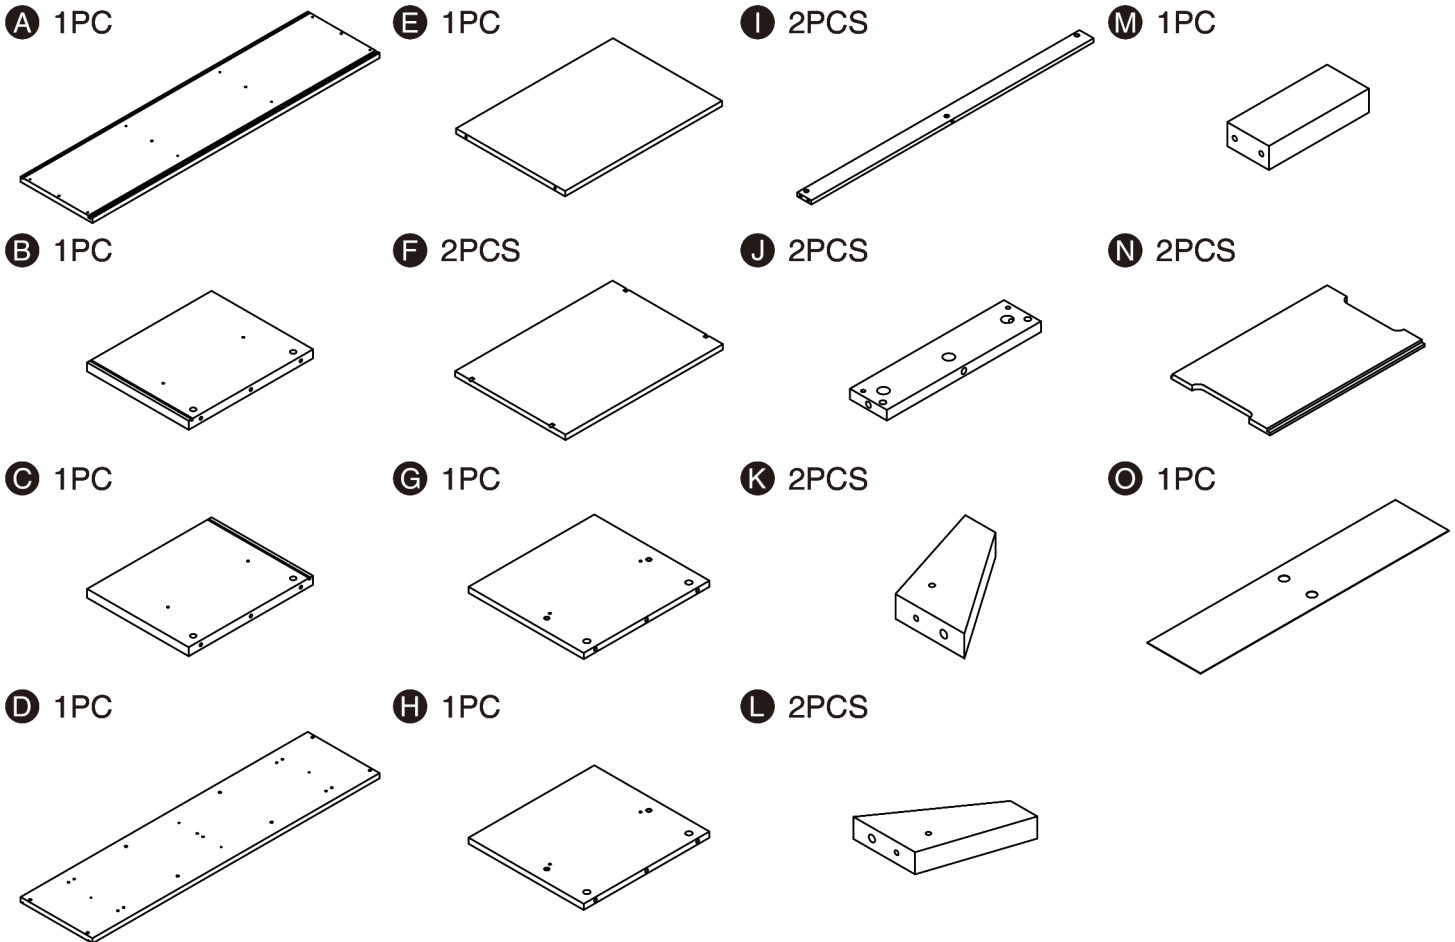Turn the cam lock clockwise gently until it will not turn any more.

TV STAND

- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

PARTS

A 1PC

B 1PC

C 1PC

D 1PC

E 1PC

F 2PCS

G 1PC

H 1PC

I 2PCS

J 2PCS

K 2PCS

L 2PCS

M 1PC

N 2PCS

O 1PC

HARDWARE

① 20PCS ② 20PCS ③ 12PCS ④ 18PCS

1.97"

⑤ 8PCS ⑥ 4PCS ⑦ 4PCS

0.75"

ACCESSORIES

A1 5PCS   A2 1PC   A3 14PCS   A4 1PC

GET READY

Please group boards as below.

E 1PC   **G** 1PC   **H** 1PC
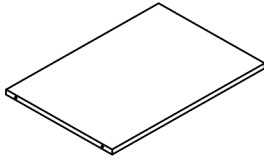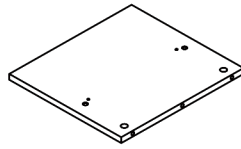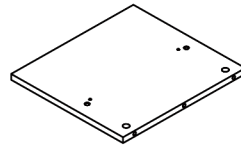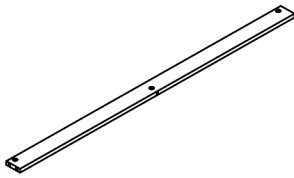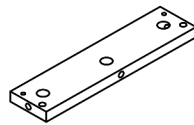
I 2PCS   **J** 2PCS   **K** 2PCS   **L** 2PCS
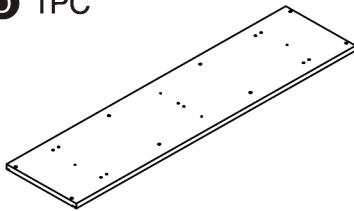
D 1PC   **M** 1PC
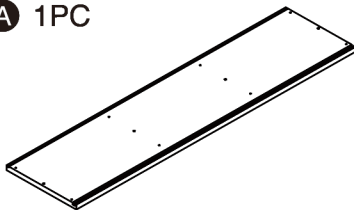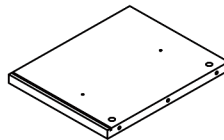
A 1PC   **B** 1PC   **C** 1PC
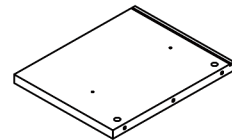
O 1PC
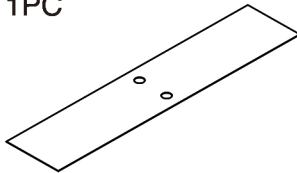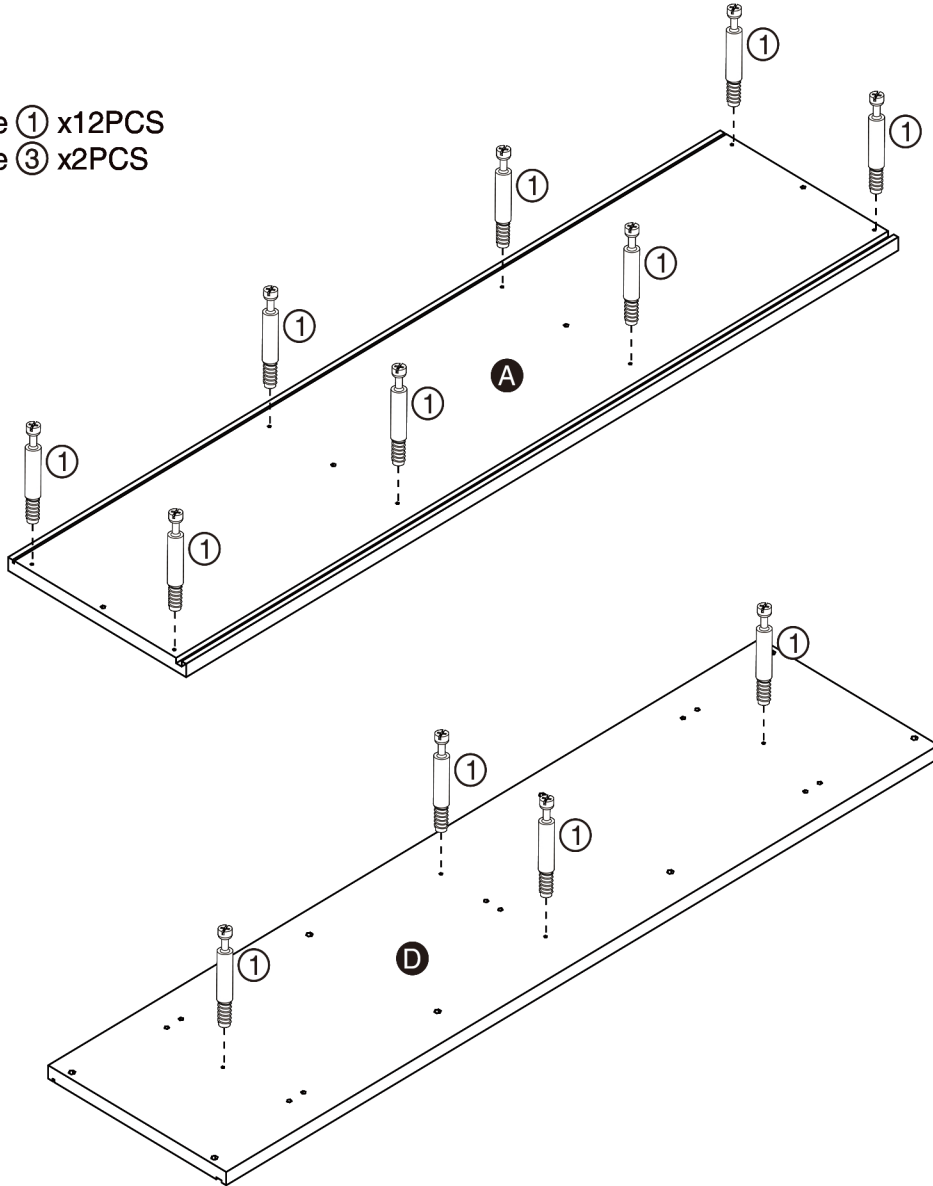
Body
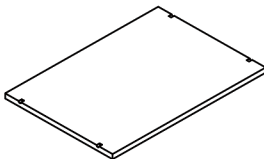
F 2PCS   **N** 2PCS
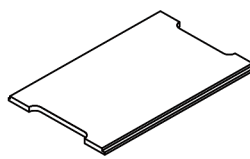
Doors
/Shelf

ASSEMBLY INSTRUCTIONS

1
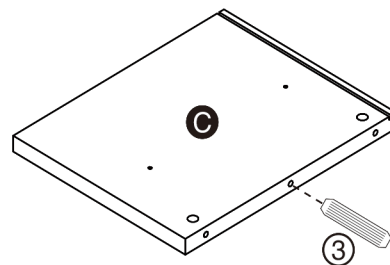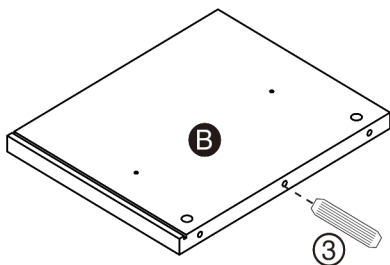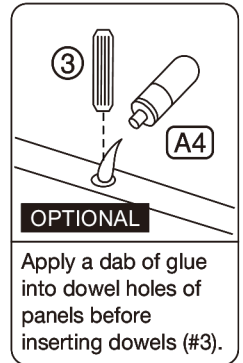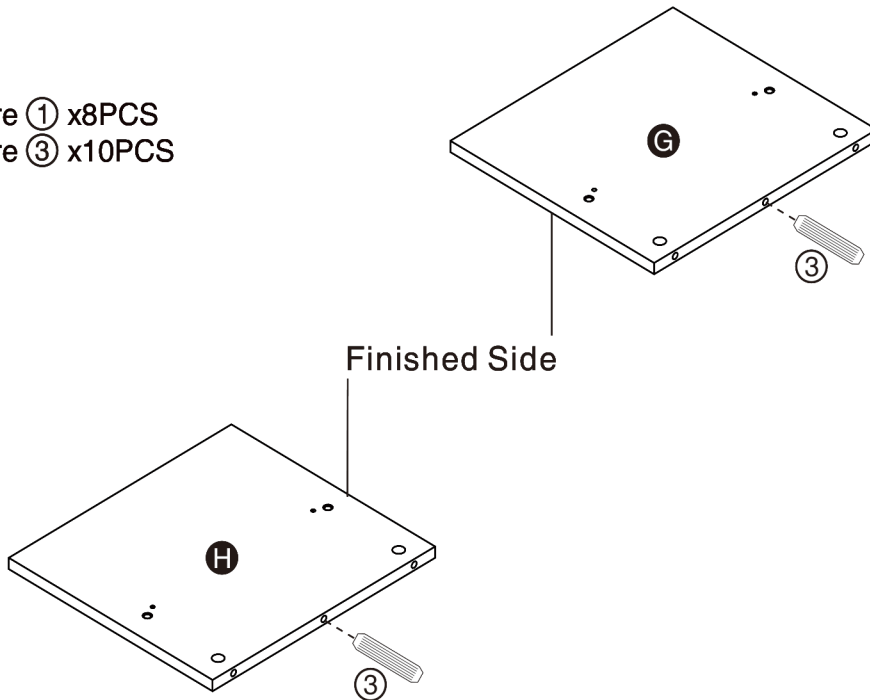
Hardware ① x12PCS
Hardware ③ x2PCS

③

A4

OPTIONAL

Apply a dab of glue into dowel holes of panels before inserting dowels (#3).

2

Hardware ① x8PCS
Hardware ③ x10PCS

G

Finished Side

③

③
Ⓐ4
OPTIONAL
Apply a dab of glue into dowel holes of panels before inserting dowels (#3).

H

③

X2

③

I

①

①
J
X2

③

①
K
X2

③

①
L
③
X2

3
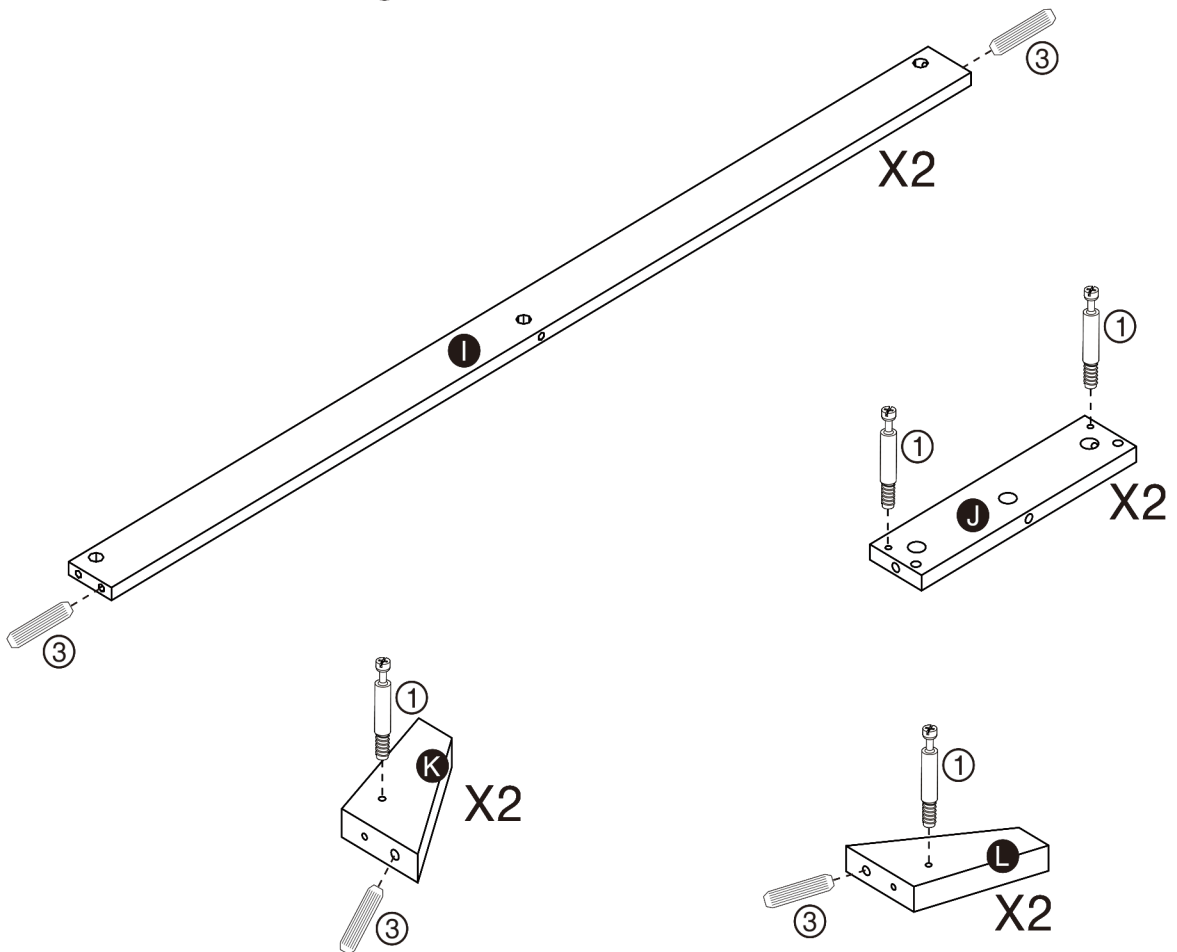
Part Ⓔ x1PC
Part Ⓖ x1PC
Part Ⓗ x1PC

Hardware ④ x4PCS

Accessory A2 x1PC

Front
Top

Finished Side
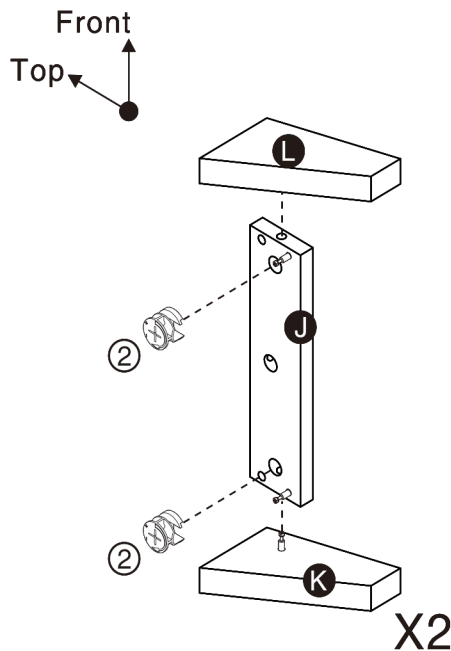
4

Part Ⓙ x2PCS
Part Ⓚ x2PCS
Part Ⓛ x2PCS

Hardware ② x4PCS

Front
Top

①
②
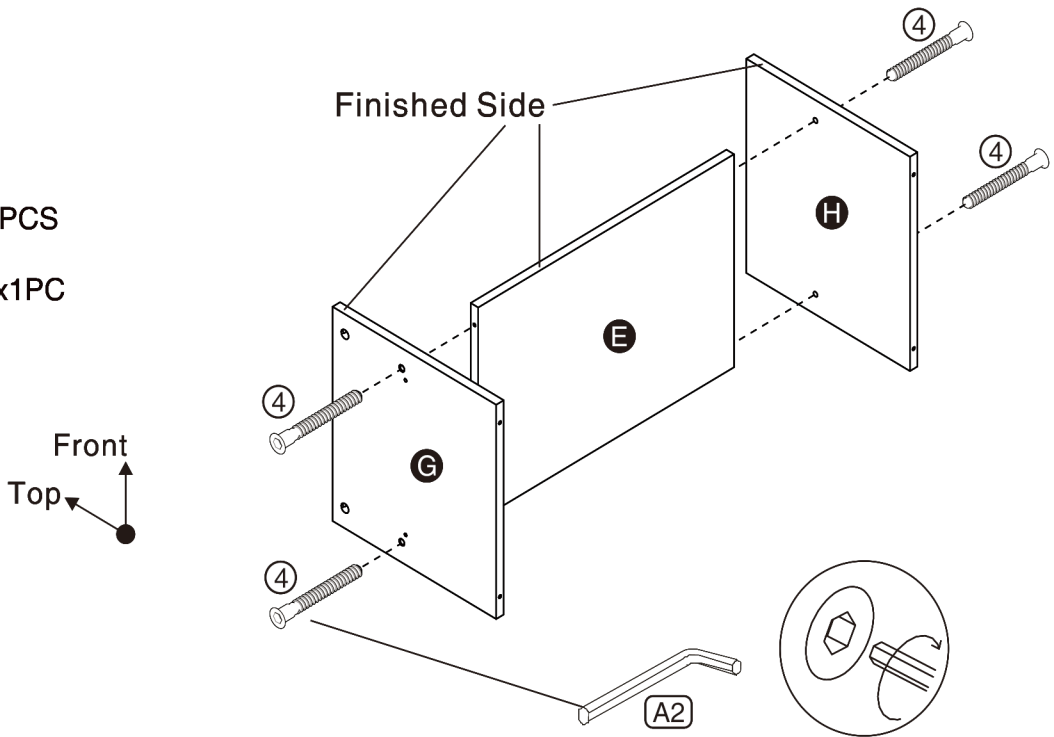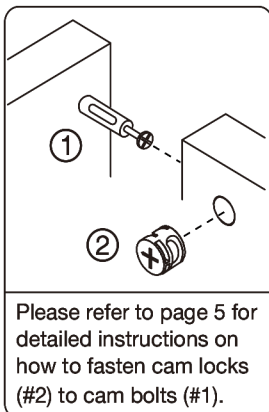
Please refer to page 5 for detailed instructions on how to fasten cam locks (#2) to cam bolts (#1).
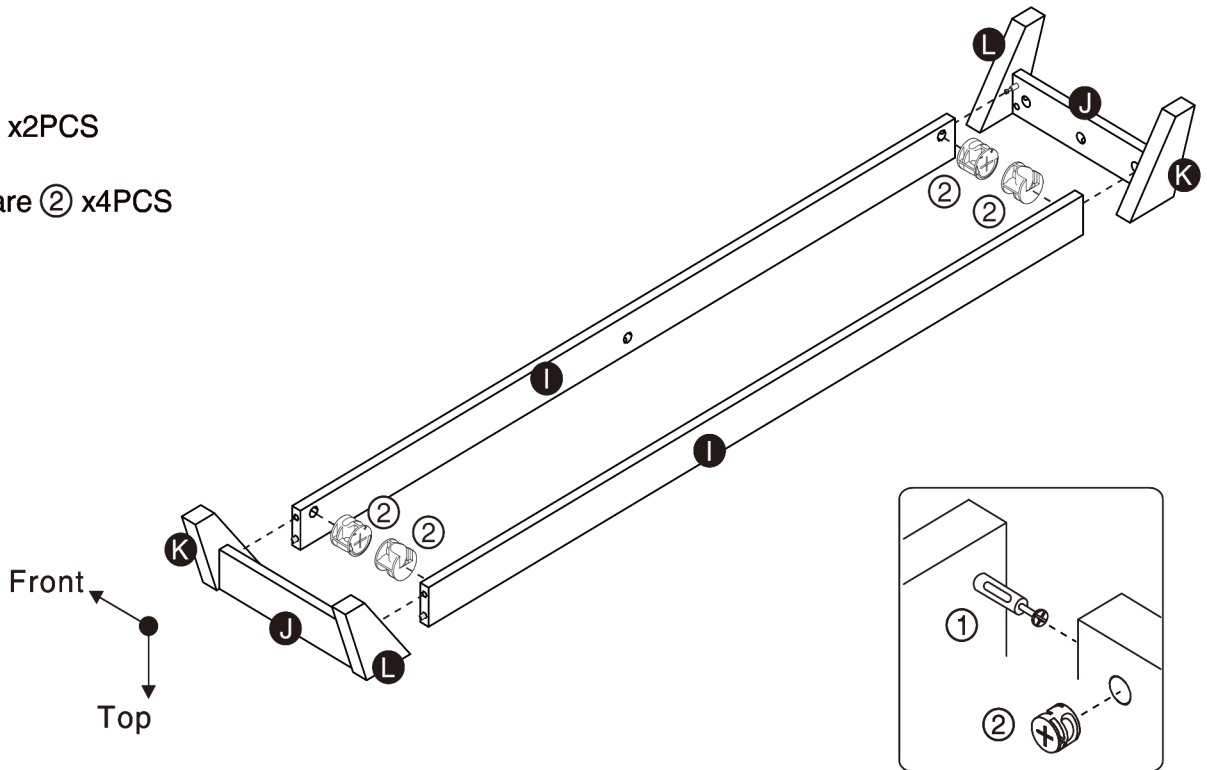
X2

5

Part **I** x2PCS

Hardware ② x4PCS
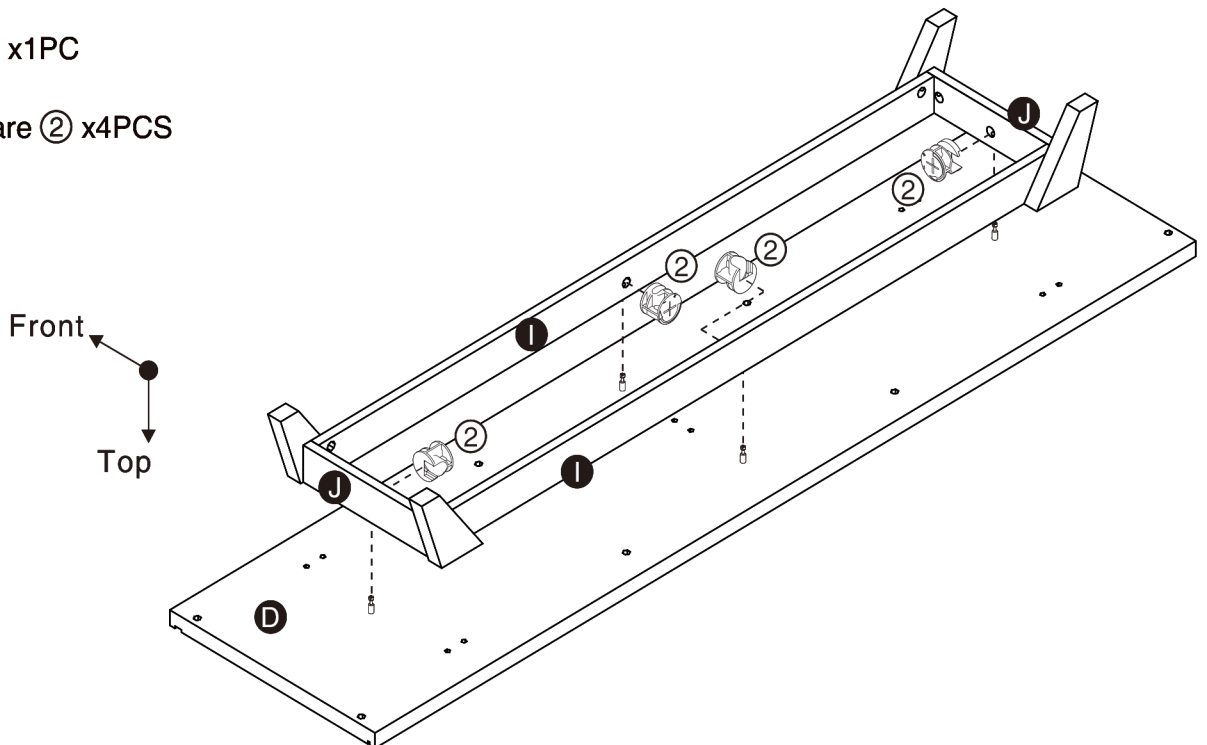
Front

Top

6

Part **D** x1PC

Hardware ② x4PCS

Front

Top

7

Part **M** x1PC

Hardware ④ x6PCS

Accessory A2 x1PC
Accessory A3 x6PCS

Top
Front

M

D

④
④
④
④
④
④

Use the provided stickers (#A3) to cover exposed locks.

X6

Flip ↓ 180°

A2
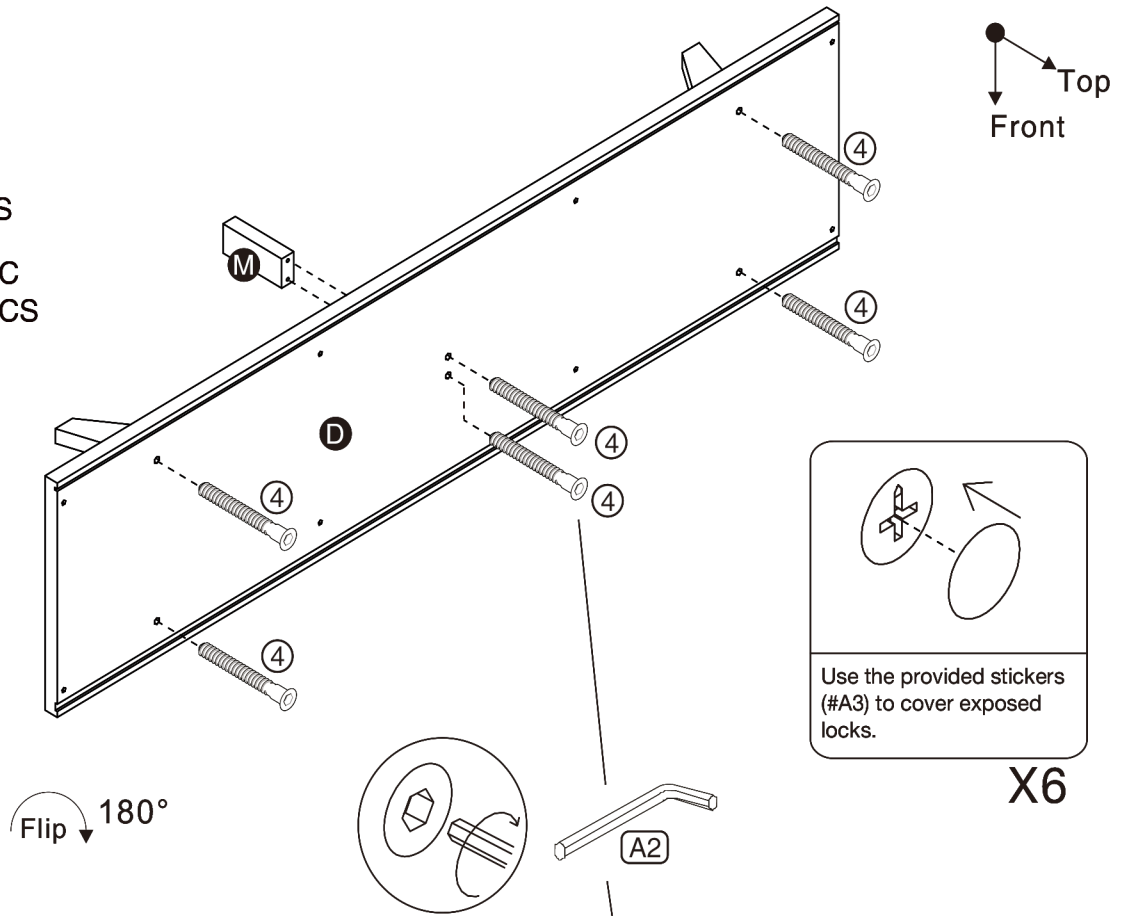
8
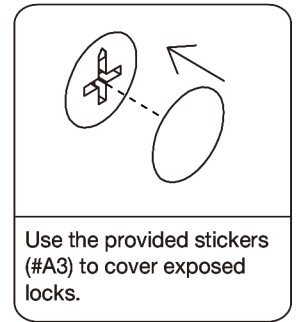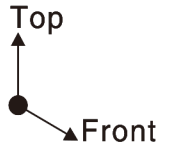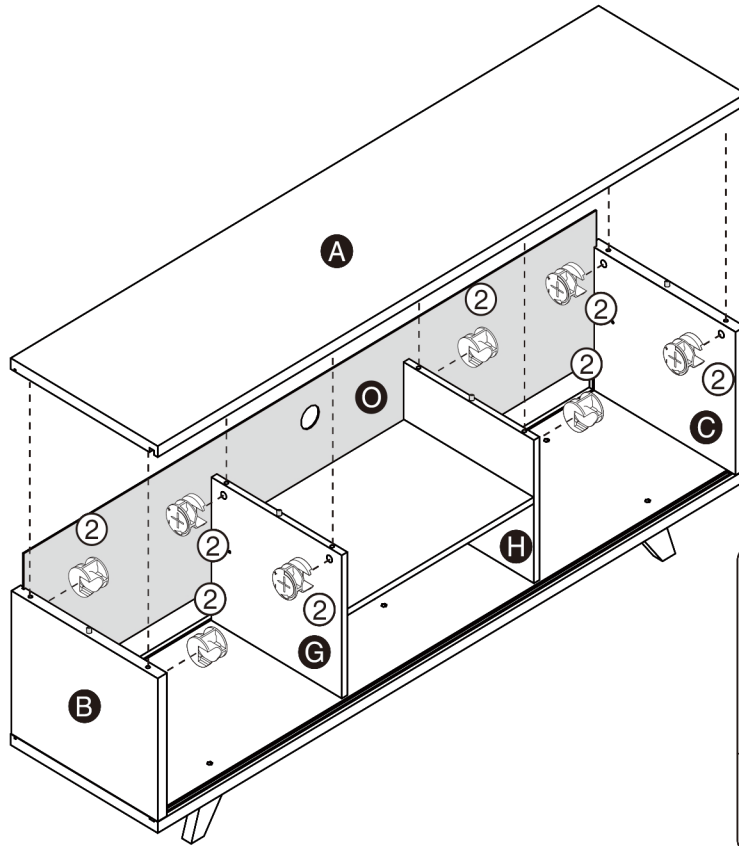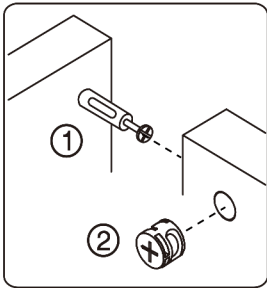
Part **B** x1PC
Part **C** x1PC

Hardware ④ x8PCS

Accessory A1 x5PCS
Accessory A2 x1PC

Finished Side

Front
Top

C

H

G

B

D

④
④
④
④
④
④
④
④

A1
A1
A1
A1
A1

Tap floor protectors (#A1) to the bottom of the feet,then secure by using a hammer.

9

Part Ⓐ x1PC
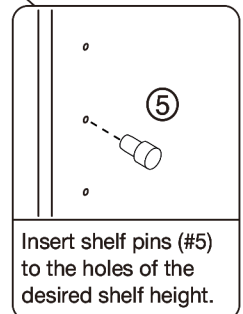Part Ⓞ x1PC

Hardware ② x8PCS
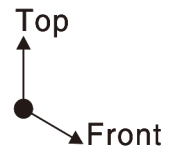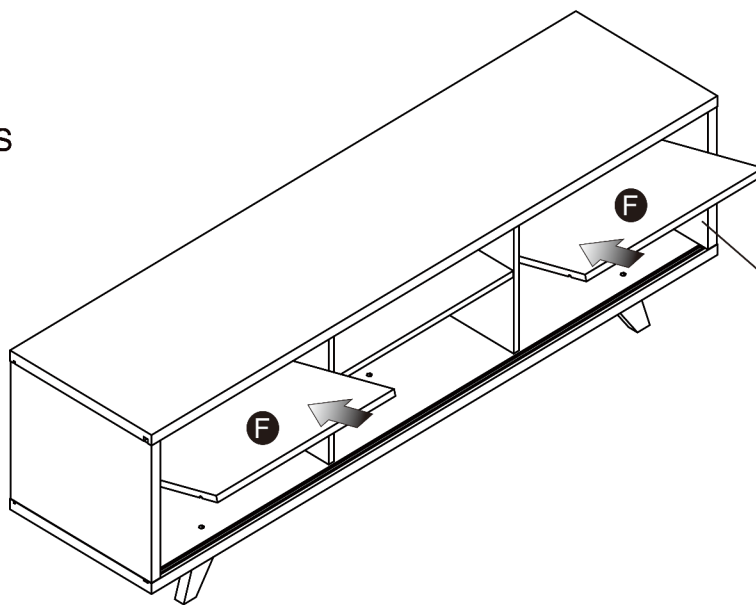
Accessory [A3] x8PCS

Top
Front

Use the provided stickers (#A3) to cover exposed locks.

X8

10

Part Ⓕ x2PCS

Hardware ⑤ x8PCS

Top
Front

Insert shelf pins (#5) to the holes of the desired shelf height.

X8

11

Part Ⓝ x2PCS

Top

Front

Ⓐ

Ⓝ

Insert top portion of panel (#N)
first through the lined gap.
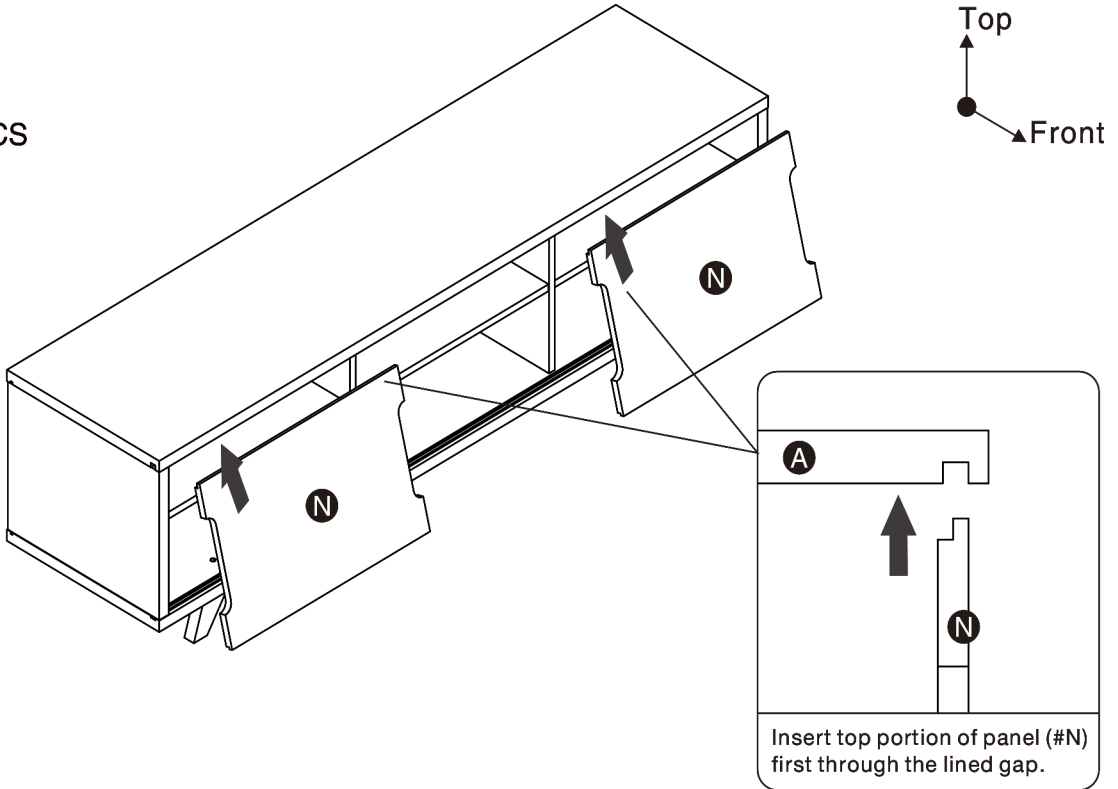
12

Hardware ⑥ x4PCS
Hardware ⑦ x4PCS

Top

Front

⑥

⑦

Insert fixative plates (#6)
through the thin lined
gaps between back and
side panels, then secure
by using screws (#7).
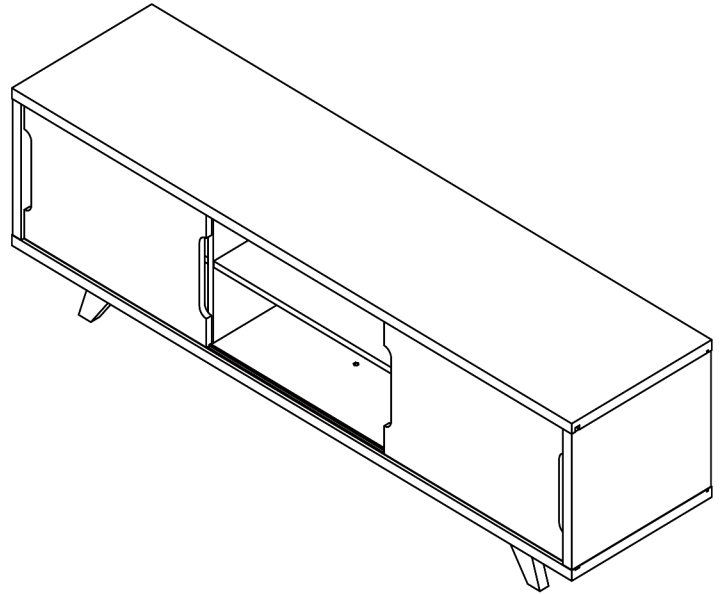
[No pre-drilled holes]

X4
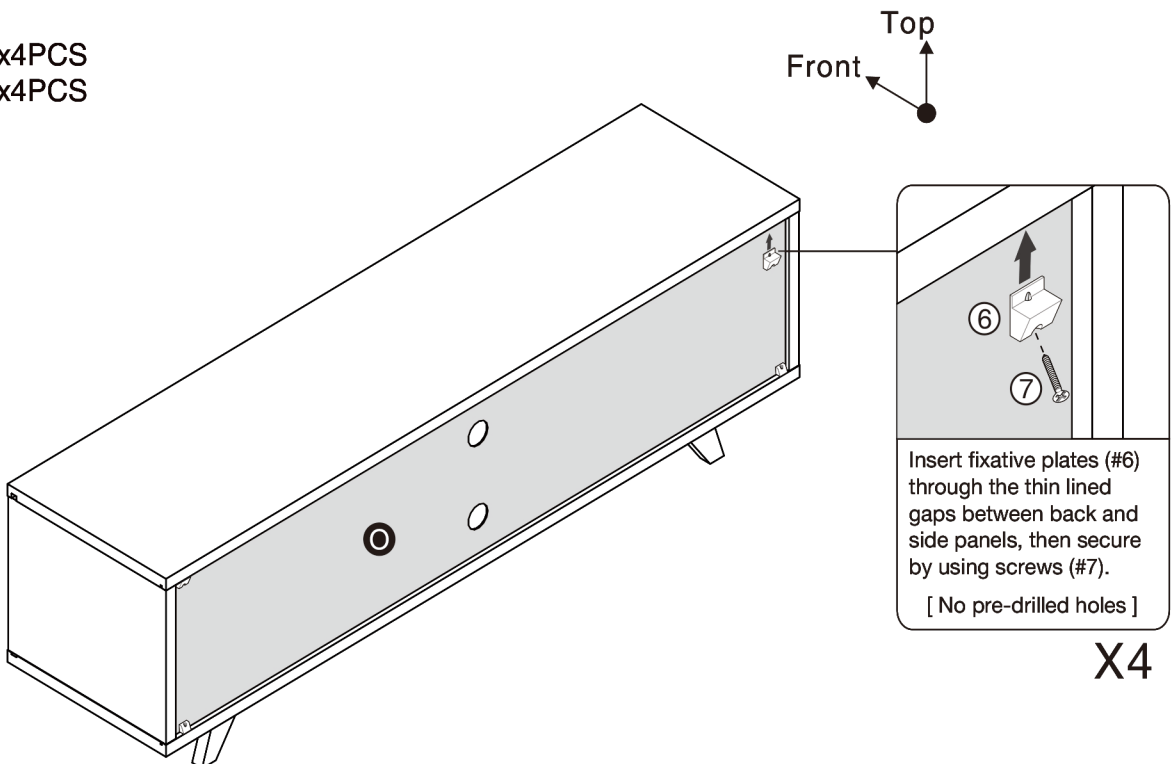
13

ASSEMBLY COMPLETED

✓ Please ensure the furniture rests on an even and flat surface. If the produst wobbles or feels loose,double-check all bolts and/or screws are properly tightened and secured.

✓ **Keep this handy!**

Please retain this instruction manual and any order-related information for future reference.