Operation Manual

SPYCRUSHERS
SPY CAMERA SUNGLASSES

www.spycrushers.com

BEFORE YOU BEGIN...

IMPORTANT NOTE: Prohibition against eavesdropping

All jurisdictions have specific laws and regulations relating to the use of cameras and video recorders. Before using any camera or video recorder for any purpose, it is the buyer's responsibility to be aware of all applicable laws and regulations that prohibit or limit the use of such products and to comply with the applicable laws and regulations.

PACKAGE CONTENTS:

- 1 SpyCrushers Spy Camera Sunglasses
- 1 Micro USB Cable
- 1 Sunglass Carrying Case
- Operation Manual (included, emailed and downloadable on SpyCrushers.com)
- 1 Microfiber Lens Cleaning Cloth

SPYCRUSHERS SPY CAMERA SUNGLASSES LAYOUT

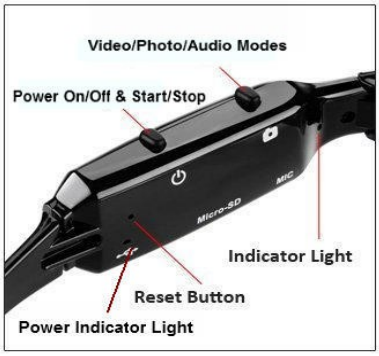

Product Demonstration Video available 24/7 online at

http://www.spycrushers.com/pages/video

***Please fully charge device before use.**

Operating Instructions:

Turn On

- Insert your required Micro SD Card (max 8GB) into the SD Card slot.
- Long press the Power On/Off button. The status indicator light will flash blue then go solid red. The devcie is now on and in standy video record mode.

Turning Off

- Press and hold the Power On/Off button until Power Indicator Light flashes and then goes out. The device has shut down saving all media files automatically.

Operations:

- The power button turns them on/off with a long press and a quick press of the same power on/off button while on will take photos when in photo mode (blue light), start/stop recordings when in video recording mode (red light) and audio only recordings when in auido recording mode (blue/red combined light). The video/photo/audio mode button changes modes with each click. The status indicator light will be red when its set to recording video, blue for photos and a blue/red combo for audio only. **Note: Make sure there is a Micro SD Card (up to 8GB) inserted, adequate light and the camera lens is not blocked. Recorded objects should be at least 1.5 feet away from the camera.**

Spy Camera Sunglasses as a PC Webcam:

- Turn on the Spy Camera Sunglasses. Connect the Spy Camera Sunglasses to your computer using the Micro USB Cable. Once connected press the Power On/Off button once to change the device to a webcam. Locate your new webcam under “Devices & Printers” inside Start menu.

Connect to Computer:

- When the Spy Camera Sunglasses are off it can be connected to your

computer using the Micro USB Cable. Plug the USB Cable connector into the device's USB port and the other end into your computer. The Spy Camera Sunglasses will be listed as a “Removable Disk” within your file directory.

- To disconnect safely please click the “Safely Remove Hardware and Eject Media” icon on the right bottom corner of your task bar. Then click “Eject” and safely unplug the USB cable from both your computer and the Spy Camera Sunglasses .

Charging:

- Connect the Spy Camera Sunglasses to your computer or a USB power source using the Micro USB Cable. **Blinking red light indicates charging a solid red light indicates charging is complete. Note: If blinking continues past 4-5 hours of continuous charging disconnect and use as normal.**

Setting the Date/Time Stamp: **There are two ways to set the time and date stamp.**

- Connect the Spy Camera Sunglasses to your computer. Under the Devices and Removable Storage Directory click on and open the “Removable Disk” or the name that represents the Spy Camera Sunglasses on your computer. Open and find the time or txt file. Open it and rewrite the date and time to the current date and time. **Do not change the format**. Only rewrite to the current date and time. Save file with new date and time. Disconnect USB Cable turn on the device make a new recording and verify.

- Connect the Spy Camera Sunglasses to your computer. Under the Devices and Removable Storage Directory click on and open the “Removable Disk” or the name that represents the Spy Camera Sunglasses on your computer. **If there is no TIME or TAG file visible,** right click inside the white space and go to “New” then click and create a ‘Text Document”. Name the text file “TIME”or “TAG” and save. Open open the file you just created and type the date and time in this format: yyyy-mm-dd hh:mm:ss. Therefore, fifteen seconds past 2:02pm on December 25th 2012 would be written as: 2012-12-25 14:02:15. Note the use of 24-hour time. Save the file, disconnect

the USB cable, make a new recording and verify.

- **NOTE: Still need help? Watch the "how to" change the date & time stamp instructional video online at: http://www.spycrushers.com/pages/video**

Reset

- To reset the Spy Camera Sunglasses use a toothpick or non-metal pointed object to push the reset button. Metal objects may damage the SpyCrushers Spy Camera Sunglasses and should be avoided. This will not reset the time or delete any files. Use this only if the SpyCrushers Spy Camera Sunglasses is not responding.

Cautions

- **Battery:** As the usage time grows, the battery life will shorten. Please recharge battery to its full capacity before using after long periods of inactive use.
- **File Security:** The SpyCrushers Spy Camera Sunglasses is not a dedicated storage device. SpyCrushers does not warrant the completeness and safety created files. Please back-up the important files onto your computer or other storage device.
- **Video Quality:** The SpyCrushers Spy Camera Sunglasses is not professional grade video recorder or camera. SpyCrushers makes no assurance that the video or photo quality will meet your particular standards.
- **Operating Temperature:** 0—40°C。
- **Operating Humidity:** 20%—80% , Please do not use this product at above normal humid environment. The SpyCrushers Spy Camera Sunglasses is not water resistant.
- **Filming:** In order to protect the optics within from the hard light please do not expose lens directly to sunlight or other strong or harsh lighting sources for long periods.
- **Cleaning:** Please only use lens paper or the included soft eye lens cloth to clean camera lens .
- **Durability:** The SpyCrushers Spy Camera Sunglasses is a precision electronic product. Please do not use around high magnetic fields or high electric fields.

Specifications

Subject	Relatively Parameter
Video Format	AVI
Video Encoding	M-JPEG
Video Resolution	1280*720 VGA
Video Frame Rate	25-30fps±1fps
Media Player Software	Most major operating system media players or mainstream media playing software.
Operating Systems	Windows me/2000/xp/2003/vista,7 Mac OS X, Linux
Photo Resolution	1600/1200
Charging Voltage	DC-5V
Interface-Type	Micro USB
Memory Interface	Micro SD Card Not Included (8gb max rec.)
Battery Type	High-Capacity Polymer Lithium Battery
Recording Time Per Full Charge	100 Minutes
Battery Charging Time	4-5 hours first charge - 2 hours thereafter

Warranty Information

SpyCrushers brand and all SpyCrushers products are owned and operated by Crushers, Inc. Crushers, Inc warrants this product against defects in workmanship and material for a period of one (1) year from its original purchase date. You must present your receipt as proof of date of purchase for warranty validation. Any unit which proves defective during the stated period will be repaired without charge for parts or labor or replaced at the sole discretion of Crushers, Inc.. The end user is responsible for all freight charges incurred to send the product to Crushers Inc's repair centers. The end user is responsible for all shipping costs incurred when shipping from and to any country other than the country of purchase. The warranty does not cover any incidental, accidental or consequential damages arising from the use of or the inability to use this product. Any costs associated with the fitting or removal of this product by a tradesman or other person or any other costs associated with its use are the responsibility of the end user. This warranty applies to the original purchaser of the product only and is

not transferable to any third party. Unauthorized end user or third party modifications to any component or evidence of misuse or abuse of the device will render all warranties void.
By law some countries do not allow limitations on certain exclusions in this warranty. Where applicable by local laws, regulations and legal rights will take precedence.

Crushers Inc.
info@crushersinc.net
© Crushers Corporation Communications 2013

FCC Verification
This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

ATTENTION: Learn how you can get other great Crushers, Inc. products like a SpyCrushers Spy Pen Camera for FREE by going to
www.vipgroup.crushersinc.net

Socialize with us!

www.facebook.com/Spycrushers
www.twitter.com/spycrushers
www.pinterest.com/spycrushers
www.youtube.com/user/SpyCrushers

Bonus Money Saving Coupon!

Save 15% on your next SpyCrushers purchase on Amazon.com

At checkout use coupon code

15OFFSPY

*Limit One Per Customer