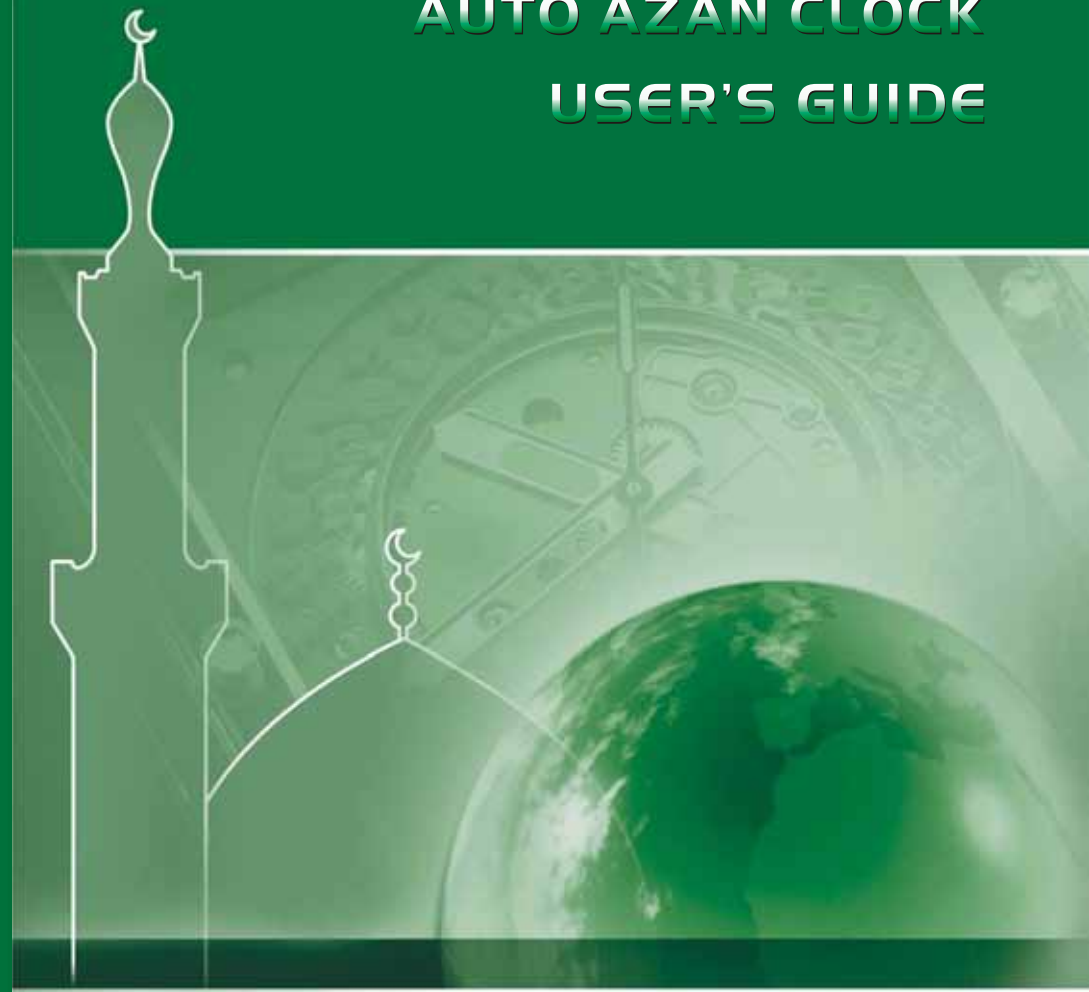# AUTO AZAN CLOCK
USER'S GUIDE

AL-PIGEONS

بِسْمِ ٱللَّهِ ٱلرَّحْمَنِ ٱلرَّحِيمِ

We thank the greatest Allah who said in his holy Quran ﴾وَأَقِمِ ٱلصَّلَوٰةَ لِذِكْرِيٓ﴿, that he guides us to exploit electronic science to serve his worshipers at the mosques.

Peace be upon his honorable messenger whose tranquility is made in the prayer where he said to his Muezzin (يَا بِلَالُ أَقِمِ الصَّلَاةَ، أَرِحْنَا بِهَا).

This product (Azan clock) have won an approval and a great acceptance of the prayers because of its effective and important role in organizing the prayers Iqama at mosques.

Azan clock has many features that provide services to the worshipers like displaying Hijri & Gregorian date in full form (year\month\day), names of Hijri months, days of the week, Celsius & Fahrenheit temperature degree, and audible & visible alerts at each prayer and Iqama time.

Azan clock is remote controlled via infrared remote control in addition to a local keypad to control and set all functions of Azan clock

From our commitment to develop our products continuously, and as response to our customers suggestions, we now offer this product in a new look and additional features to meet all our customers' requirements.

Thanks for purchasing our products, and as you trust us, we declare to provide all the technical support services needed.

Please read the manual completely before using this product and follow its instructions to guarantee that the product works properly, please keep this manual and don't throw it away because you may need it later, and because it has a verses from holy Quran.

1. Features:

- Azan Clock is a digital calendar and clock.
- Auto-calculating of Hijri date with a possibility to adjust it.
- Displaying the Hijri months names and the days of the week.
- Two different time modes, 12\24 hours (optional).
- Auto and manual switching of the daylight mode.
- Displaying the five prayer times and the sunrise time.
- Audible and visible alerts at each prayer and Iqama time.
- Iqama setting in two different modes (Relative & Fixed).
- Displaying of Iqama time (remaining time to Iqama) with possibility to set this time for each prayer individually.
- Displaying temperature (range between $0 \sim 40°$ C).
- Easy to control by a remote control and a local keypad.
- Power save mode (from Isha'a to Fajr).
- Enable \ Disable key tones.
- Connecting with PC via USB port to upload the prayer times for any country or city.
- Different sizes and designs, front panels with different languages and backgrounds, a new design is welcome at customer request.

For more details please contact our authorized agents or visit our web site: www.al-pigeons.com

2. The authorized prayer times

The prayer times and the sunrise time are stored in Azan Clock according to the authorized prayer times in each city, these are not related to any astronomic or mathematic calculations. They can be adjusted by making a time shift for each prayer time.

It is also possible to upload the prayer times file to Azan Clock by a PC and an application software included with the product (Optional).

The data file of the prayer times for any city is supplied by the manufacturer, the sales agent, and the authorized maintenance agent, or can be downloaded from our web site: www.al-pigeons.com

3. description:

5.1 The displays:

1. Date display. (Hijri\Gregorian).
2. Text Message Display. (T.M.D).
3. Time display (hours: minuets:
   seconds).
   Six displays for the five prayer
   times and The sunrise time.
4. According to five times and sunrise time six screen
5. Temperature display.
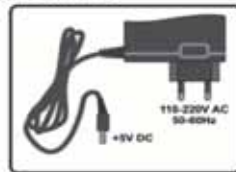6. Iqama display.

4. Power supply:

There are two different types of al-Muaqita power supply (AC adapter), the specifications of these adapters are shown in the figure below:
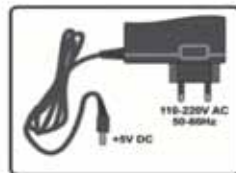
INPUT: 110–220Vac, 50–60Hz

OUTPUT: +5V DC, 2A DC

INPUT: 110–220Vac, 50–60Hz

OUTPUT: +5V DC,1.5A DC

The supply voltage of Azan clock is written on the back panel near to the DC power supply input, and the proper adapter is included with the product.
Azan clock has an internal battery cell, so it keeps the time and date correct in case of power cut off occurs and lasts for even a month.
Note: if the AC adapter damaged, please call the sales agent, or the authorized maintenance agent to get a new one with the same specifications.

5. The Iqama display:

This display operates only when it's a prayer time (Azan time), it displays the remaining time to Iqama in minutes, this time can be set as described in paragraph /13/.

The remaining time to Iqama starts decreasing minute by minute, at the last minute the display starts flashing and decreasing second by second to /00/, the display then continues flashing for one more minute, and turns off till the next prayer time.

6. Text message display (T.M.D):

In the normal operation mode, it displays the name of Hijri month while displaying the Hijri date on the date display, and displays the name of current day while displaying the Gregorian date on the date display.
It also starts displaying the flashing phrase [اغلق الجوال] [Switch off your mobile] two minutes before Iqama time, the phrase continues flashing till four minutes after Iqama. The display also displays explanatory words and phrases in the other operating modes which will be described later.

7. Control:

All the control functions of Azan Clock can be achieved by The remote control (an infrared transmitter) and by the Local keypad which is located at the back panel of Azan Clock
The table below shows the remote control keys and their functions:

Key	function	Key	function
Power switch.		Increase/up key.	
Lock/unlock remote control.		Decrease/down key.	
Date & time set.		Right key.	
Configuration mode.		Left key.	
Iqama mode.		Hijri/Gregorian date switch.	
Switch "–" mark ON/OFF.		12/24 time mode switch.	
Exit key.		Summer/winter time switch.	
Enter/OK key.		City choosing key.	

The table below shows the local keypad keys and their functions:

Key	function
P	Program/iqama/bell/date & time set
+	Increase key
OK	Enter key
—	Down key
EXIT	Exit key

1.press and hold "p"key for three seconds,the word"prog.01"is displayed on the date display and the word is display on the T.M.D,press "+"and "-",the number on the date display changes,press"ok" into the next program
2.then press"p"key again ,it will into iqama set
3.then press "p"key again , into bell set
4.then press "p"key again , into date &time set

8. Installation instructions:

- Keep Azan clock away from moisture, heat and direct sunlight.
- Clean it by a wet cotton cloth, wipe it gently and slowly to avoid electrostatic charges.
- Connect Azan clock to a separated outlet with a circuit breaker exclusively used for this purpose, do not connect it with a florescent light or an inductive load.
- Plug in the AC adapter to the main power outlet, then connect the output of the AC adapter to the DC power input at the rear panel of Al-Muaqita.
- It takes about five seconds to startup, In case nothing appears on the displays please try the following:
  1. Press ⏻ on the remote control.

9. Remote control lock:

If the symbol 🔒 is displayed on the text message display T.M.D upon pressing any key on the remote control, this means that the remote control is locked, so Azan clock is not going to respond to the remote control.

- Unlock: Press 🔒 continuously till 🔓 is displayed on T.M.D.
- Lock: Press 🔒 once to lock the remote control.

10. Date and time setting:

To set the date and time, please do the following:

1. Press and hold 🕐 for three seconds, the year digits start flashing on the date display.

2. Use ▲ & ▼ to set the year to the required figure, then press OK to save and move to the month setting.

3. The month digits start flashing, repeat step /2/ to set the month and day to the desired figures.

4. Azan clock automatically calculates the appropriate Hijri date and displays it whole flashing on the date display.

5. If the calculated Hijri date doesn't match the actual date authorized in the city, please use ▲ & ▼ to set it to the required figure, then press OK to save and move to the time setting.

6. The hour digits start flashing, set the hour to the desired figure in the same way, **please pay attention to set the hour in /24/ hours mode i.e. there is no need to set AM & PM (5PM = 17:00).**

7. Set the minutes in the same way as in step /2/, the seconds will be set to /00/ and Azan clock will go back to the normal operation mode.

Notes:

- The figure which is being set is always flashing.
- To save any flashing figure press OK, to exit without saving press ⏎.
- Press OK at minutes flashing figure to save changes and exit setting mode.

- In date & time setting mode, use ▶ & ◀ to move through all the figures in this mode, press ▲ & ▼ to set any figure and OK to save it, press ⏎ to exit the setting mode.
- It's recommended to set date & time accurately every three months, an incorrect date or time causes incorrect prayer times.

11. Iqama setting:

Azan clock includes two modes for setting the remaining time to Iqama:

- **Relative mode:**

In this mode Iqama time is related to prayer time, it's always a number of minutes after the prayer time, for example it is /10/ minutes after the prayer time.

Iqama time is a time offset (number of minutes) from the prayer time, so it changes from day to day according to the prayer time changing.

The maximum number of minutes can be set is /99/ minutes.

When it's time for a prayer, the Iqama display displays the number of minutes which has been set in Iqama setting mode (described later), this number of minutes decreases upon time until it is two minutes, the T.M.D displays the statement [أغلق الجوال] [Switch off your mobile] which stays flashing for six minutes.

When the remaining time to Iqama (number of minutes) reaches the last minute, it starts flashing and decreasing second by second till zero (**Iqama time**), the display continues flashing for one more minute, then it turns off till the next prayer time.

• fixed mode:

In this mode, Iqama time is fixed and doesn't relate to prayer time, for example AL-Duhr Iqama time is *13:30* in all days even the prayer time changes from day to day, so the Iqama time isn't a number of minutes but it's a time with hours and minutes. When it's time for a prayer, the Iqama display displays the difference in minutes between the prayer time and Iqama time, if this difference is more than */99/* minutes, the Iqama display stays off (it is two digits only, so it is not possible to display more than */99/*), as the time proceeding, the difference decreases.

When the difference is equal or less than */99/*, it is displayed on the Iqama display and starts decreasing exactly as in the relative mode.

To set the Iqama time, please follow the steps below:

1. Press and hold 🔒 for three seconds, the word **"PrAY I"** is displayed on the date display and the word [الفجر] [FAJR] is displayed on the T.M.D, the default Iqama times are displayed on the five prayer displays and sunrise display.

2. To set Iqama time for another prayer, press ▲ or ▼, the prayer number on the date display and the prayer name on the T.M.D changes, press OK on the desired prayer to set the Iqama time.

3. The date display displays an additional digit (*- I* or *-2*), and the T.M.D displays [نسبي] Relative or [ثابت] Fixed, please select the Iqama mode.

4. In [نسبي] Relative mode, the selected prayer display starts flashing, please set the number of minutes using ▲ & ▼ then press OK to save and move to the next prayer.

5. In [ثابت] Fixed mode, the hour digits of the time display start flashing, please set the hour then the minutes of Iqama time using ▲ & ▼ then press OK to save and move to the next prayer.

6. Repeat the set */4/* & */5/* to set Iqama time for the other prayers.

7. It is possible to set the Iqama of some prayers in [نسبي] Relative mode and the others in [ثابت] Fixed mode.

8. press exit 🔙 to go back to the normal operation mode.

prayer	Date display	T.M.D
Fajr	PrAY I - I	Relative
	PrAY I -2	Fixed
Shuruq	PrAY 2 - I	Relative
	PrAY 2 -2	Fixed
Dhuhr	PrAY 3 - I	Relative
	PrAY 3 -2	Fixed
Asr	PrAY 4 - I	Relative
	PrAY 4 -2	Fixed
Maghrib	PrAY 5 - I	Relative
	PrAY 5 -2	Fixed
Isha'a	PrAY 6 - I	Relative
	PrAY 6 -2	Fixed
Friday	PrAY 7 - I	Relative
	PrAY 7 -2	Fixed

Notes:

• The Iqama display doesn't operate at Dhuhr prayer on Friday unless there is a display specified for Friday Iqama time (optional).

• In "Relative" mode, the Iqama time ranges between */00/* and */99/*, it will be disabled when it is set to */00/*.

• In "Fixed" mode, the Iqama time ranges between the selected prayer time and the next prayer time, it will be disabled when it is set to the selected prayer time.

Iqama times displays

Prayer times displays

Friday iqama times displays
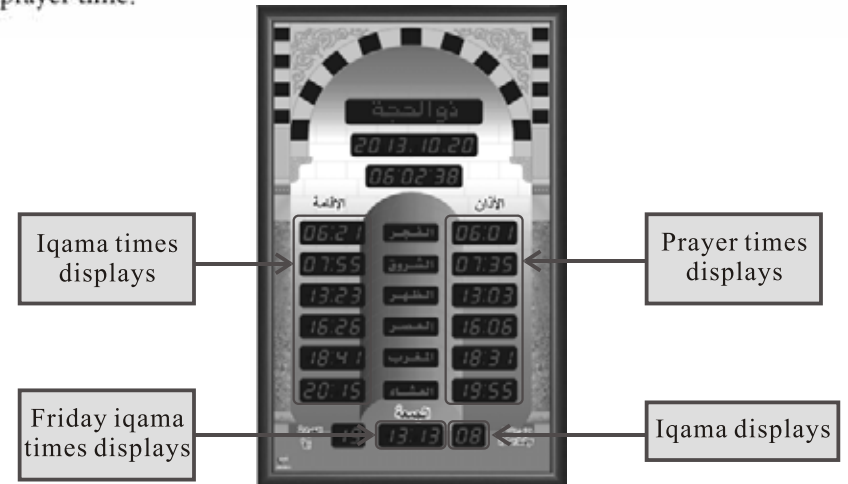
Iqama displays

There are several models of Azan clock , one of these models is standard clock with Iqama times displays which is shown above.

To set the Iqama times in this model, please follow the steps below:

1. Press and hold 🔘 for three seconds, the word **"PrAY 1"** is displayed on the date display and the word [الفجر] [FAJR] is displayed on the T.M.D, the default Iqama times are displayed on the Iqama times displays.

2. When you select **"PrAY 1 - 1"** [نسبي] [Relative] Iqama mode, the Iqama time display of [FAJR] starts flashing, please set the Iqama time of Fajr in relative mode.

3. Repeat the last step to set the other Iqama times, please note that the Iqama times displays display the Iqama time in hours and minutes, and the Iqama display displays the remaining time to Iqama when it's time for a prayer.

4. When you select **"PrAY 1 -2"** [ثابت] [Fixed] Iqama mode, the time display starts flashing, please set the Iqama time of Fajr in fixed mode.

5. Repeat the last step to set the other Iqama times.

6. You can select **"PrAY 7 - 1"** only if there is a specified display for Friday Iqama time.

12. Bell

There are all kinds of alarm timer is equipped with two ring tone optional alarm clock.

The first alarm clock (once) : the alarm clock to remind of time, the timer remind sound, and automatically cancelled after the alarm clock work, never return to remind function, it needs to be reset at a time.
The second alarm (daily) : the alarm clock to remind of time, the timer sounds remind every day, don't need to set the alarm clock every day, it with a single setup only.

Press "alarm" key will be the date shown on the screen text "bell. 01.01" (text will flicker of 01) to show a single alarm clock to remind.And it will accompany "once" words appear in the announcement on the screen. Date in the text to appear on the screen "bell. 01.02" （text to flicker 02） to indicate that a daily reminder alarm clock.And it will accompany "daily" words appear in the announcement on the screen.
 when selecting the 01 state, then press the "ok" button, will complete the transformation to the screen time, so as to adjust the alarm time.In use after adjust the alarm clock and the minute, will turn to the next set of small box to select the sound alarm.Code is flashing, can use the key selection with sound in the collection of favorite alarm code (29 different voice).

13. The alarm before iqama

To adjust the iqama before remind note please follow the steps below:
If before the iqama alert function is effective and the set, shows that words"pray. 02 .on" (the words on the Flashing).and its accompanying with the words "remid" (iqama before the alarm clock to remind) is shown In the announcement on the screen, press "ok", will be moved to the time window choose code alarm Prompt. Low in all prayer to screen negative signs on behalf of the last few minutes of scores, to indicate the alarm Clock to remind of time each prayer will be its mission statecraft minutes ahead of time, has also been Notified on the screen.
If choose "of", means that shut the alarm clock to remind
When choice "on", the code is flashing,here to use and complete the transformation code alarm prompt.
The iqama in the range of 0 to 99, and when set above freezing, during the prayer prior to the iqama, Remind function is invalid.

14. Configuration mode:

Azan clock can be configured in many different configurations, so it meets all users' requirements through a several "ProGs".
To go into configuration mode, please follow the steps below:

1. Press and hold 🔘 for three seconds, the date display displays "ProG..01" and the T.M.D displays [المدينة] [City] .

2. This is the first "ProG" in the configuration mode, to move to the other " ProGs" please use 🔼 & 🔽 and to go into the desired "ProG", press 🆗 .

3. The "ProG" figure is displayed flashing on Dhuhr display, to change this figure please use 🔼 & 🔽, to save and move to the next "ProG", please press 🆗 .This table shows the available "ProGs", their functions and figures:

ProGs	Name	Figure	T.M.D	Function	
ProG 01	City number	According to the table	City	See the table at the end of the this manual to find out your city number.	
ProG 02	Shift	-60 ~ +60	Shift	Time shift from the selected city.	
ProG 03	Clock mode	12	24↔12	Clock mode: 12 hours.	option
		24	24↔12	Clock mode: 24 hours.	
ProG 04	ISHA'A mode	01	ISHA'A	According to the selected city.	
		02	ISHA'A	/1.5/ hour after Maghrib time.	
		03	ISHA'A	/2/ hours after Maghrib in Ramadan only, /1.5/ hour in the other months.	

Prog 05	Date Mode	01	Gregorian	Gregorian date always.
		02	HIJRI	Hijri date always.
		03	H↔G	Hijri\Gregorian every 5 seconds.
Prog 06	Power Mode	00	Normal	Operating around the clock.
		01	Power Save	Switching off from one hour after Isha'a till one hour before Fajr.
		02	Power Save	Automatically shut down all display at night
Prog 07	AZAN	00	◁×	No sound.
		01	IQAMA	Iqama sound at Iqama Time.
		02	AZAN	Full azan at prayer time.
		03	◁))	Azan & Iqama.
Prog 08	Daylight	01	Winter	Always winter time.
		02	Summer	always summer time.
Prog 09 (Buzzer)	Prog 09 01 Keys Tone	on	Keys Tone	Disable remote control tones.
		oF	Keys Tone	Enable remote control tones.
	Prog 09 01 Tone/Hour	on	Tone/Hour	Disable remote control tones.
		oF	Tone/Hour	Enable remote control tones.
	Prog 09 01 Start Tone	on	Start Tone	Disable remote control tones.
		oF	Start Tone	Enable remote control tones.
Prog 10	Language	01	AR	Arabic prayer names on T.M.D.
		02	EN	English prayer names on T.M.D.
Prog 11	Temperature	01	C°	Temperature in Celsius.
		02	F°	Temperature in Fahrenheit.
Prog 12	Model	01	Home	Use the timer in the family
		02	Mosque	Use the timer in the mosque
Prog 12	Model	01	أغلق الجوال	Statement "أغلق الجوال" on T.M.D.
		02	Turnoff Mobile	Statement "**Turn off mobile**" on T.M.D.
		03	XIDH MOBELKA	Statement "XIDH MOBELKA" on T.M.D.
		04	أغلق الجوال / Turnoff Mobile / XIDH MOBELKA	Statement "أغلق الجوال" & "XIDH MOBELKA" "**Turn off mobile**" on T.M.D.

13

Prog..13	manual mode	on	Manual	Close the manual mode
		oF	Manual	Open the manual mode
Prog..14..01	Azan voice	01	AZAN	Full azan voice
		02	AZAN	Short azan voice
Prog..14	Azan voice	02	FIX	Fixed 1-35azan voice by usb
		03	Transform	Change1-35azan voice every day by usb
Prog..15	Coran	01	Listening	
		02	Khatmahs	
		03	Priority	
Prog..15..01	Listening program	01	Juz'	
		02	Hizb	
		03	Sura	
Prog..15..01 01	Listening Juz	01	Non-recurring	
		02	Continued	
		01	The voice	
		01	the reader	
Prog..15..01 02	Listening Hizb	01	Non-recurring	
		02	Continue	
		03	Recurring	
		01	The voice	
		01	The reader	
Prog..15..01 03	Listening Sura	01	Non-recurring	
		02	Continue	
		03	Recurring	
		01	The voice	
		01	The reader	
Prog..15..02	On khatmahs Quran program	on	khatmahs	
		oF	khatmahs	
	In khatmhs Quran program	01	Juz'	
		02	hizb	
		01	The Voice	
		01	The reader	
Prog..15..03	Priority program	on	Priority	
		oF	Priority	

14

14.1 The city number "Pro9 01 "and time shift "Pro9 02":

Azan clock has prayer times for several cities, these cities and their numbers are listed in the table at the end of this manual. when you select your city number in "Pro9..01", Azan clock displays the authorized prayer times for your city all around the year day by day. Azan clock also has the ability to shift up or down any prayer time, so you can have a new prayer times with a constant difference from the city selected in "Pro9..01".

When you go into "Pro9..01", the default city number is displayed on Dhuhr display and the first left digit starts flashing, you can set this digit of the city number using ● & ● then press ● to save and move to the next digit, repeat the last procedure to set this digit and the others.

The city number consists of four digits, when you set the last digit, Azan clock saves the city number and moves to "Pro9..02".

Please press ● to go into "Pro9..02", the default time shifts are displayed on the prayer displays and the time shift of Fajr prayer starts flashing, please set the required figure using ● & ● then press ● to save and move to the time shift of sunrise, you can set the time shift of all the other prayers in the same way.

To make the time shift negative, press "●, press it again to cancel the negative shift.

When you finish setting the time shift of Isha'a prayer, Azan clock saves changes and moves to "Pro9..03".

Note:

- It's possible to go into "Pro9..01" directly by pressing 🔘 for three seconds.
- When you set new city number in "Pro9..01", the time shifts in "Pro9..02" go back to the default figure (00), so you have to set them again.

14.2 clock mode" Pro9 03"(option):

This "Pro9" is active only when Asr, Maghrib and Isha'a displays have four digits.

Al-Muaqita can display the time in two modes: 12 hours or 24 hours.

	clock	12	24↔12	clock mode: 12 hour
Pro9 03	mode	24	24↔12	clock mode: 24 hour

In the configuration mode, please select "Pro9 03" then press ●, the figure of this "Pro9" is displayed on Dhuhr display, use ● & ● to switch between available options, then press ● to save and move to next "Pro9".
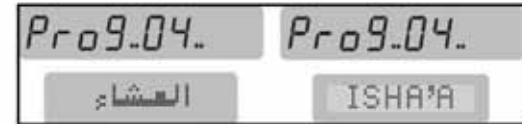
Note:

It's possible to go into "Pro9..03" directly by pressing 📟 for three seconds.

14.3 Isha'a prayer time "Pro9 04":

There are three options for this "Pro9":

01: Isha'a prayer time is according to the authorized prayer times.

02: Isha'a prayer time is one hour and half after Maghrib prayer time.

03: Isha'a prayer time is two hours after Maghrib prayer time in Ramadan month only, and one hour and half after Maghrib prayer time in the other months.

		01	ISHA'A	According to the selected city.
Pro9 04	Isha'a time	02	ISHA'A	/1.5/ hour after Maghrib time.
		03	ISHA'A	/2/ hours after Maghrib in Ramadan only, /1.5/ hour in the other months.

You can go into this "Pro9" and select the desired option in the same way as in "Pro9 03".

14.4 date mode "Prog 05":

there are three modes to display the date on the date display:

`Pro9.05.`   `Pro9.05.`

التاريخ   `Date Mode`

01: displaying Gregorian date constantly.

02: displaying Hijri date constantly.

03: switch between Hijri & Gregorian date every /5/ seconds.

| Prog 05	date mode	01	Gregorian	Always Gregorian.
		02	HIJRI	Always Hijri.
		03	H↔G	Hijri/Gregorian every /5/ seconds.

You can go into this "Pro9" and select the desired option in the same way as "Pro9 03".

Note:

It's possible to go into "Pro9..05" directly by pressing 🔅 for three seconds.

14.5 power save mode "Pro9 06":

In the normal operation mode, the power save mode is disabled and Azan clock operates around the clock.

`Pro9.06.`   `Pro9.06.`

الطاقة   `Power Mode`
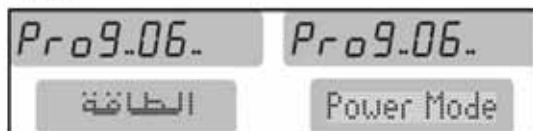
When the power save mode is enabled, Azan clock switches to power save mode (standby mode) one hour after Isha'a prayer time and goes back to the normal operation mode one hour before Fajr prayer time.

Pro9 06	power mode	00	Normal	Operating around the clock.
		01	Power Save	Switching off from one hour after Isha'a till one hour before Fajr.
		02	Power Save	Automatically shut down all display at night

You can go into this "Pro9" and select the desired option in the same way as in "Pro9 03".

Note: During the power save mode, press ⏻ to temporarily switch to the normal operation mode for / 10/ seconds only.

14.6 Azan mode "Pro9 07" (Option):

This "Pro9" has an effect on Azan clock only when it includes sound module (Option).

`Pro9.07.`   `Pro9.07.`

الأذان   `AZAN`

There are four options in this "Pro9":

00: No sound is launched (mute).

01: Only Iqama sound is launched at Iqama time.

02: Only Azan sound is launched at prayer time.

03: Azan & Iqama sounds are launched at prayer & Iqama time.

Pro9 07	Azan mode	00	🔇	No sound.
		01	IQAMA	Iqama sound at Iqama Time.
		02	AZAN	Full azan at prayer time.
		03	🔊	Azan & Iqama.

You can go into this "Pro9" and select the desired option in the same way as in "Pro9 03".

14.7 Daylight mode "Pro9 08":

this "Pro9" is to control the daylight time switching from winter to summer by adding /60/ minutes to the time, and from

`Pro9.08.`   `Pro9.08.`

التوقيت   `Daylight`
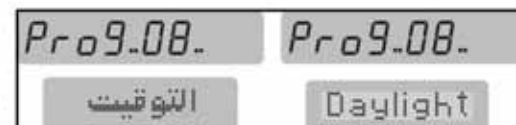
summer to winter by subtracting /60/ minutes from the time. There are three options in this "Pro9":

01: the daylight time is always winter.

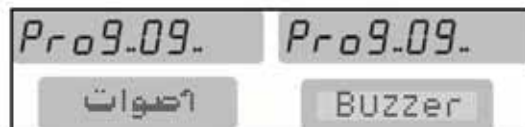02: the daylight time is always summer.

Pro9 08	Daylight mode	01	Winter	Always winter time.
		02	Summer	Always summer time.

Note:

It's possible to go into "Pro9..05" directly by pressing ☀ for three seconds.

14.8 Buzzer mode "Pro9 09":

This "Pro9" is to enable or disable the tones associated with the remote control signals.


Pro9 09 Buzzer	Pro9 09 01 Keys Tone	on	Keys Tone	Disable remote control tones.
		oF	Keys Tone	Enable remote control tones.
	Pro9 09 01 Tone/Hour	on	Tone/Hour	Disable remote control tones.
		oF	Tone/Hour	Enable remote control tones.
	Pro9 09 01 Start Tone	on	Start Tone	Disable remote control tones.
		oF	Start Tone	Enable remote control tones.

You can go into this "Pro9" and select the desired option in the same way as in "Pro9 03".

14.9 Language mode "Pro9 10" (Option):

This "Pro9" is active only when Al-Muaqita has T.M.Ds to display the five prayer names and sunrise name (option).
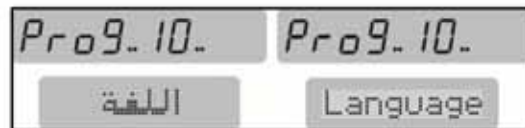
There are three options in this "Pro9":

01: Display the prayer names in Arabic language.

02: Display the prayer names in English language.

Pro9 10	Language	01	AR	Arabic language.
		02	EN	English language.

You can go into this "Pro9" and select the desired option in the same way as in "Pro9 03".

14.10 Temperature mode "Pro9 11" (Option):

This "Pro9" is available only when Al-Muaqita has /3/ digit temperature display, so it can display temperature in Fahrenheit.

There are two options in this "Pro9":

01: Display the temperature in Celsius.

02: Display the temperature in Fahrenheit.

Pro9 11	temperature	01	C°	Display temperature in Celsius.
		02	F°	Display temperature in Fahrenheit.

You can go into this "Pro9" and select the desired option in the same way as in "Pro9 03".

14.11 Model mode "Pro9 12":

This "Pro9" is to select the "Turn off mobile" statement which is displayed on T.M.D.

There are five options in this "Pro9" listed in the table below:

Pro9 12	Model	01	أغلق الجوال	Statement "أغلق الجوال" on T.M.D.
		02	Turnoff Mobile	Statement "**Turn off mobile**" on T.M.D.
		03	XIDH MOBELKA	Statement "XIDH MOBELKA" on T.M.D.
		04	أغلق النقال Turnoff Mobile	Statement "أغلق الجوال" & "XIDH MOBELKA" "**Turn off mobile**" on T.M.D.
		05	XIDH MOBELKA	