思锐
影像随心　思锐随行

广东思锐光学股份有限公司

物料名称：AM-254　AM-284三脚架说明书
物料编号：PT416
材质：100g双胶/CMYK四色印刷
展开尺寸：504x210mm
成型尺寸：72x105mm

说明书正面

SIRUI, Capturing your Imagination!

Instructions

AM-254 / AM-284 Tripod

GUANGDONG SIRUI OPTICAL CO.,LTD.
Add: The Third Industrial District, Wuguishan Town, Zhongshan City, Guangdong, China (Zip Code: 528458)
Tel: 86-760-88897373 Fax: 86-760-88207062
E-mail: info@sirui-photo.com Website: www.sirui.com

AM-254 / AM-284 Tripod Data Chart

	Sections	Max Tube mm/inches	Min Tube mm/inches	Min Height mm/inches	Max Height mm/inches	Retracted Height mm/inches	Weight kg/lbs	Max Loading kg/lbs
AM-254	4	25.8/1.02	15/0.6	78/3.1	1200/47.2	440/17.3	1.02/2.25	12/26.5
AM-284	4	29.4/1.16	18.6/0.7	80/3.1	1200/47.2	445/17.5	1.22/2.69	15/33.1

1. Know the product

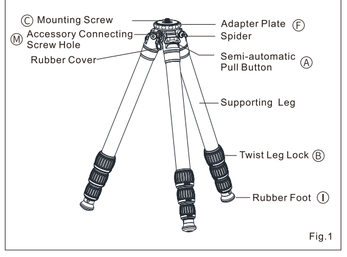

Fig.1

2. Leg Angle Adjustment

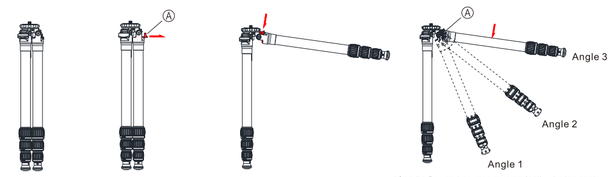

Folded down

Hold the tripod, and pull the Button A along the direction of arrow as shown in figure to adjust the leg angle to the desired position.

Pull up the leg until the Button A returns automatically

Fig.2

After the Button A returns automatically, the leg angle can be adjusted as needed. The legs can be adjusted to three angles (Or Lift up the legs to your desired angle. Press the top of the Button A and the Button A will come to the corresponding position to fix the leg angle as desired.)

3.Leg Extension and Retraction

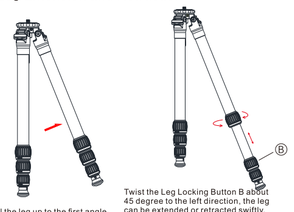

Pull the leg up to the first angle.

Twist the Leg Locking Button B about 45 degree to the left direction, the leg can be extended or retracted swiftly. Adjust the leg to the desired height, and tighten the Leg Locking Button B to the opposite direction to lock in position.

Fig.3

4.Replace the Rubber Feet with the Stainless Steel Spikes

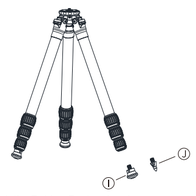

Detach the Rubber Feet and replace them with the Stainless Steel Spikes

Fig.4

5.Installation and Disassembly of Hook

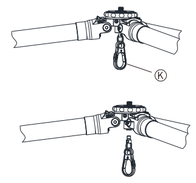

The Hook K has been installed into tripod as a set before packing. And if necessary, it can be disassembled by manual turning until the hook K is completely separated from the spider.

Fig.5

6.Switch Mounting Screw from 3/8" to 1/4"

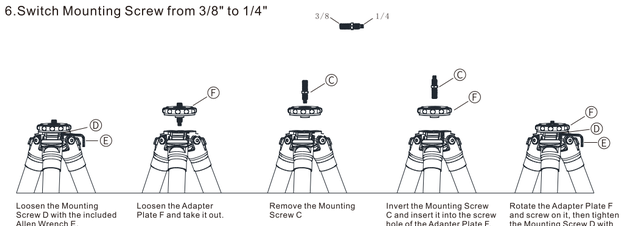

Loosen the Mounting Screw D with the included Allen Wrench E.

Loosen the Adapter Plate F and take it out.

Remove the Mounting Screw C

Invert the Mounting Screw C and insert it into the screw hole of the Adapter Plate F.

Rotate the Adapter Plate F and screw on it, then tighten the Mounting Screw D with the included Allen Wrench E.

Fig.6

7.Tightness Adjustment of Legs



Slightly adjust the Screw G to get your desired stability and tightness with the Allen Wrench H if the supporting legs or the spider is too tight or loose.

Fig.7

8.Screw Hole for Accessories Connection



Attach photography accessories that fit with 1/4" Screw Hole

Fig.8

1.Know the Product (fig.1)
2.The legs can be adjusted to three angles : about 22°,55°, 85°;
Pull the Leg Semi-automatic Button and lift the leg up to about 70°,the button will return to the original place automatically to fix the leg angle.The tripod legs can be folded down vertically as fig.2.
3.Leg Extension and Retraction:Rotate the Twist Leg Locks 1/2 turn at the same time or separately,extend the legs to the length as needed,tighten the Twist Leg Locks from big to small as the direction shown on the figure.Retract the Legs by loosening the Twist Leg Locks from small to big.(fig.3)
4.Replace the Rubber Feet with the Stainless Steel Spikes (fig.4)
5.Installation and Disassembly of Hook (fig.5)
6.Switch Mounting Screw from 3/8" to 1/4" (fig.6)
7.Tightness Adjustment of Legs (fig.7)
8.Screw Hole for Accessories Connection (fig.8)

CAUTION

Please remove the camera from the tripod when changing the position of the tripod. Do not place the tripod, with camera attached, over your shoulder or carry the tripod horizontally by the legs. Strong shaking may cause damage of the screw in the mounting plate and/or the camera. Please extend the legs from the biggest tube to smallest tube; close the legs from the smallest tube to biggest tube, to avoid leg joint bushing damage.

Specifications are subject to change without notice.

Attention:

- Do not exceed the recommended load limit of the head and/or tripod. (Please refer to product specifications.)
- Please make sure that the locks are securely tightened when in use.
- This product should not be used in environments that exceed the following conditions (-40 ~ +100°C/-40 ~ +212°F). And, when used in damp, dirty or dusty environments, please clean and dry thoroughly after use, to assure proper functioning in the future. It is not recommended to expose this product to saltwater. If exposed, please clean with mild soap and warm water and towel dry.
- Please keep from high temperatures and direct exposure to bright sunlight for extended periods of time.
- Please do not leave the equipment alone in a public place, which can be an inconvenience or hazard to others.
- To protect your camera gear, please remove it from the tripod/ball head when transporting from place to place.
- Please use a soft towel with warm water and mild soap to clean the locking system and gliding parts when necessary. Towel dry before storing the tripod.
- Under most situations, there is no need to lubricate any parts of this product. The addition of most lubricants will gum up the mechanisms and reduce their normal gliding characteristics. Please call or email us if you have any questions or special needs.
- Please keep this product away from all electrical power sources.

WARRANTY CARD/INFORMATION

Dear SIRUI Customer,
Thank you for your purchase of SIRUI Professional Products!
SIRUI warrants that your purchase is free from defects in materials and workmanship under normal use during the Limited Warranty Period. The Warranty begins on the original date of purchase on your sales receipt and is not transferrable. If service is required, a copy of the sales receipt must be included with an explanation of the problem.

Product	Warranty Length
Tripods / Monopods / Accessories	6 years
Humidity Control Cabinet (Cabinet)	
Humidity Control Cabinet (Electronics)	3 years

Model: _____ Date: _____

Store: _____ Serial Number: _____

Warranty coverage can differ from region to region.
Please see the contact information below for product registration, information and service for the region the product was purchased in.

SIRUI 6 (six) Year Limited Warranty (3 Year Warranty for Electronic Parts). This warranty shall be limited to repair, adjustment and/or replacement at SIRUI or its authorized distributors option, of defective parts, free of charge (except the cost of transportation to the distributor/service center). Responsibility is limited to the actual cost of the item. Call or Email with questions and service before sending any product to the center in your region. Below is a listing of contact information for Product Registration, Service Inquiries and Questions. SIRUI will not be responsible for expenses or inconveniences, or consequential damages to equipment, or by breach of any expressed or implied warranties.

Limitations:
Warranty is not transferable.
This warranty covers all defects encountered in normal use of the equipment and does not apply in the following cases:
1. If the equipment has been serviced by other than an authorized SIRUI Service Center.
2. Damage to the equipment is due to modification (including but not limited to, the removal of ballhead clamps), overloading, mishandling, abuse, accident, sand*, corrosives, water damage* or not following operating instructions.
3. No valid proof of purchase is provided.
4. Damage caused by acts of nature (including, but not limited to fires, floods or earthquakes).

Warranty coverage can differ from region to region. Please see contact information below for product registration,information and service for the region the product was purchased in.

Warranty Address and Contact Information:
(Please contact the seller or the local distributor where the product was purchased for warranty issues or questions and before any product is sent.)

1.Guangdong SIRUI Optical Co., Ltd.
The Third Industrial District, WuguishanTown, ZhongshanCity, Guangdong, China
Tel:0086-760-88897373 Fax:0086-760-88207062
Http://www.sirui.com E-mail: info@sirui-photo.com
Service Hotline: 0086-400 830 2299
Complaint Hotline: +86-181 6563 9388
(Monday to Friday: 8:15am~12:15pm, 14:00pm~18:00pm)

2.SIRUI USA, LLC
Add: 29 Commerce Court Verona, NJ 07044
www.sirui.com
Service: Toll Free 866-373-0829 E-mail: info@sirui.com
FOR PRODUCTS PURCHASED IN THE USA PLEASE SEE:
For full details on USA Warranty Terms and Limitations:
https://www.siruiusa.com/warranty.html
To register products: https://www.siruiusa.com/product-registration.html

3. European Service Center
Add: SIRUI Optical GmbH • Ernst-Augustin-Str.1a • 12489 Berlin • Germany
Phone:+49 30 991 94 94 00 • Email: Info@siruioptical.eu

说明书背面

SIRUI
影像随心 思锐随行

使用说明

AM-254 AM-284三脚架

广东思锐光学股份有限公司
地址：广东省中山市五桂山第三工业区　　邮编：528458
电话：0760-88897373　传真：0760-88207062　服务热线：400 830 2299
邮箱：info@sirui-photo.com　　网址：www.sirui.com
投诉电话：18165639388
(仅限工作日8:15~12:15,14:00~18:00)

AM-254 AM-284三脚架参数

	节数	最大管径 mm	最小管径 mm	最小高度 mm	最大高度 mm	收缩高度 mm	自身重量 kg	最大负重 kg
AM-254	4	25.8	15	78	1200	440	1.02	12
AM-284	4	29.4	18.6	80	1200	445	1.22	15

1、认识产品

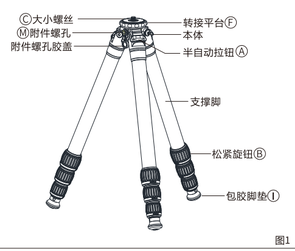

图1

2、三脚架展开及角度调节

收纳状态

手拿起脚架，如图所示将拉钮Ⓐ朝图中箭头所指方向拉动至完全定位后即可

手掰脚架管至拉钮Ⓐ自动复位

拉钮Ⓐ自动复位后，即可以调节所需的角度，脚架分三级角度调节区域(或者直接把脚管往上扳动到所需的使用级角度后，向三脚架的方向按一下拉钮Ⓐ的上部，Ⓐ便弹入所需的角度卡位锁定。)

图2

3、三脚架脚管伸缩

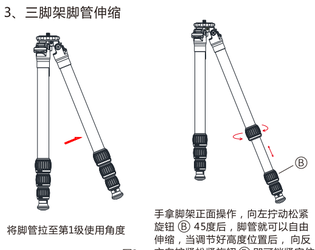

将脚管拉至第1级使用角度

手拿脚架正面操作，向左拧动松紧旋钮Ⓑ45度后，脚管就可以自由伸缩，当调节好高度位置后，向反方向拧紧松紧旋钮Ⓑ即可锁紧定位

图3

4、金属脚钉与包胶脚垫互换

当需要用到金属脚钉Ⓙ时，先将脚架上的包胶脚垫Ⓘ拆下后再安装金属脚钉Ⓙ

图4

5、挂钩安装和拆除使用

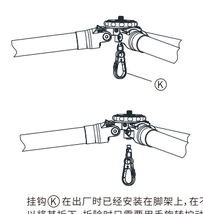

挂钩Ⓚ在出厂时已经安装在脚架上，在不需要时可以将其拆下，拆除时只需要用手旋转拧动挂钩Ⓚ，在挂钩与本体完全分开后即可以

图5

6、相机平台大小螺丝3/8转1/4

用配套六角扳手Ⓔ将固定螺丝Ⓓ松开

拧松转接平台Ⓕ并旋转取出

取出大小螺丝Ⓒ

将大小螺丝Ⓒ掉头并装入转接平台Ⓕ六角孔内

旋转并拧紧转接平台Ⓕ通过六角扳手Ⓔ拧紧固定螺丝Ⓓ

图6

7、脚管松紧微调

当发现支撑脚与本体有过紧或者过松的状态时，可以通过配套的六角扳手Ⓗ将螺丝Ⓖ进行微调至您所需要的稳定度和力度

图7

8、附件螺孔

附件安装螺孔Ⓜ可以安装与1/4牙配套的相关附件

图8

1、认识产品（如图1所示）
2、三脚架可调三种角度，分别约为22°、55°、85°；将拉钮拉到自动定位后，把脚管抬到约70°，按钮可自动回位锁定角度；脚架可竖直收合（如图2所示）
3、三脚架脚管伸缩：按图示的方向同时或分别将锁紧旋钮转动约1/2圈，然后将脚管拉出您所需要的长度，再按图示方向，分别从大到小的顺序拧紧各个锁紧旋钮；收缩时松开锁紧旋钮应按从小到大的顺序操作（如图3所示）
4、金属脚钉与包胶脚垫互换（如图4所示）
5、挂钩安装和拆除使用（如图5所示）
6、转接平台大小螺丝3/8转1/4（如图6所示）
7、脚管松紧微调（如图7所示）
8、附件螺孔（如图8所示）

※思锐公司保留产品升级和由于产品升级而变更各种参数的权利，请以实物为准，恕不另行通知。
印刷品上如有印刷错误或词语方面的错漏而造成不便，敬请包涵。

温馨提醒

1. 在使用脚架拍摄且需要移动位置时，请将相机从三脚架上取下，切勿将相机装在脚架上一起移动，粗暴的晃动（特别是安装了长焦镜头的相机）可能会使转接螺丝断裂，进而损坏相机。
2. 伸展脚管时，请从最大管径的脚管到最小管径的脚管的顺序伸展；收纳脚管时，请从最小管径的脚管到最大管径的脚管的顺序收纳。

保修卡

尊敬的顾客：
感谢您购买思锐的产品!在正常使用过程中,如果因器材本身的材料及工艺出现质量问题,思锐将会提供免费的保修服务。在需要保修服务时,请提供本保修卡和购买凭证(收据或发票,须有商家盖章),思锐公司售后服务热线:400 830 2299

产品名称	保修期限
脚架	6年
云台	
防潮柜本体	
电子部分	3年

产品型号：_____ 购买日期：_____
商店名称：_____ 商店电话：_____
商店地址：_____
商店盖章：_____

顾客须知：
1. 思锐产品,享受6年免费保修(电子部分为3年),保修时间从购买之日算起;
2. 所保修产品,必须是思锐正式授权的经销商或电子商务处购买;
3. 需邮寄回思锐工厂维修的,请先拨打思锐服务电话,待确认故障后,思锐公司承担来回运费。一般性故障可在7个工作日内完成维修并寄回;
4. 防潮柜的保修:请先确定发生问题的部件,把该部件卸下单独邮寄回思锐工厂维修即可。具体可参照使用说明书或致电服务热线。
5. 以下情况不在保修范围:
① 超过保修期限的;
② 在非思锐正式授权经销商处购买的;
③ 在未被思锐授权的代理商或维修中心维修过的;
④ 由于不正当操作、意外时间、自然灾害导致的故障或损伤。

※ 本保修卡只限在中国大陆使用

维修登记表

用户姓名	
用户电话	
用户地址	
邮编	
故障维修描述	
维修人员签名	
维修时间	

注意事项：

- 不要超过最大的制定负重(请参考个别产品说明);
- 当使用产品时,时常紧锁其安全装置;
- 切勿在温度低于零下40摄氏度及高于100摄氏度使用,当在潮湿、沙地、布满尘埃的环境下使用后,谨记将产品弄干及清洁,不建议在海水中使用;
- 切勿将产品长时间放在太阳下暴晒及避免高温环境,例如长时间放在车厢内或玻璃后;
- 在公众地方使用时,如在没有人照料下,切勿留下设备而引致其他公众不便;
- 建议在运输过程中,将设备(例如相机)从脚架上移除;
- 使用温和清洁剂及柔软毛巾清洁,将尘埃及沙粒从所有锁制及活动部件清除;
- 除非有需要,此设备无需定期添加润滑油,如确实需要时,请使用标准润滑油或油蜡;
- 为自身安全着想,切勿将产品接触任何电源。

说明书折叠方法:

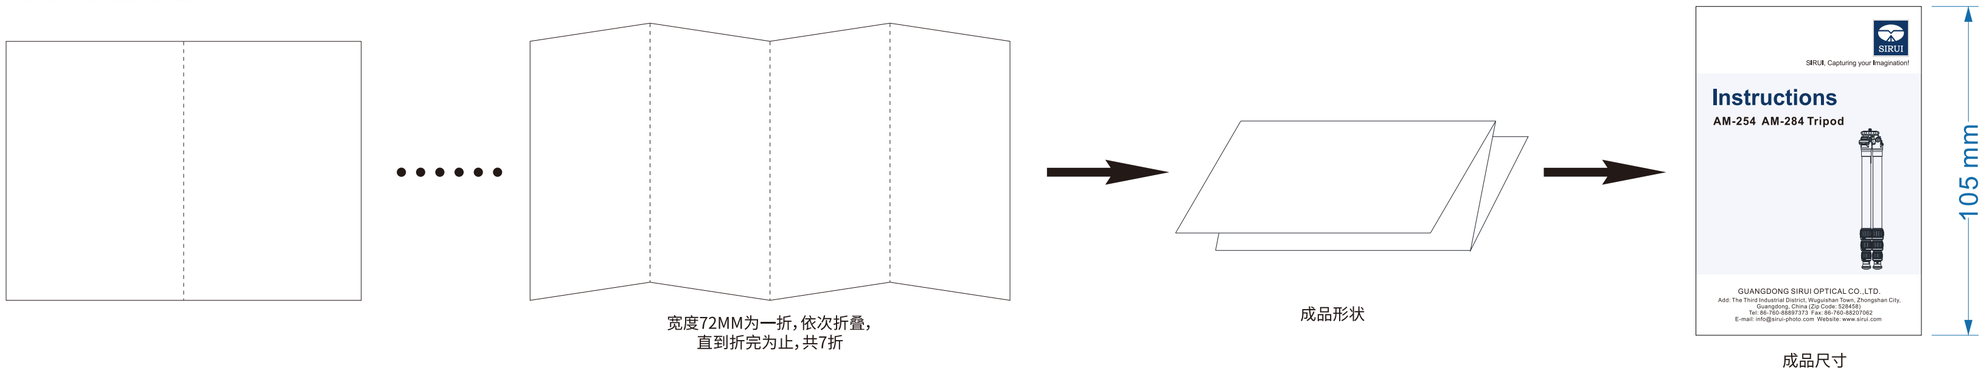

宽度72MM为一折,依次折叠,
直到折完为止,共7折

成品形状

成品尺寸

包装工程师：彭少章　　翻译：　　审核：　　批准：