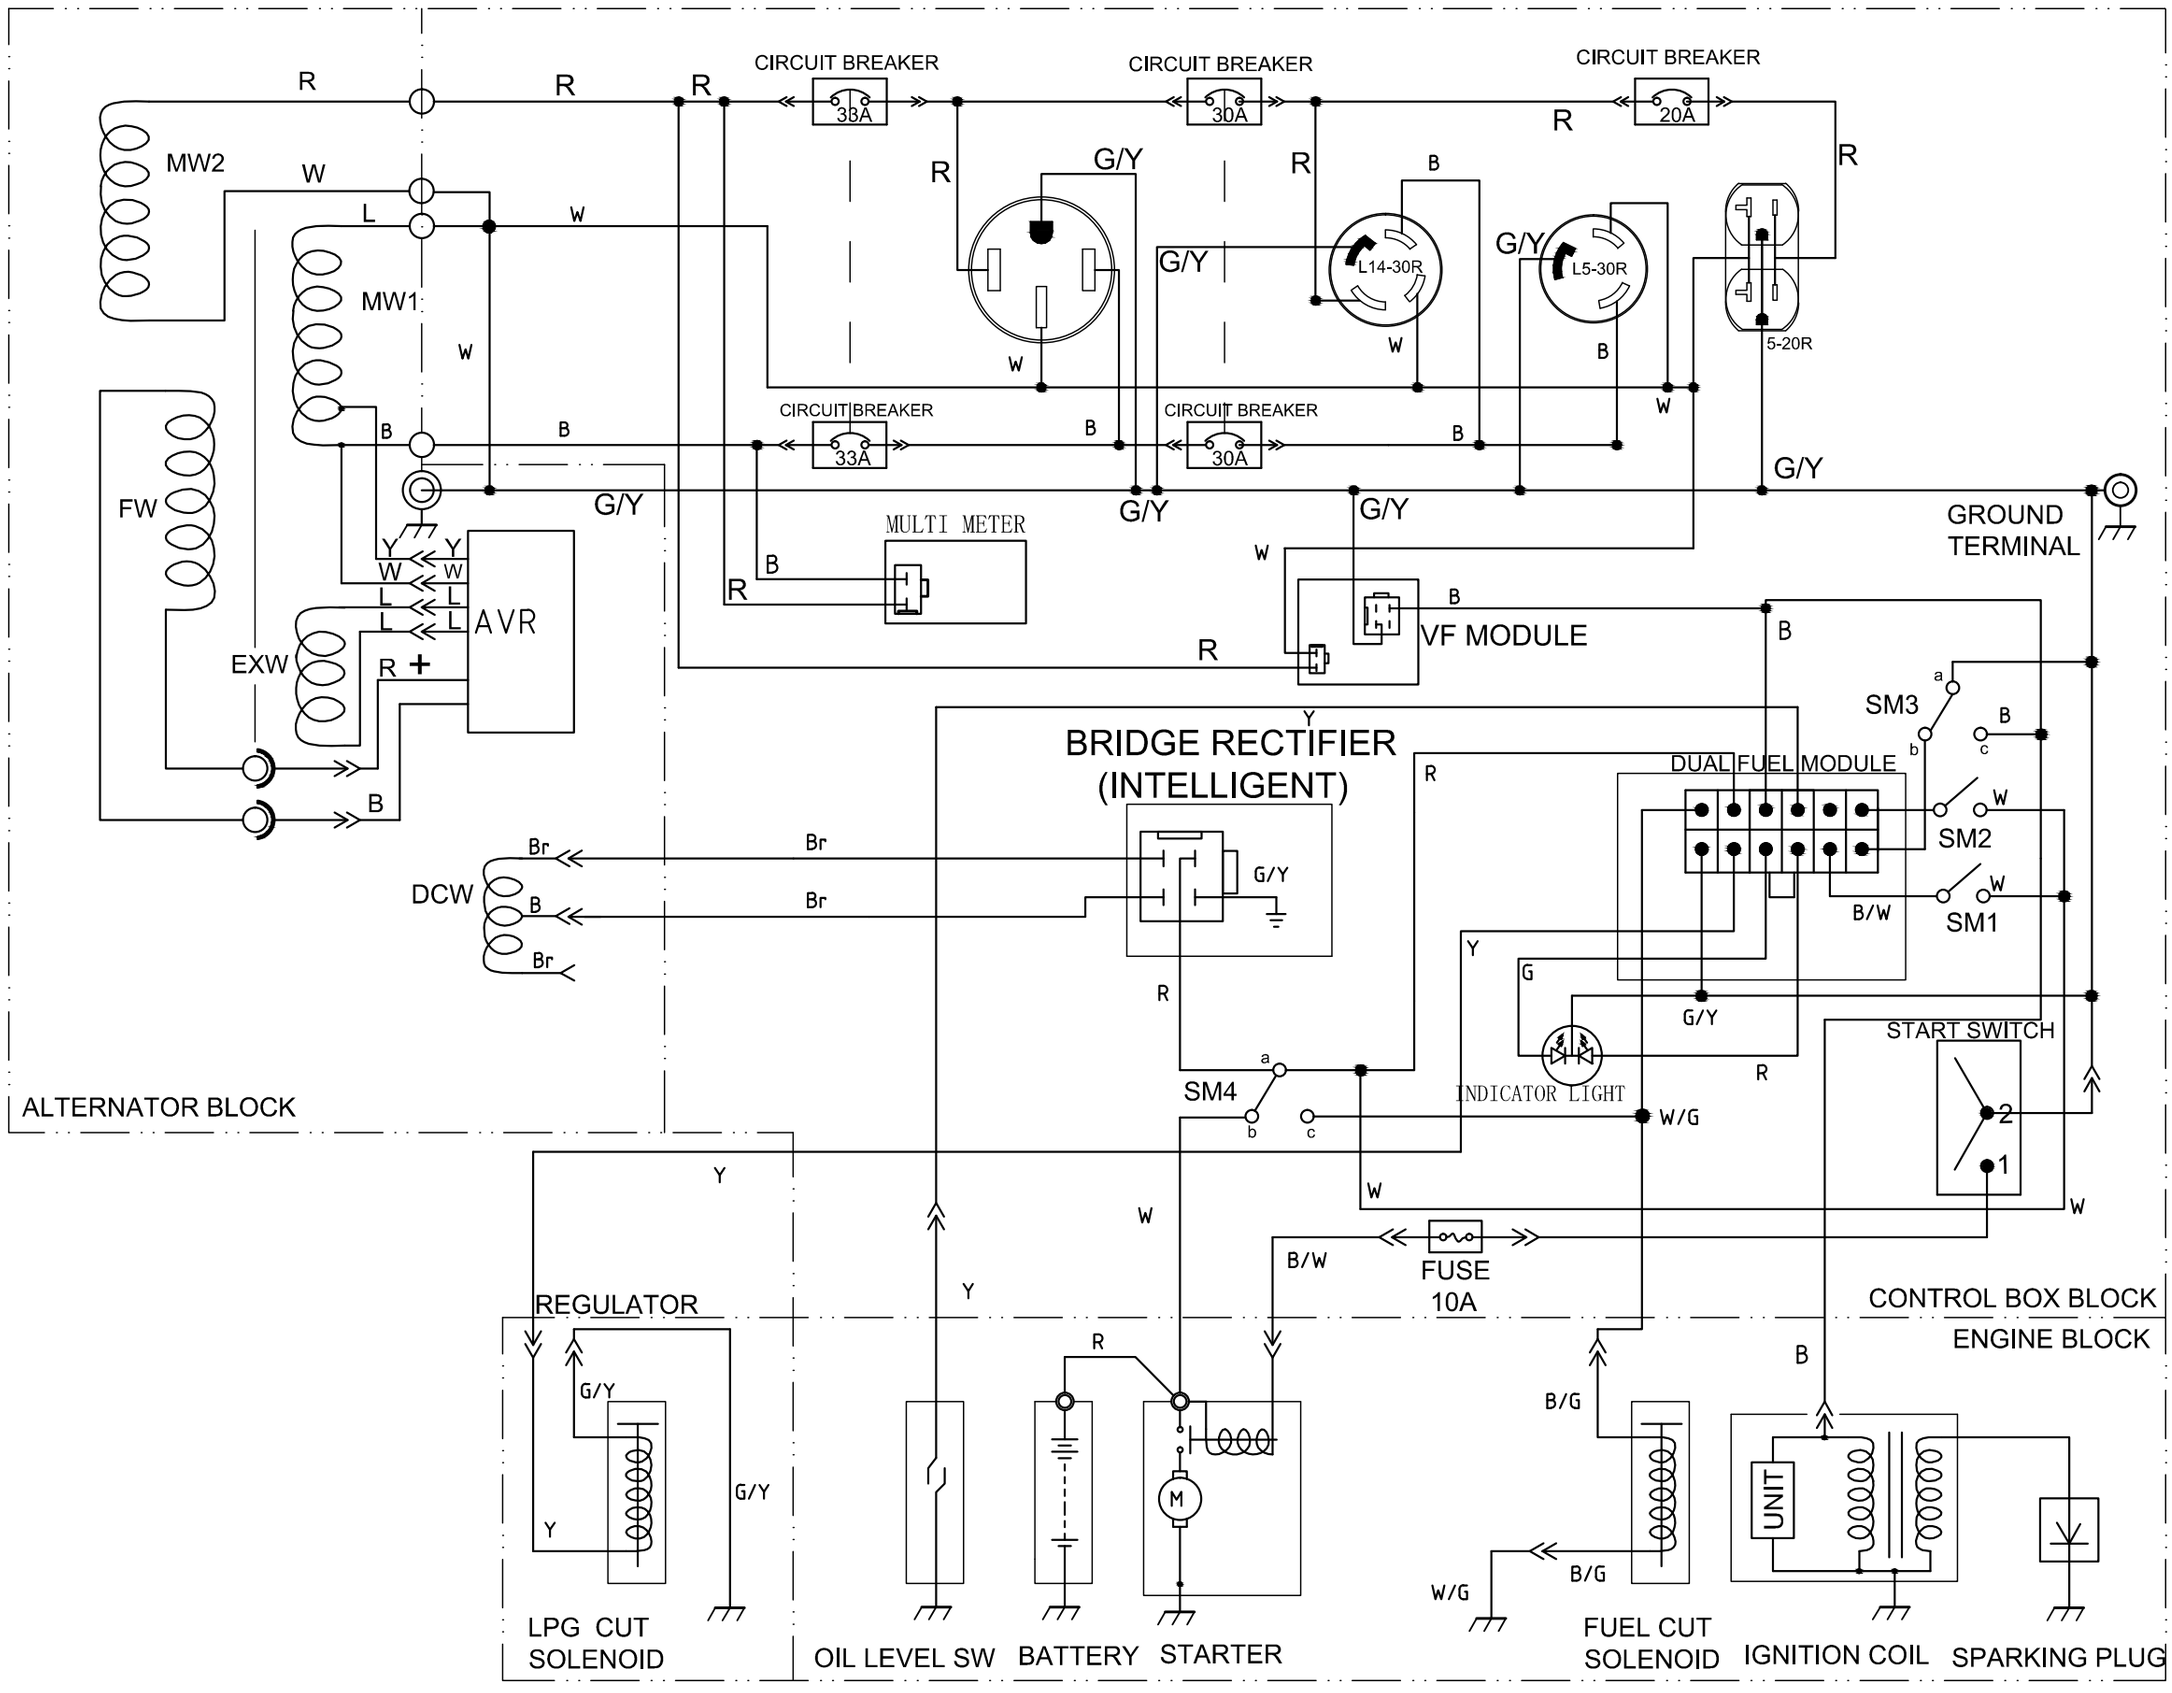
CIRCUIT BREAKER
33A
30A
20A
MW2
MW1
FW
EXW
DCW
AVR
L14-30R
L5-30R
5-20R
MULTI METER
VF MODULE
GROUND TERMINAL
BRIDGE RECTIFIER (INTELLIGENT)
DUAL FUEL MODULE
SM1
SM2
SM3
SM4
START SWITCH
INDICATOR LIGHT
FUSE 10A
ALTERNATOR BLOCK
REGULATOR
CONTROL BOX BLOCK
ENGINE BLOCK
LPG CUT SOLENOID
OIL LEVEL SW
BATTERY
STARTER
FUEL CUT SOLENOID
IGNITION COIL
UNIT
SPARKING PLUG