CONSEW MODEL 101

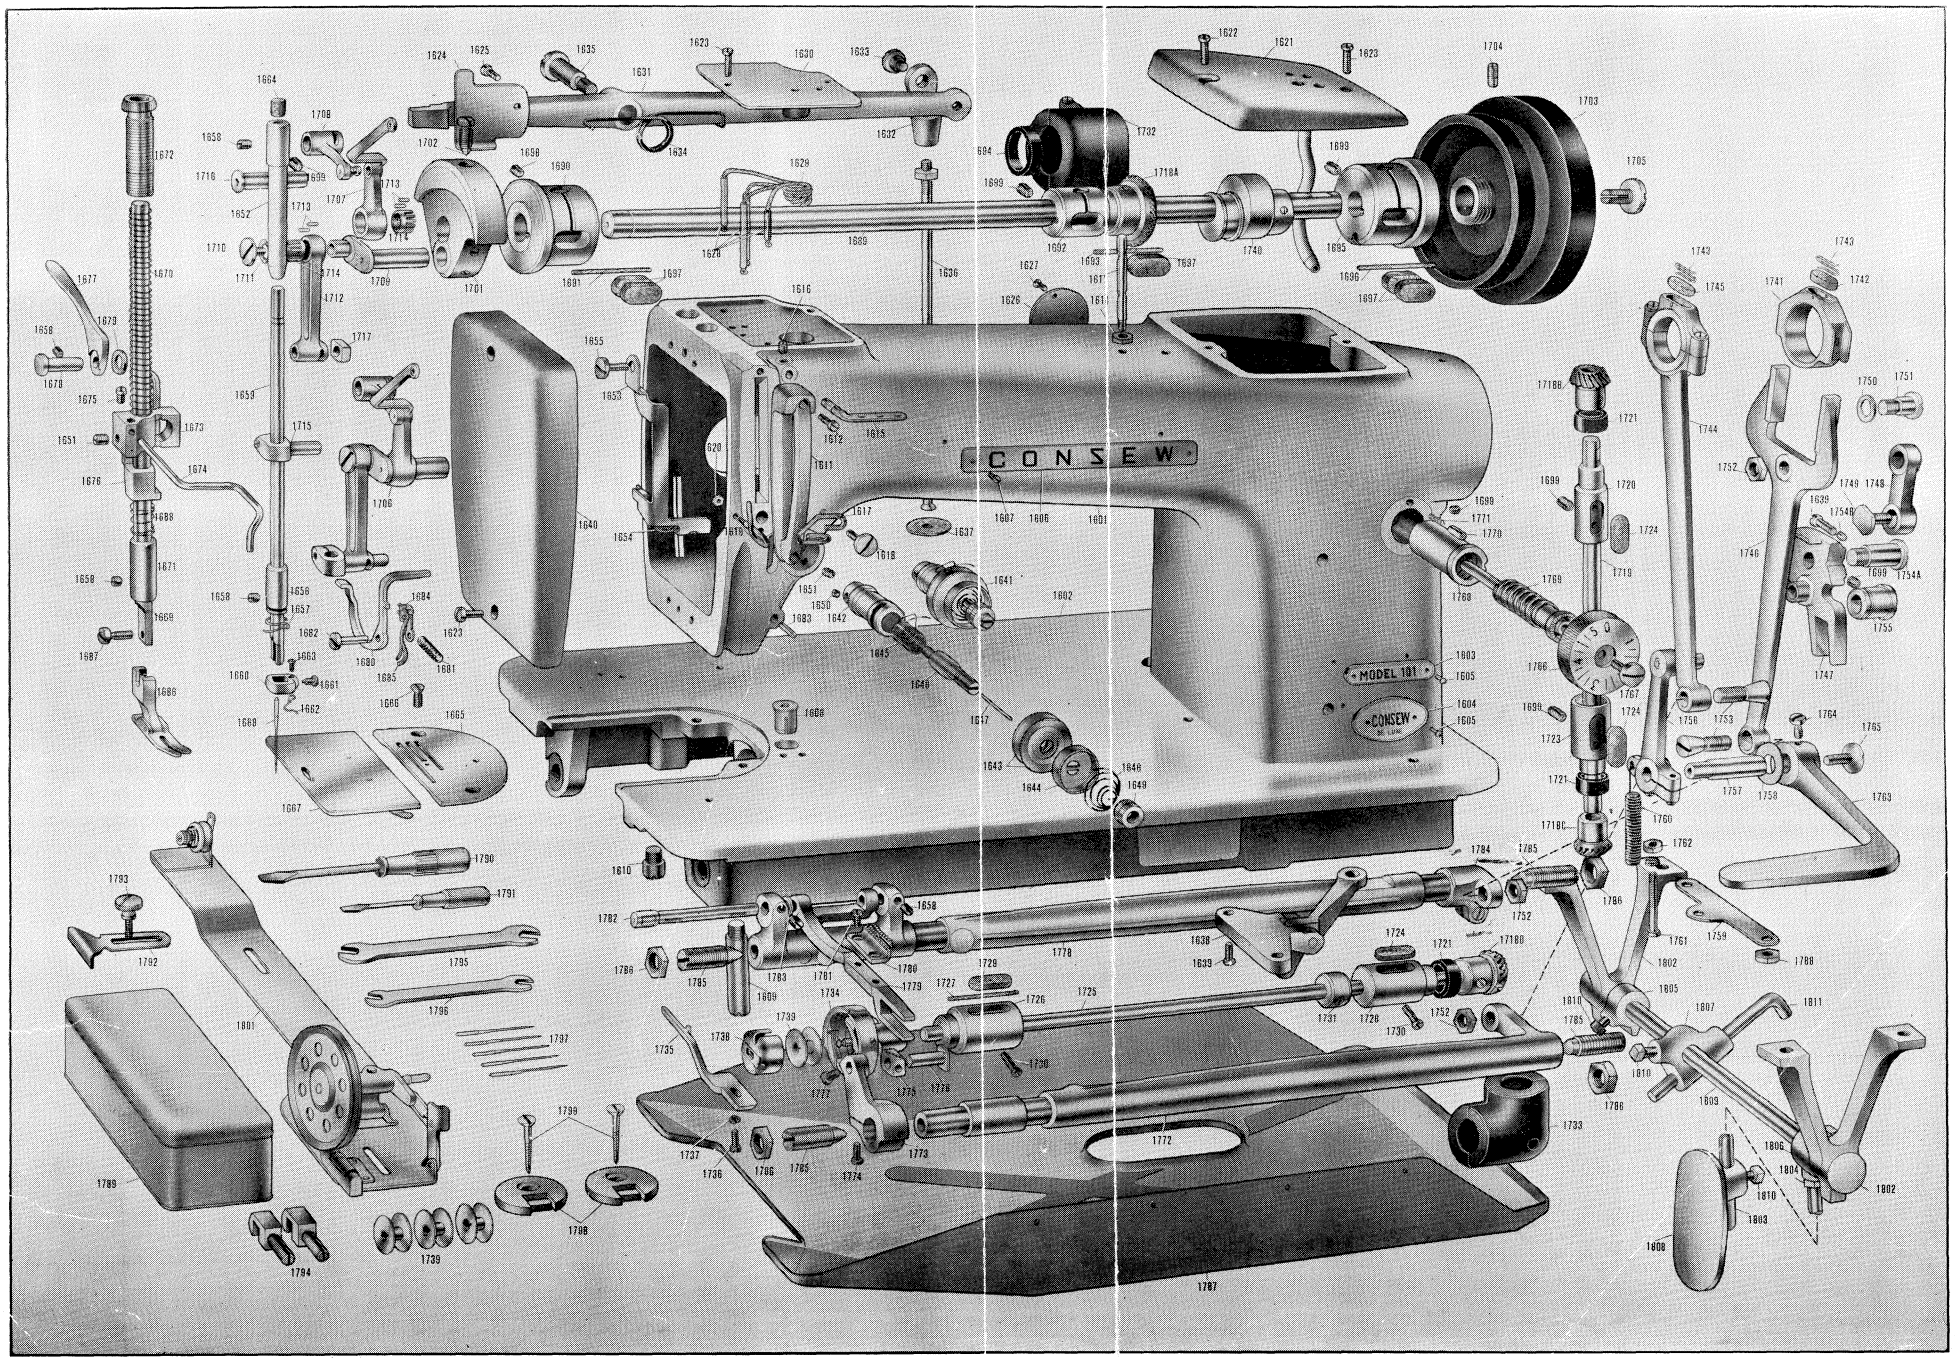

From 101 - To 105

CONSEW MODEL 101

PART NO.	PART NAME
1601	ARM ONLY
1602	BED ONLY
1603	MODEL NUMBER PLATE
1604	MEDALLION
1605	RIVET FOR 1603, 1604
1606	NAME PLATE
1607	SCREW FOR 1606
1608	OIL CUP
1609	BED LEG, FRONT
1610	BED LEG, REAR
1611	GUARD FOR TAKE UP LEVER
1612	SCREW FOR 1611
1613	SPOOL PIN
1614	NUT FOR 1613
1615	THREAD GUIDE WITH THREE HOLES
1616	SCREW FOR 1615
1617	THREAD GUIDE (RIGHT)
1618	SCREW FOR 1617
1619	THREAD GUIDE (LEFT)
1620	NUT FOR 1619
1621	ARM COVER PLATE (RIGHT)
1622	SCREW FOR 1621 (LEFT)
1623	SCREW FOR 1621 (RIGHT)
1624	BACK COVER PLATE (LEFT)
1625	SCREW FOR 1624
1626	BACK COVER PLATE (RIGHT)
1627	SCREW FOR 1626
1628	GUIDE TUBE FOR 1629
1629	OIL WICK
1630	COVER PLATE FOR OIL WELL
1631	KNEE LIFTER LEVER
1632	KNEE LIFTER LINK
1633	LINK SCREW FOR 1632
1634	RETURN SPRING FOR 1631
1635	HINGE SCREW FOR 1631
1636	KNEE LIFTER PULL ROD
1637	FELT WASHER FOR 1636
1638	KNEE LIFTER BELL CRANK LEVER & BRACKET
1639	SCREW FOR 1638, 1754
1640	FACE PLATE
1641	TENSION COMPLETE
1642	TENSION BARREL
1643	TENSION DISC
1644	TENSION RELEASE WASHER
1645	CHECK SPRING
1646	TENSION SPRING
1647	TENSION RELEASE PIN
1648	TENSION STUD
1649	TENSION ADJUSTING NUT
1650	SCREW FOR 1648
1651	SCREW FOR 1641
1652	NEEDLE BAR UPPER BUSHING
1653	HOLDER FOR 1654
1654	OIL WICK FOR NEEDLE BAR
1655	SCREW FOR 1653
1656	NEEDLE BAR LOWER BUSHING
1657	THREAD GUIDE FOR 1656
1658	SCREW FOR 1652, 1656
1659	NEEDLE BAR ONLY
1660	NEEDLE CLAMP BODY
1661	SCREW FOR 1660
1662	THREAD GUIDE FOR 1660
1663	SCREW FOR 1662
1664	OIL FELT FOR 1652
1665	NEEDLE PLATE
1666	SCREW FOR 1665
1667	SLIDE PLATE COMPLETE
1668	NEEDLE
1669	PRESSER BAR ONLY
1670	PRESSER SPRING
1671	BUSHING FOR 1669
1672	PRESSURE REGULATOR
1673	PRESSER BAR GUIDE BRACKET
1674	THREAD REGULATOR
1675	SCREW FOR 1674
1676	PRESSER BAR LIFTER
1677	PRESSER BAR LIFTER LEVER
1678	HINGED STUD FOR 1677
1679	ADJUSTING WASHER FOR 1677
1680	THREAD TENSION RELEASE
1681	SPRING FOR 1680
1682	FULCRUM PIN FOR 1680
1683	SCREW FOR 1682
1684	HOLDER FOR 1685
1685	OIL WICK FOR 1715
1686	HINGED FOOT COMPLETE
1687	SCREW FOR 1686
1688	SPRING FOR 1676
1689	MAIN SHAFT ONLY
1690	MAIN SHAFT FRONT BUSHING
1691	OIL WICK FOR 1690
1692	MAIN SHAFT CENTER BUSHING
1693	OIL WICK FOR 1692
1694	GASKET FOR 1732
1695	MAIN SHAFT REAR BUSHING
1696	OIL WICK FOR 1695
1697	OIL FELT FOR 1690, 1692, 1695
1698	SCREW FOR 1690
1699	SCREW FOR 1692, 1695, 1720 1723, 1768, 1755, 1716
1701	TAKE UP LEVER CRANK WITH SCREW 82
1702	POSITION SCREW FOR 1701
1703	HAND WHEEL
1704	SCREW FOR 1703
1705	CAP SCREW FOR 1703
1706	TAKE UP LEVER COMPLETE
1707	TAKE UP LEVER BODY
1708	TAKE UP LEVER LINK
1709	NEEDLE BAR CRANK
1710	CAP SCREW FOR 1709
1711	WASHER FOR 1710
1712	NEEDLE BAR CRANK CONNECTION
1713	BEARING ROLLERS
1714	RETAINER FOR 1713
1715	NEEDLE BAR BRACKET WITH SCREW
1716	HINGED STUD FOR 1708
1717	SLIDING BLOCK FOR 1715
1718A	MAIN SHAFT GEAR
1718B	VERTICAL SHAFT UPPER GEAR
1718C	VERTICAL SHAFT LOWER GEAR
1718D	HOOK SHAFT GEAR
1719	VERTICAL SHAFT ONLY
1720	VERTICAL SHAFT UPPER BUSHING
1721	GASKET FOR 1733
1723	VERTICAL SHAFT LOWER BUSHING
1724	OIL FELT FOR 1720, 1723
1725	HOOK SHAFT ONLY
1726	HOOK SHAFT FRONT BUSHING
1727	OIL WICK FOR 1726
1728	HOOK SHAFT REAR BUSHING - 100
1729	OIL FELT FOR 1726
1730	SCREW FOR 1726, 1728
1731	COLLAR FOR 1725
1732	UPPER GEAR CASE COMPLETE
1733	LOWER GEAR CASE COMPLETE
1734	POTATING HOOK ASSEMBLY
1735	HOOK RETAINER
1736	SCREW FOR 1735
1737	WASHER FOR 1736
1738	BOBBIN CASE ASSEMBLY
1739	BOBBIN
1740	FEED AND FEED LIFTING ECCENTRIC WITH SCREW
1741	SLEEVE FOR 1740
1742	OIL FELT FOR 1741
1743	SPRING FOR 1742, 1745
1744	FEED LIFTING CRANK ROD COMPLETE
1745	OIL FELT FOR 1744
1746	FEED FORK — 121 - w/105
1747	FEED REGULATOR FORK
1748	LINK FOR 1747
1749	LINK SCREW FOR 1748
1750	ADJUSTING WASHER FOR 1751
1751	HINGED SCREW FOR 1747
1752	NUT FOR 1751
1753	HINGE CONNECTION SCREW FOR 1744, 1746
1754A	HINGE STUD FOR 1747
1754B	CUSHION FOR 1754A
1755	BUSHING FOR 1754A
1756	REVERSING ARM FOR 1747
1757	SHAFT FOR 1756
1758	WASHER FOR 1763
1759	RETAINER FOR 1760
1760	SPRING FOR 1756
1761	ADJUSTING SCREW FOR 1760
1762	NUT FOR 1761
1763	FEED REVERSING LEVER
1764	SCREW FOR 1763
1765	CAP SCREW FOR 1763
1766	FEED REGULATING KNOB
1767	CAP SCREW FOR 1766 - 149
1768	BUSHING FOR 1769
1769	FEED REGULATING SCREW SPINDLE
1770	STOP PIN FOR 1766
1771	FEED REGULATOR STOPPING SPRING
1772	FEED LIFTING SHAFT
1773	FEED LIFTING BELL CRANK
1774	SCREW FOR 1773
1775	SLIDING BLOCK FOR 1773
1776	STUD FOR 1775
1777	SCREW FOR 1776
1778	FEED ROCK SHAFT
1779	FEED BAR
1780	FEED DOG
1781	SCREW FOR 1780
1782	FEED BAR SHAFT
1783	WASHER FOR 1782
1784	FEED ROCK ARM WITH SCREW
1785	SCREW CENTER FOR 1772, 1778
1786	NUT FOR 1785
1787	DRIP PAN
1788	NUT FOR 1759
1789	ACCESSORY BOX
1790	SCREW DRIVER, LARGE
1791	SCREW DRIVER, SMALL
1792	CLOTH GUIDE
1793	CLOTH GUIDE THUMB SCREW
1794	BED HINGE STUD
1795	WRENCH, LARGE
1796	WRENCH, SMALL
1797	NEEDLES
1798	HINGE PLATE
1799	SCREW FOR 1798
1801	BOBBIN WINDER
1802	KNEE LIFTER BRACKET
1803	KNEE LIFTER ARM
1804	NUT FOR 1803
1805	COLLAR FOR 1809
1806	KNEE LIFTER KNEE ARM JOINT
1807	KNEE LIFTER LEVER
1808	KNEE LIFTER PAD
1809	KNEE LIFTER SHAFT
1810	SET SCREW FOR 1808, 1807, 1805
1811	KNEE LIFTER LEVER ARM