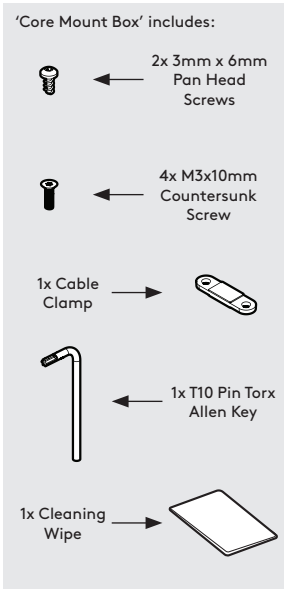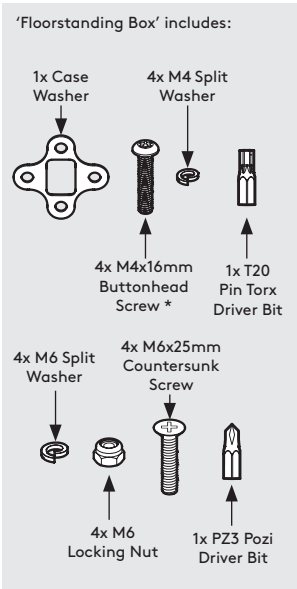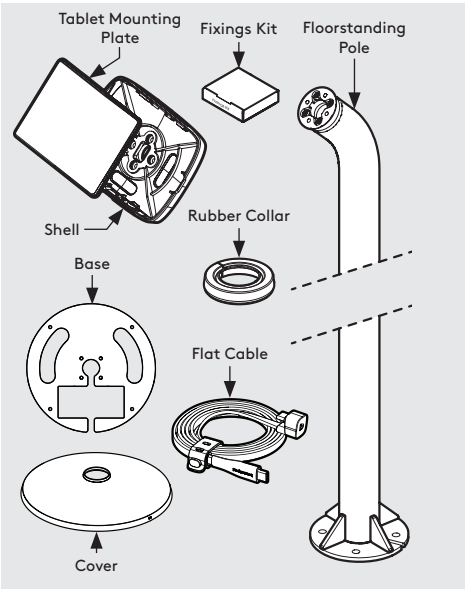# bouncepad®

Core Floorstanding
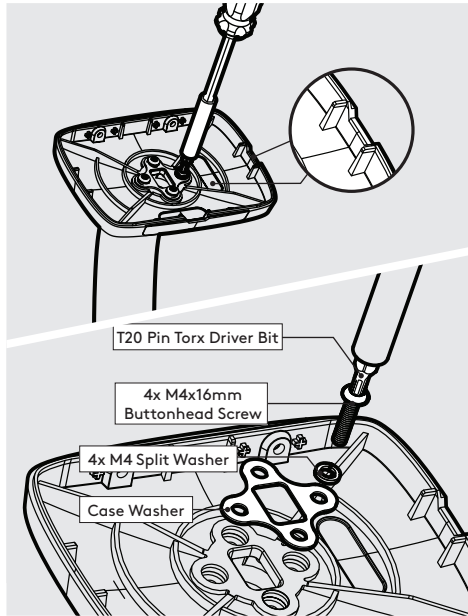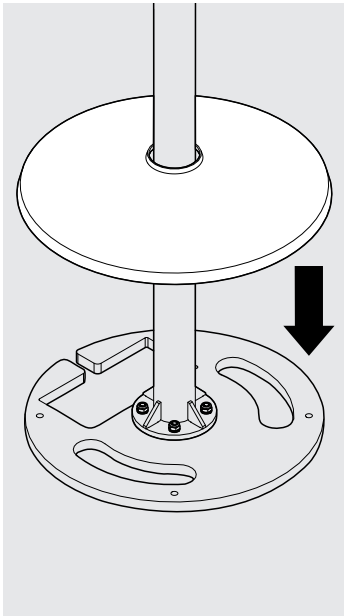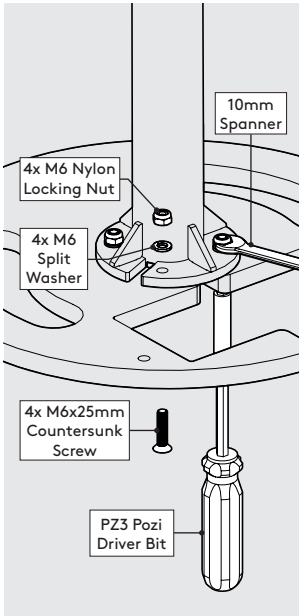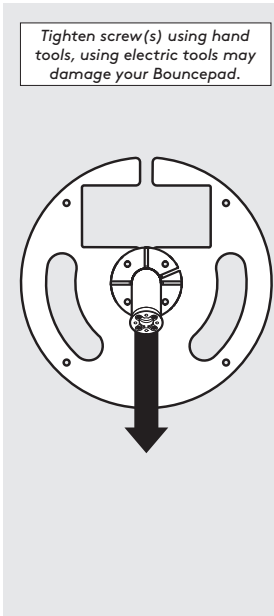Assembly Instructions

Tools Required:
- Socket Driver
- 10mm Spanner *or adjustable spanner*
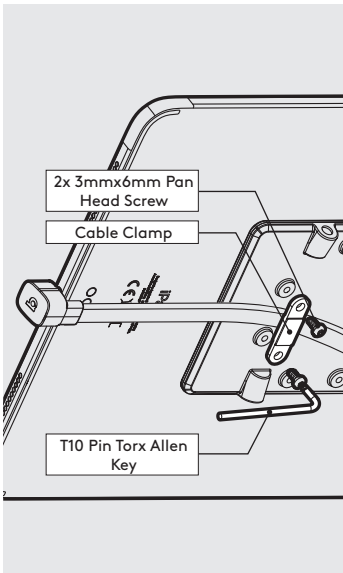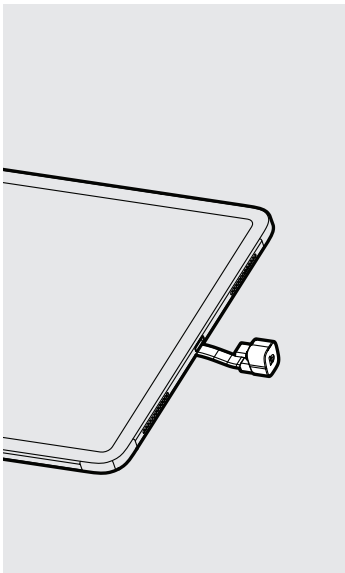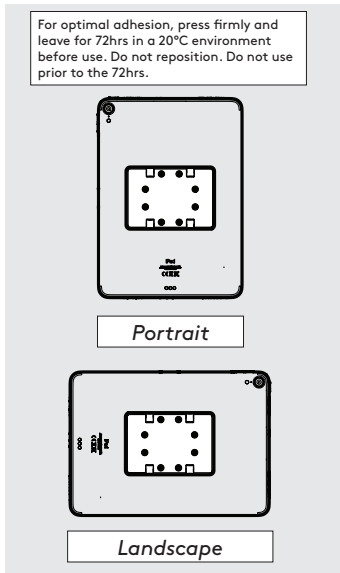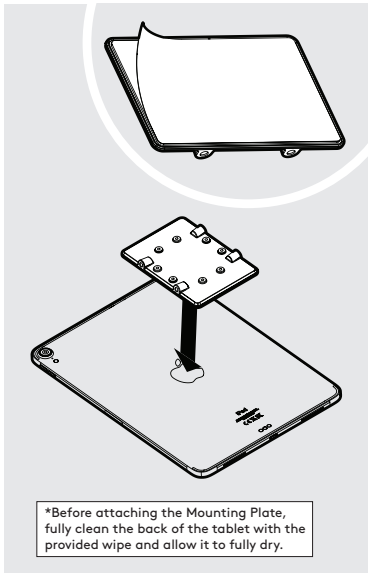
Sheet Code: BP-IM-092_REV1

Release Date: 16/05/2025

In the Box

Tablet Mounting Plate · Fixings Kit · Floorstanding Pole · Shell · Rubber Collar · Base · Flat Cable · Cover

'Floorstanding Box' includes:

- 1x Case Washer
- 4x M4 Split Washer
- 4x M4x16mm Buttonhead Screw *
- 1x T20 Pin Torx Driver Bit
- 4x M6 Split Washer
- 4x M6 Locking Nut
- 4x M6x25mm Countersunk Screw
- 1x PZ3 Pozi Driver Bit

'Core Mount Box' includes:

- 2x 3mm x 6mm Pan Head Screws
- 4x M3x10mm Countersunk Screw
- 1x Cable Clamp
- 1x T10 Pin Torx Allen Key
- 1x Cleaning Wipe

Fixings List

Due to the modular nature of our product range you may receive additional fixings in the fixings kit.
* Previous models may have been supplied with 20mm.

Tighten screw(s) using hand tools, using electric tools may damage your Bouncepad.

- 10mm Spanner
- 4x M6 Nylon Locking Nut
- 4x M6 Split Washer
- 4x M6x25mm Countersunk Screw
- PZ3 Pozi Driver Bit

1 Orientate, locate & secure the Floorstanding Pole to the Base as shown. Ensure that all fixings are installed correctly.

2 Locate the Cover over the Floorstanding Pole.

- T20 Pin Torx Driver Bit
- 4x M4x16mm Buttonhead Screw
- 4x M4 Split Washer
- Case Washer

3 Locate & attach the Shell to the Floorstanding Pole in the correct orientation.

---

*Before attaching the Mounting Plate, fully clean the back of the tablet with the provided wipe and allow it to fully dry.

For optimal adhesion, press firmly and leave for 72hrs in a 20°C environment before use. Do not reposition. Do not use prior to the 72hrs.

Portrait

Landscape

4 Remove the Mounting Plate adhesive backing. Attach level & centrally to the Tablet back as shown.

5 Attach the Flat Cable to the Tablet with the U-Bend Head.

- 2x 3mmx6mm Pan Head Screw
- Cable Clamp
- T10 Pin Torx Allen Key

6 Secure the Flat Cable to the Mounting Plate with the Cable Clamp as shown.
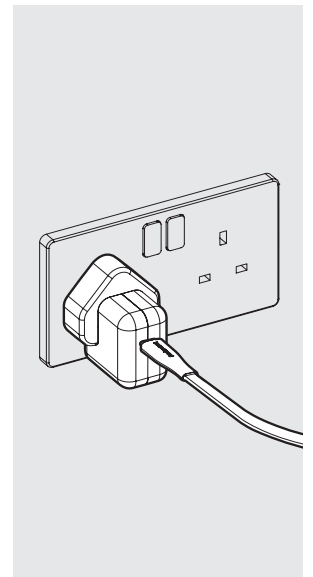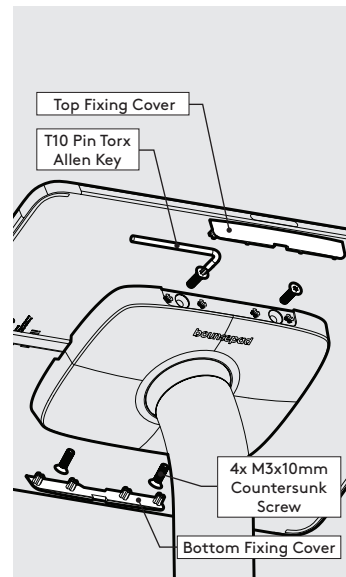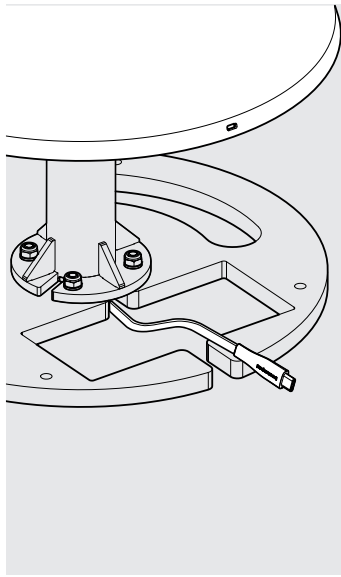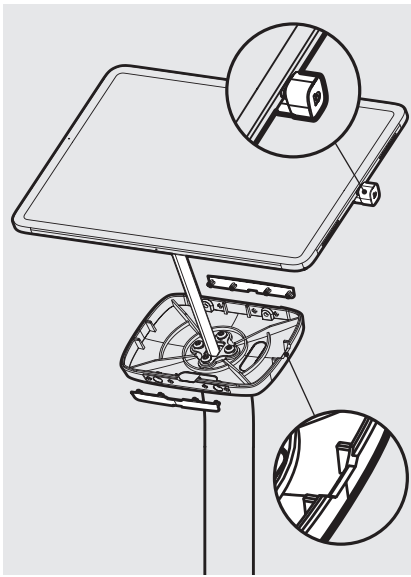
7	Remove the Fixing Covers. Feed the Flat Cable into the assembly & locate the Tablet in the chosen orientation.

Top Fixing Cover

T10 Pin Torx Allen Key

4x M3x10mm Countersunk Screw

Bottom Fixing Cover

8	Secure the Tablet to the Shell & attach the Fixing Covers as shown.

9.1	Connect the Flat Cable to its mains power source.

Approximate maximum Battery Pack dimensions: 91mm (length) x 56mm (width) x 25mm (Height).
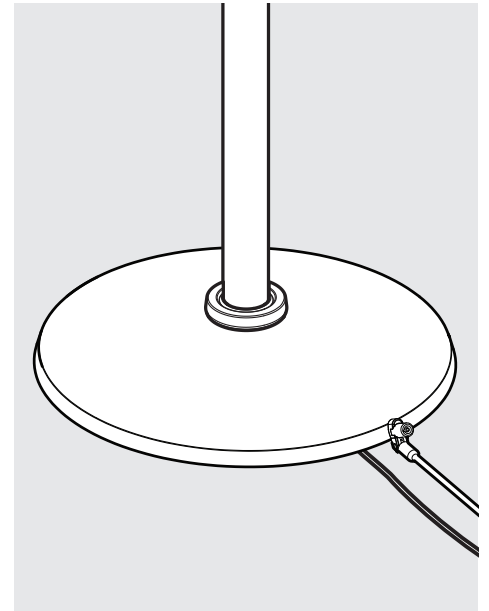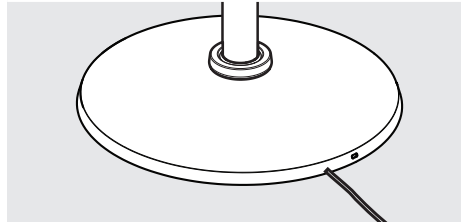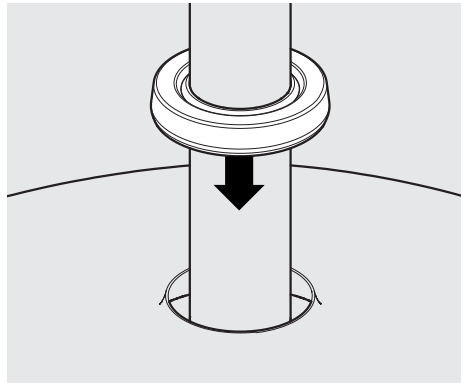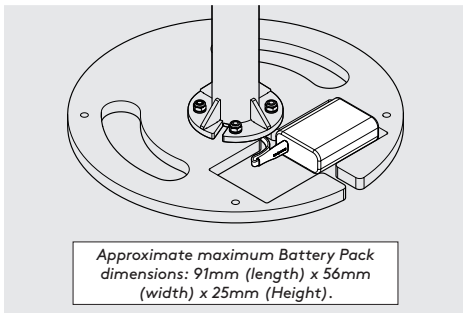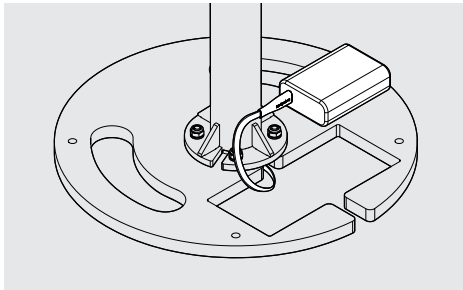
9.2	If installing a Battery Pack, connect the Flat Cable & locate into the Base.

10	With the Cover on the ground, locate & fit the Rubber Collar.

11	Use a Kensington® Microsaver product to tether to a secure object. (refer to your Kensington® instructions for full details)
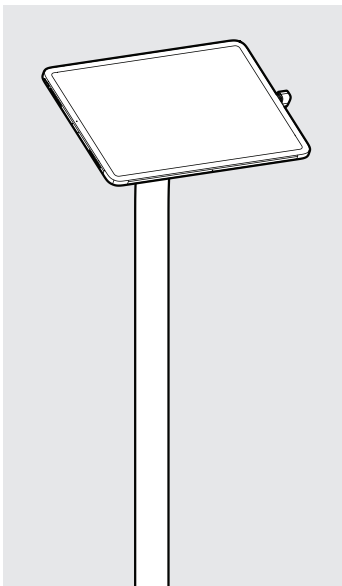
12	Installation is now complete.