BPB24
Remote Pairing Instructions

Bazooka®

POWER RAIL READY!
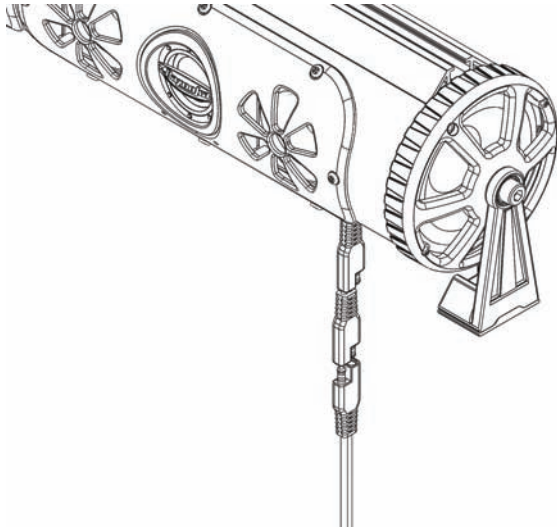
Hold

Hold

**Step 1**. Remove the power from the BPB24 by unplugging the main power cable. Wait 30 seconds
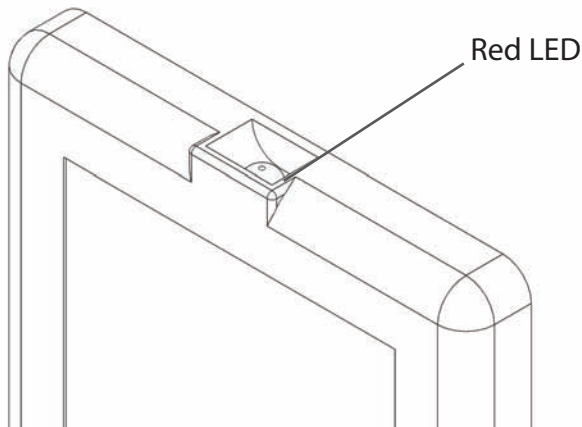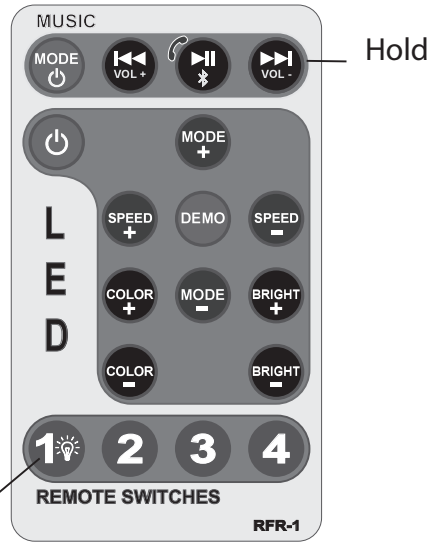
Red LED

Step 2. Press and hold the ►►VOL- and 1 buttons. After 5 seconds you will see that the red led on the remote will start to flash slowly. Once the led is flashing release the buttons
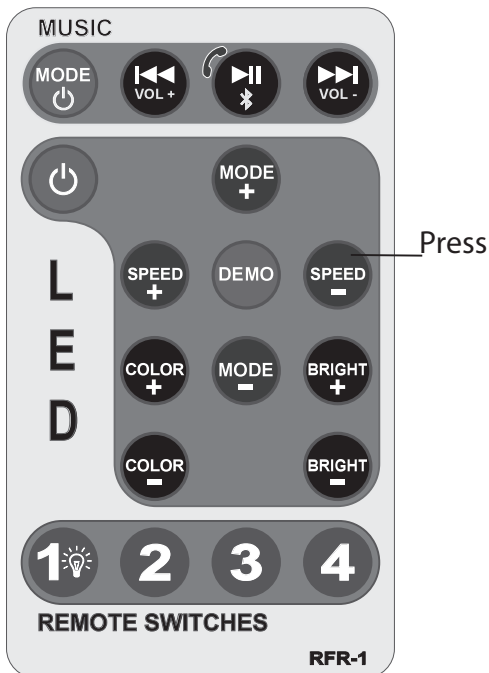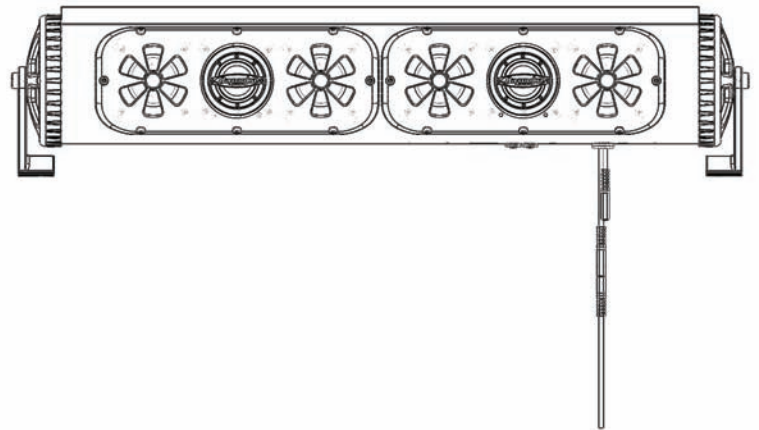
Press

Step 3. Plug the BPB24's main power cable back in. You will see the LEDs on the speaker flash white 3 times. Press and release the SPEED button. The remote is now paired to the BPB24