BPB24-G2 BPB24-DS-G2
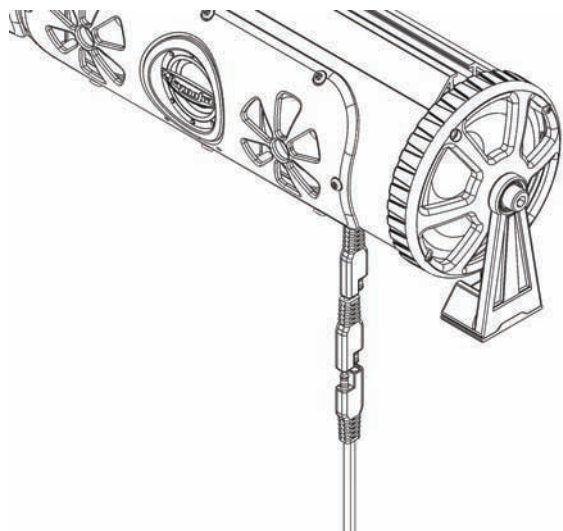# BPB36-G2
Remote Pairing Instructions

Hold → 1 2 3 4 ← Hold
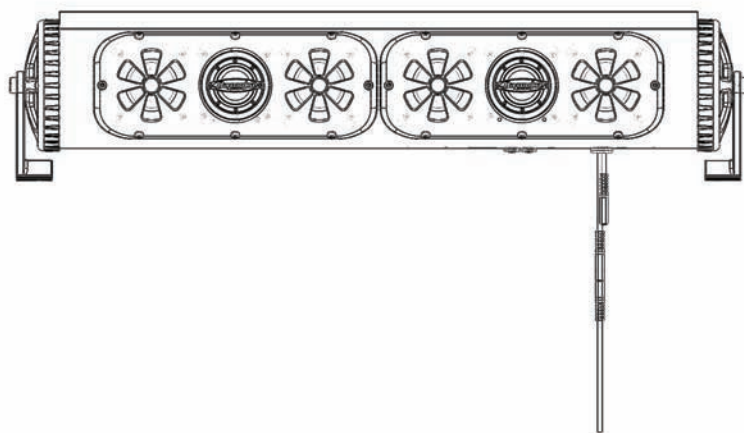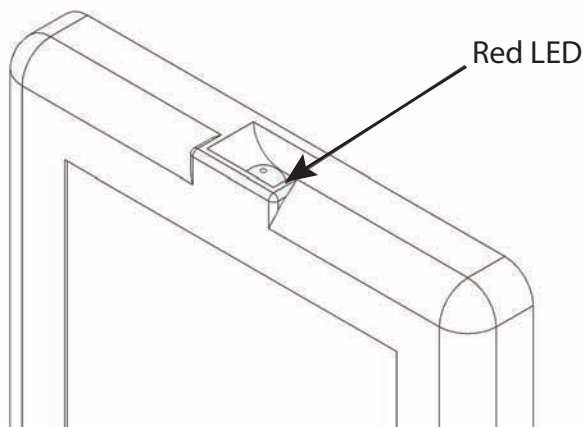
ACC REMOTE SWITCHES

RFR-4

Step 1. Remove the power from the BPB-G2 by unplugging the main power cable. Wait 30 seconds
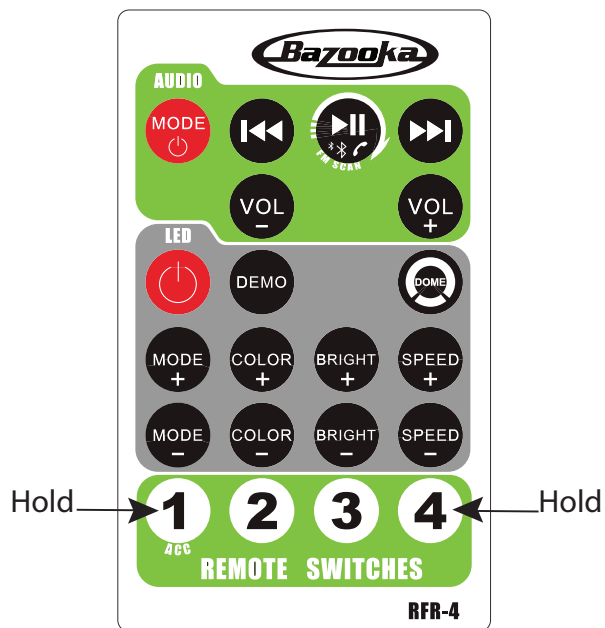
Step 2. Press and hold the **1** and **4** buttons. After 5 seconds you will see that the red led on the remote will start to flash slowly. Once the led is flashing release the buttons.

Red LED

Step 3. Plug the BPB-G2's main power cable back in. You will see the flashing LED on the remote go off. Now your remote is paired to the BPB-G2.