EPEIOS

取扱説明書|취급 설명서|User Guide

多肉植物を育てるグラフィラップ"FAWQUE"
스마트 화분 | Grow Light

Model: EPGL001

EPEIOS

目次

ご注意 01
各部名称 01
使用方法 02
取付方法 03
フィルターと水タンクの掃除 04
メンテナンス 04
製品仕様 04
トラブルシューティング 05
保証書 05

EPEIOSの製品をお買いあげいただき、誠にありがとうございます。
本製品を有効まで長くご愛用いただくために、ご使用前に必ずお読み取り保管をしてください。

목 차

주의 사항 06
제품 설명 06
구성품 07
물의 양 확인 08
필터와 물탱크 청소 09
유지 관리 지침 09
제품 사양 09
고장 안내 10
보증서 10

EPEIOS 제품을 구입해 주셔서 감사합니다.
제품을 수명까지 안전 사용 및 정상 기능 유지하기 바라며 주문 접수를 위해 잘 보관해주시기 바랍니다.

Contents

Important 11
Product Diagram 11
Get Started 12
Installation 13
Clean the Filter and Water Tank 14
Maintenance 14
Specifications 14
Troubleshooting Guide 15
Warranty Card 15

Thanks for choosing EPEIOS.
Please read this guide thoroughly before using this product and retain it properly for future reference.

ご注意

- 水道水を使用してください。
- 本製品を分解したり、内部構造を変更したりしないでください。
- 近寄させに置かないでください。
- 植物を枯れると、直後から本製品を使用するのではなく、植物が生えそろってから使用してください。
- **直射日光**、24時間は本製品の使用を中止してください。
- 長時間使用、**過度**に、この可小本製品の使用はオススメしません。
- ライトの光に近く直射照射中のにはかをやめてください。
- 本製品は、**温度**・**湿度**・**光**・**水**・**土**・**肥料**・**害虫**・**害獣**に注意し、対応に合わせて調整して植物の生長を促進してください。
- イチゴ、ラッシュ、ブロウなど観賞しやすい特殊な植物する時は、定期的に剪定を行なってください。
- 本製品の洗浄を長時間放置しないでください。
- 本体表面の植物のため、長時間電源をみれずに放置すると、定期的に剪定をすることをオススメします。
- 本製品の部品交換は、製造元、サービス代理店または修理者の責任を持つ者が行なってください。
- 本製品は一般用家庭ではなくて、商業などの目的生活には使用しないでください。人によっては子供を使用する可能性があります。

各部名称

01

使用方法

コンセントに接続する際は必ずプラグを使用してください。

ボタン	状態	説明
電源ボタン	3秒間	電源オフ 電源オン
給水ボタン	3秒間押した状態あたりに切れます。	モード1 (1回/1日)に切り替え。
	3秒間押した状態あたりに切れます。	モード2 (1回/3日)に切り替え。
	3秒間押した状態あたりに切れます。	モード3 (1回/7日)に切り替え。
ライトボタン	常時に点灯	【注意】 ランプシェードが取りにくいインジケーターが点滅しない状態は、間隔を空に調整することを推奨しています。 考えられる原因: 1. 光源を使用していない 2. 光源が故障 3. 電圧ライトとタンクの2本に接続されていない
	青色に点灯	【時間点灯】【時間消灯】を繰り返し。
	緑に点灯	【時間点灯】【時間消灯】を繰り返し。
	赤色に点灯	間隔時間調整をしてください。
給水時のインジケーター	点灯	ライトオフ
	消灯	水が不足

電源オン

電源プラグをコンセントに接続すると、インジケーターが点灯になります。スタンバイモードでは電源ボタンのみが操作可能です。その他の機能ボタンは操作できません。

モード選択

モード選択モードでは、ライトモード、モード1、モード2、モード3の順に表示されます。スタンバイモードから電源ボタンを1回だけ長押しすると、モードが切り替わります。

給水モード

給水モード	設定時間	操作
モード1	1回/1日	1回 ① をタップします。
モード2	1回/3日	2回 ① をタップします。
モード3	1回/7日	3回 ① をタップします。

ライトモード

ライトモード	設定時間	操作
モード1	1時間オン、1時間オフ	1回 ① をタップします。
モード2	3時間オン、3時間オフ	2回 ① をタップします。
モード3	常時照明オン/オフ	3回 ① をタップします。

メモ:
モード選択中にバッテリー量が残りますと、ブザー音を停止し、ブザー音を停止しゆっくりと正しく操作してください。

メモリー機能
電源プラグを抜いても再び接続すると、機能がリセットされます。
電源のいったまを本製品に接続プラグをオンにしたりする と、直前に設定されていた機能に戻ります。

警告
ハーブ、ミネ材料しか交換しかしないでください。
・ヒからは流れてください。

取付方法

1. 開封して本製品を取り出します。(図1)
2. ホタテシェルを選ぶ&入れます。最も ホタテシェルから水が溢れないようにご注意ください。(図2)
3. ライトを本体の底面ホタテシェルの底に合わせて、ホタテシェル取付けります。(図3)
4. 植物をセットして、給水量を調整します。給水量を植物の量や量から量して、給水口を上から ヒーターhmmのこと に合わせ注意ください。(図4)
5. 電源を入れ、調時間の使用方法を参考にして設定してください。

図1 図2 図3 図4

04

フィルターと水タンクの掃除

詰まりにはさけ詰まりしる場合は、フィルターカバーを外し、フィルタースポンジを清掃してください。(図1)
タンクの内にさけかるる場合は、相違に清掃して給水口が塞がらないようにしてください。(図2)

図1 図2

メンテナンス

メンテナンスを行なう前にかず電源をせずにください。
本製品は部分的機能処理ですので、清のやすい場所に置かないでください。
通常、ホタテシェルをタスれるのでやってやりますが、直接植物に当たやる場合は、温れりはいつ にやってなければなりません。

製品仕様

製品名称	多肉植物を育てるグラフィラップ"FAWQUE"
モデル	EPGL001
サイズ	約231.6×123×463mm
商品重量	500g
定格電圧	100-240V~
定格消費電力	3W
入力電流	0.04A
電源周波数	50/60Hz
点灯電力	1.5W (30×0.05W,LEDモジュール)

05

トラブルシューティング

問題	考えられる原因	解決方法
製品が起動できない	電源が接続されていない/ または接続不良	電源装置を接続し、電源装置が適切に接続していることを確認します
	電源ボタンが破損不良	電源ボタンを確認してください。
製品の電源がはいない	製品が故障している	カスタマーサポートにご連絡ください。
	電源ボタンが破損不良	電源ボタンを確認します
製品の電源がはいない	電源が破損した	カスタマーサポートにご連絡ください。
	PCBが故障した	カスタマーサポートにご連絡ください。
インジケーターが点灯しない	ライトが破損	カスタマーサポートにご連絡ください。

保証書

保証期間(無料修理)は、購入日から適用されます。
1. 保証を受ける際は、この保証書とレシートを必ず購入時点まで用意ください。次の点に特に注意してください。
a.この保証書は所有者に発行されますので、大切に保管してください。
b.この保証書は、販売時点から保証期間内に有効です。
2. 購入日から、次の期間の保証内容が適用可能となる保証が適用されます。
a. 保証期間:購入日から1年間
3. 以下のいずれかの場合、保証期間中であっても保証の対象とはなりませんが、有料で修理を行うことができます。
a.製品取扱説明書の要件に従わず使用、保守、保管しなかったために生じた損傷。
b.不適切な操作、誤った使用、故障/修理などによって引き起こされた損傷。
c.自然災害、火災、地震、洪水、雷、汚染、または電圧の変動による損傷。
d.製品に適切な水を購入頂き適切な水を使用していたにも、変色されていた。
f.不可抗力要因(雷、地震、火災、洪水)によって引き起こされた損傷。
4. この保証条件は、お客様が購入時点から一次のみに購入して使用する場合にのみ適用されます。商用利用には適用されません。

商品名 EPGL001
購入日 ＿＿年＿＿月＿＿＿日
販売店印 (住所・店名・電話番号)

こちらに販売店印もしくは購入証明を添付のうえ保管ください。

주의 사항

- 수돗물만 사용하세요.
- 사적으로 화분을 개조하고 분해 하는 것을 삼가 고이하며, 화분에 제품을 가까이 두지 마십시오.
- 식물이 마르는 직후부터 스마트 화분을 사용하지 마십시오. 식물이 마르면 그 새로운 환경에 적응시킨 후 스마트 화분을 장상적으로 사용하시오.
- 식물이 놓여 있는 곳 **직사광선**, 24시간 동안 스마트 화분을 중단해야 합니다.
- 장시 장시간 장한 상태는 스마트 화분 사용을 권장하지 않습니다.
- 스마트 화분 장한은 줄기 없는 식물 줄기부터 잘라야 합니다.
- 스마트 화분 **온도**・**습도**・**빛**・**물**・**토**・**비료**・**해충**・**해수**에 맞게 조절하여 식물의 성장을 촉진하기 위해 식물의 성장을 촉진하기 위해 상태 상황에 따라 조절해야 합니다.
- 꽃도, 개울대로, 포도 등 일부 특이한 식물 이용 경우 스마트 화분을 사용할 때 가지의 유목을 정후의 관리해야 합니다.
- 스마트 화분의 경우를 오랜 장시간 분리하지 마십시오.
- 스마트 화분을 장시간 인한하지 않는 것이 좋습니다.
- 스마트 화분의 렌즈는 세조업체 또는 그 이하스 대리점에 의해 또는 유사한 자격을 갖춘 사람이 교체해야 합니다.
- 스마트 화분은 일반적인 전원을 통하지 마시고, 사용자 매뉴얼 및 생활에 사용하기 위하여에 정사인 전용 장치나 어댑터를 통하여야 수 있습니다.

제품 설명

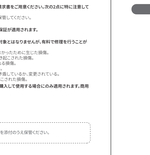

06

안전

안전 이모티콘을 사용하여 이 제품을 안전하게 연결하십시오.

버튼 및 인디케이터 정보

버튼	지시등	모드
전원 버튼	켜짐	켜기
	빠르게 지시등 3초간 깜빡임(지시등 지속 켜짐)	급수모드 2 시작 준비(급수모드 1 진행
	천천히 지시등 3초간 깜빡임(지시등 지속 켜짐)	급수모드 3 시작 준비(급수모드 2 진행
	천천히 지시등 3초간 깜빡임(지시등 지속 켜짐)	급수모드 3 시작 준비(급수모드 3 진행
급수모드 버튼	켜짐	급수모드 1 시작 준비(급수모드 1 진행
	빠르게 지시등 3초간 깜빡임(지시등 지속 켜짐)	급수모드 2 시작 준비(급수모드 2 진행
	천천히 지시등 3초간 깜빡임(지시등 지속 켜짐)	급수모드 3 시작 준비(급수모드 3 진행
조명모드 버튼	조명모드 1 켜짐	조명모드 1
	조명모드 2 켜짐	조명모드 2
	수중모드 켜짐	수중모드
조명모드 버튼	꺼짐	꺼짐
물표시라인 (워밍 업)	빠르게 깜빡임	물 보충

전원 켜기
처음 전원 어댑터를 사용하여 스마트 화분을 연결해 연결합니다. 있는 연결되면 디바이스는 스탠바이 모드가 되고 전원 버튼을 해제한 있는 가능 버튼이 세팅됩니다.
* 기본 모들 보다 전원을 켜서 제품을 작동합니다.
작동 상태를 확인한 후 급수모드 또는 조명모드를 선택하여 사용하세요.

설치 방법

- 포장을 풀고 제품을 꺼냅니다. (그림1)
- 수면에 물을 주입합니다. 양은 수위 한계선과 물탱크를 넘지지 않도록 하십시오.
- 조명 모듈을 물탱크 바닥에 놓고 조명 모듈 (그림2)
- 식물을 놓고 공간 크기에 맞춰 조명모듈 덮개 위치에 맞춰 위치, 급수구는 최대 5-20mm 정도 떨어져 있어야 합니다. (그림 4)
- 전원을 꽂고 사용 상태를 모드하여 작동하세요.

그림1 그림2 그림3 그림4

08

필터와 물탱크 청소

- 이물질 등으로 배수구가 막히고 정지된물 보이후 물이 스며드는 현상 발견 하면 반드시 사용하십시오.(그림1)
- 위치 방과에 이물질이 있을 경우 물탱크를 씻어 정렬 공수기가 막히지 않도록하십시오.(그림2)

그림1 그림2

유지관리 지침

관리하기 전에 반드시 전원 연결을 차단해 주십시오.
- 본 제품은 실내에서 사용하도록 설계되었으며 방수 기능은 전혀 보장되지 않습니다.
- 물탱크를 물을 보충하는 경우 전원에 식물에 직접 물을 주실때 물이 넘치지 않도록 사용 부분이나 일부 부분이 있습니다.

제품 사양

제품명	스마트 화분
제품모델	EPGL001
정격전류	0.4A
제품무게	500g
제품크기	310 × 132 × 463mm
제품크기	100-240V~
정격출력	3W
입력전류	0.04A
정격전력	50/60Hz
주광조사전력	1.5W (30x0.05W) LED

09

고장 안내

고장증상	고장 원인	처리 방법
작동하지 않음	전원이 꺼지지 않는지는 정상 불량	제품을 분리 접촉이 없는지 확인
	소프트 웨어 불량	소프트웨어 고장인지 점검하세요
	기기 파손	A/S센터로 연락주세요
전원이 켜지지 않음	소프트 웨어 불량	소프트웨어 고장인지 점검하세요
	기기 파손	A/S센터로 연락주세요
	회로기판 불량	A/S센터로 연락주세요
지시등이 켜지지 않음(LED)	지시등 고장	A/S센터로 연락주세요

보증서

보증기간은 보증서작성일자부터 2주일 경과하지 않았다면,
1. 수리할 때, 본 보증서 및 구매 영수증을 제시해 주실지오.
다음 중 하자는 구입처 무의하여야합니다.
a. 본 보증서는 분실 후 재발급 되지 않으니 잘 보관하시기 바랍니다.
b. 본 제품 사용설명서 및 주의사항 에 따라 정상적 사용 중 고장이
2. 구입일로부터 일주일 이내 중 고장이 발생한 경우 사용중 고장이 발생한 경우 보증합니다.
a. 보증기간 : 구입일로부터 1년
3. 다음의 경우에 해당하는 하자 보증기간 내에서도 보증으로 처리할 수 없습니다.
a.설치 사용설명서에 규정하는 내용, 유지, 보관을 방법대로 하지 않아 발생한 경우,
b.부적절한 조작으로 인한의 비정상적으로 고장이 나타 났을때의 경우,
c.인터넷(스마트)에 등록되지 않고 사용하지로 수리하지 안한 제품의 경우,
d.자연재해 (화재, 지진, 홍수, 번개, 오염 등)에 의한 고장 경우,
e.보증서에 기재된 인쇄가 상이 하거나 변조된 경우,
f.불가항력 요소에 전쟁, 지진, 화재, 수해 등과 기재해 하셔야 한다.
4. 본 보증기간은 소비자 개인의 생활소비를 위해 구매하여 사용하는 경우에만 적용되며, 영업상 등 사용하는 적용되지 않습니다.

모델 EPGL001
구입 날짜 ＿＿＿＿ 년＿＿＿＿ 월＿＿＿＿ 일
판매점 표시 (주소 - 판매자 - 전화번호)

여기에 판매점 표시 또는 구입 증명을 첨부 해 보관하십시오.

10

Important

- Use tap water only.
- Do not disassemble or alter the base. Keep away from fire.
- Do not use the grow light immediately after transplant. Wait till the plant recovers.
- If you have used pesticide on the plant, stop using the grow light for 24 hours.
- It is not recommended to use the grow light in room with strong sunlight.
- Please align the center of the light source with that of the plant.
- Please strengthen watering, fertilizing, temperature, humidity and pinching management when using the light and adjust according to the real situation to boost the growth of plants.
- For plants that tend to overgrow, such as strawberry, winter jujube, grape, please control its seeding and trim them properly to avoid spindly growth.
- Please do not stare at the light source for an extended time.
- It is not recommended to cut off the power source for a long time.
- The light source can only be replaced by a manufacturer, distributor or a qualified person.
- This height is not a household lighting tool. Do not use it as a daily lighting source. Extended exposure to this light may cause discomfort.

Product Diagram

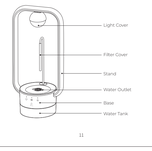

11

Get Started

Only use the included power adapter to connect this product to a power source.

Button	Status	Definition
Power Button	Solid on	Power off
	Solid off	Power off
Watering Mode Button	Flashes hot-pink for 3 seconds	Entering Watering Mode 1
	Hot-pink indicator solid on	Device in Watering Mode 1
	Flashes green for 3 seconds	Entering Watering Mode 2
	Green indicator solid on	Device in Watering Mode 2
	Flashes orange for 3 seconds	Entering Watering Mode 3
	Orange indicator solid on	Device in Watering Mode 3
Light Mode Button	Solid hot-pink	Light Mode 1
	Solid green	Light Mode 2
	Solid orange	Mood Lighting Mode
Lamp / Light in-connence	Flashes 3 times with 3 beeps every 3 seconds	Water depletion

Power On

Connect the Grow Light with power source via included power adapter. Once connected, the Grow Light is in standby mode, in which all functional buttons are disabled except for Power Button.
Tap ① to power the device on and enter working status. To switch modes, either watering mode or light mode, make sure the device is in working status.

Watering Mode

Mode	Definition	How to Activate This Mode
Watering Mode 1	Once per week	Tap ② one time, the indicator will flash hot pink for 3 seconds. Then you will hear a beep sound while the indicator becomes solid hot pink, which means the device is now in Mode 1.
Watering Mode 2	Once every 3 days	Tap ② 2 times, the indicator will flash green for 3 seconds. Then you will hear a beep sound while the indicator becomes solid green, which means the device is now in Mode 2.
Watering Mode 3	Once every 7 days	Tap ② 3 times, the indicator will flash orange for 3 seconds. Then you will hear a beep sound while the indicator becomes solid orange, which means the device is now in Mode 3.

12

Light Mode

Light Mode	Definition	How to Activate This Mode
Light Mode 1	Light on for 1 hour and then off for 1 hour	Tap ① one time
Light Mode 2	Light on for 1 hour and then off for 2 hours.	Tap ① two times
Mood Light	Light solid on	Tap ① three times

Remoinc
There should be a buzzer sound reminder every time you tap a button. Use the sound reminder as a reminder for the operation, especially when you need to tap the button for 2 or more times.

Memory Function
When the device is manually powered off, or when you add water without powering off the device, the device will remember the previous modes in the last use.

Reset
If the device is powered off due to power failure or disconnection from power source, it will enter factory settings when turned on again.

Warning
- Do not disassemble or alter the base.
- Keep away from fire.

Installation

1. Unbox the package and take out the product (As shown in Diagram 1).
2. Fill the water tank with tap water (Pay attention to the water level to avoid spill, as shown in Diagram 2).
3. Place the bottom of the body with the positioning mark of the base to install the water tank (As shown in Diagram 3).
4. Place the plant. Adjust the hose outlet making sure it is away from the stem leaf and the base of the plant. (As shown in Diagram 4).
5. Connect to power and use it as instructed in this manual.

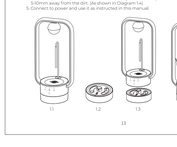

13 14

Clean the Filter and Water Tank

1. If the water outlet is clogged by debris, please remove the filter cover and wash the filter sponge (As shown in Diagram 2).
2. If there is debris in the water tank, please clean the water tank to avoid clogging the water inlet. (As shown in Diagram 2.2).

2.1 2.2

Maintenance

Please disconnect the device from the power source before you maintain it.
1. This product is suitable for indoor plants. Do not place it in humidity or places with a high potential of being wetted.
2. All you need to do is add water into the water tank. Please do not water the plant too fast or excessively to avoid spills.

Specifications

Product Name	Grow Light
Model	EPGL001
Power Factor	0.4A
Net Weight	310g
Dimensions	191×132×463mm
Rated Voltage	100-240V~
Rated Total Power	3W
Input Current	0.04A
Rated Power	50 / 60Hz
Lighting Power	1.5W (30 x 0.05W) LED Module)

14

Troubleshooting Guide

Problems	Reasons	Solutions
Failed to power on	Not connected or poor contact	Plug in the power and make sure it is well connected
	Poor contact of the Power Button	Check the Power Button.
	Device body damaged	Contact our after-sales team.
Failed to turn off the device	Poor contact of the Power Button	Check the Power Button.
	Device body damaged	Contact our after-sales team.
indicator won't light up	Circuit board damaged	Contact our after-sales team.
	Indicator damaged	Contact our after-sales team.

Warranty Card

From the date of purchase, this product comes with free repair within the warranty period. Please keep this warranty card and purchase receipt to claim your warranty.
1. Warranty period: 1 year from the date of purchase
b) This warranty card only applies to the country or region of your purchase.
2. From the date of purchase and within the warranty period, repair policy for the malfunctions under proper use.
Grow Light ——Free in 1 year
3. The warranty is void if one of the following terms happens. But we can repair it at a charge.
a. Improper use, not following the instructions, maintenance, and other conditions as stated in the user guide
b. Damages caused by disassembly of an unauthorized repairing man.
c. Natural disasters, fire, earthquake, flood, lightning, pollution
d. Product information in the guide does not conform with that on the product or has been altered
f. Damages caused by force majeure (thunder, earthquake, fire hazards, flood)
4. This warranty card only applies to customers who purchased this product for personal care use and does not apply for commercial use.

Model EPGL001
Purchase date: ＿＿＿＿＿＿
Dealer (Address - Store name - Telephone number)

Please keep it with the store stamp or purchase certificate attached here.

15