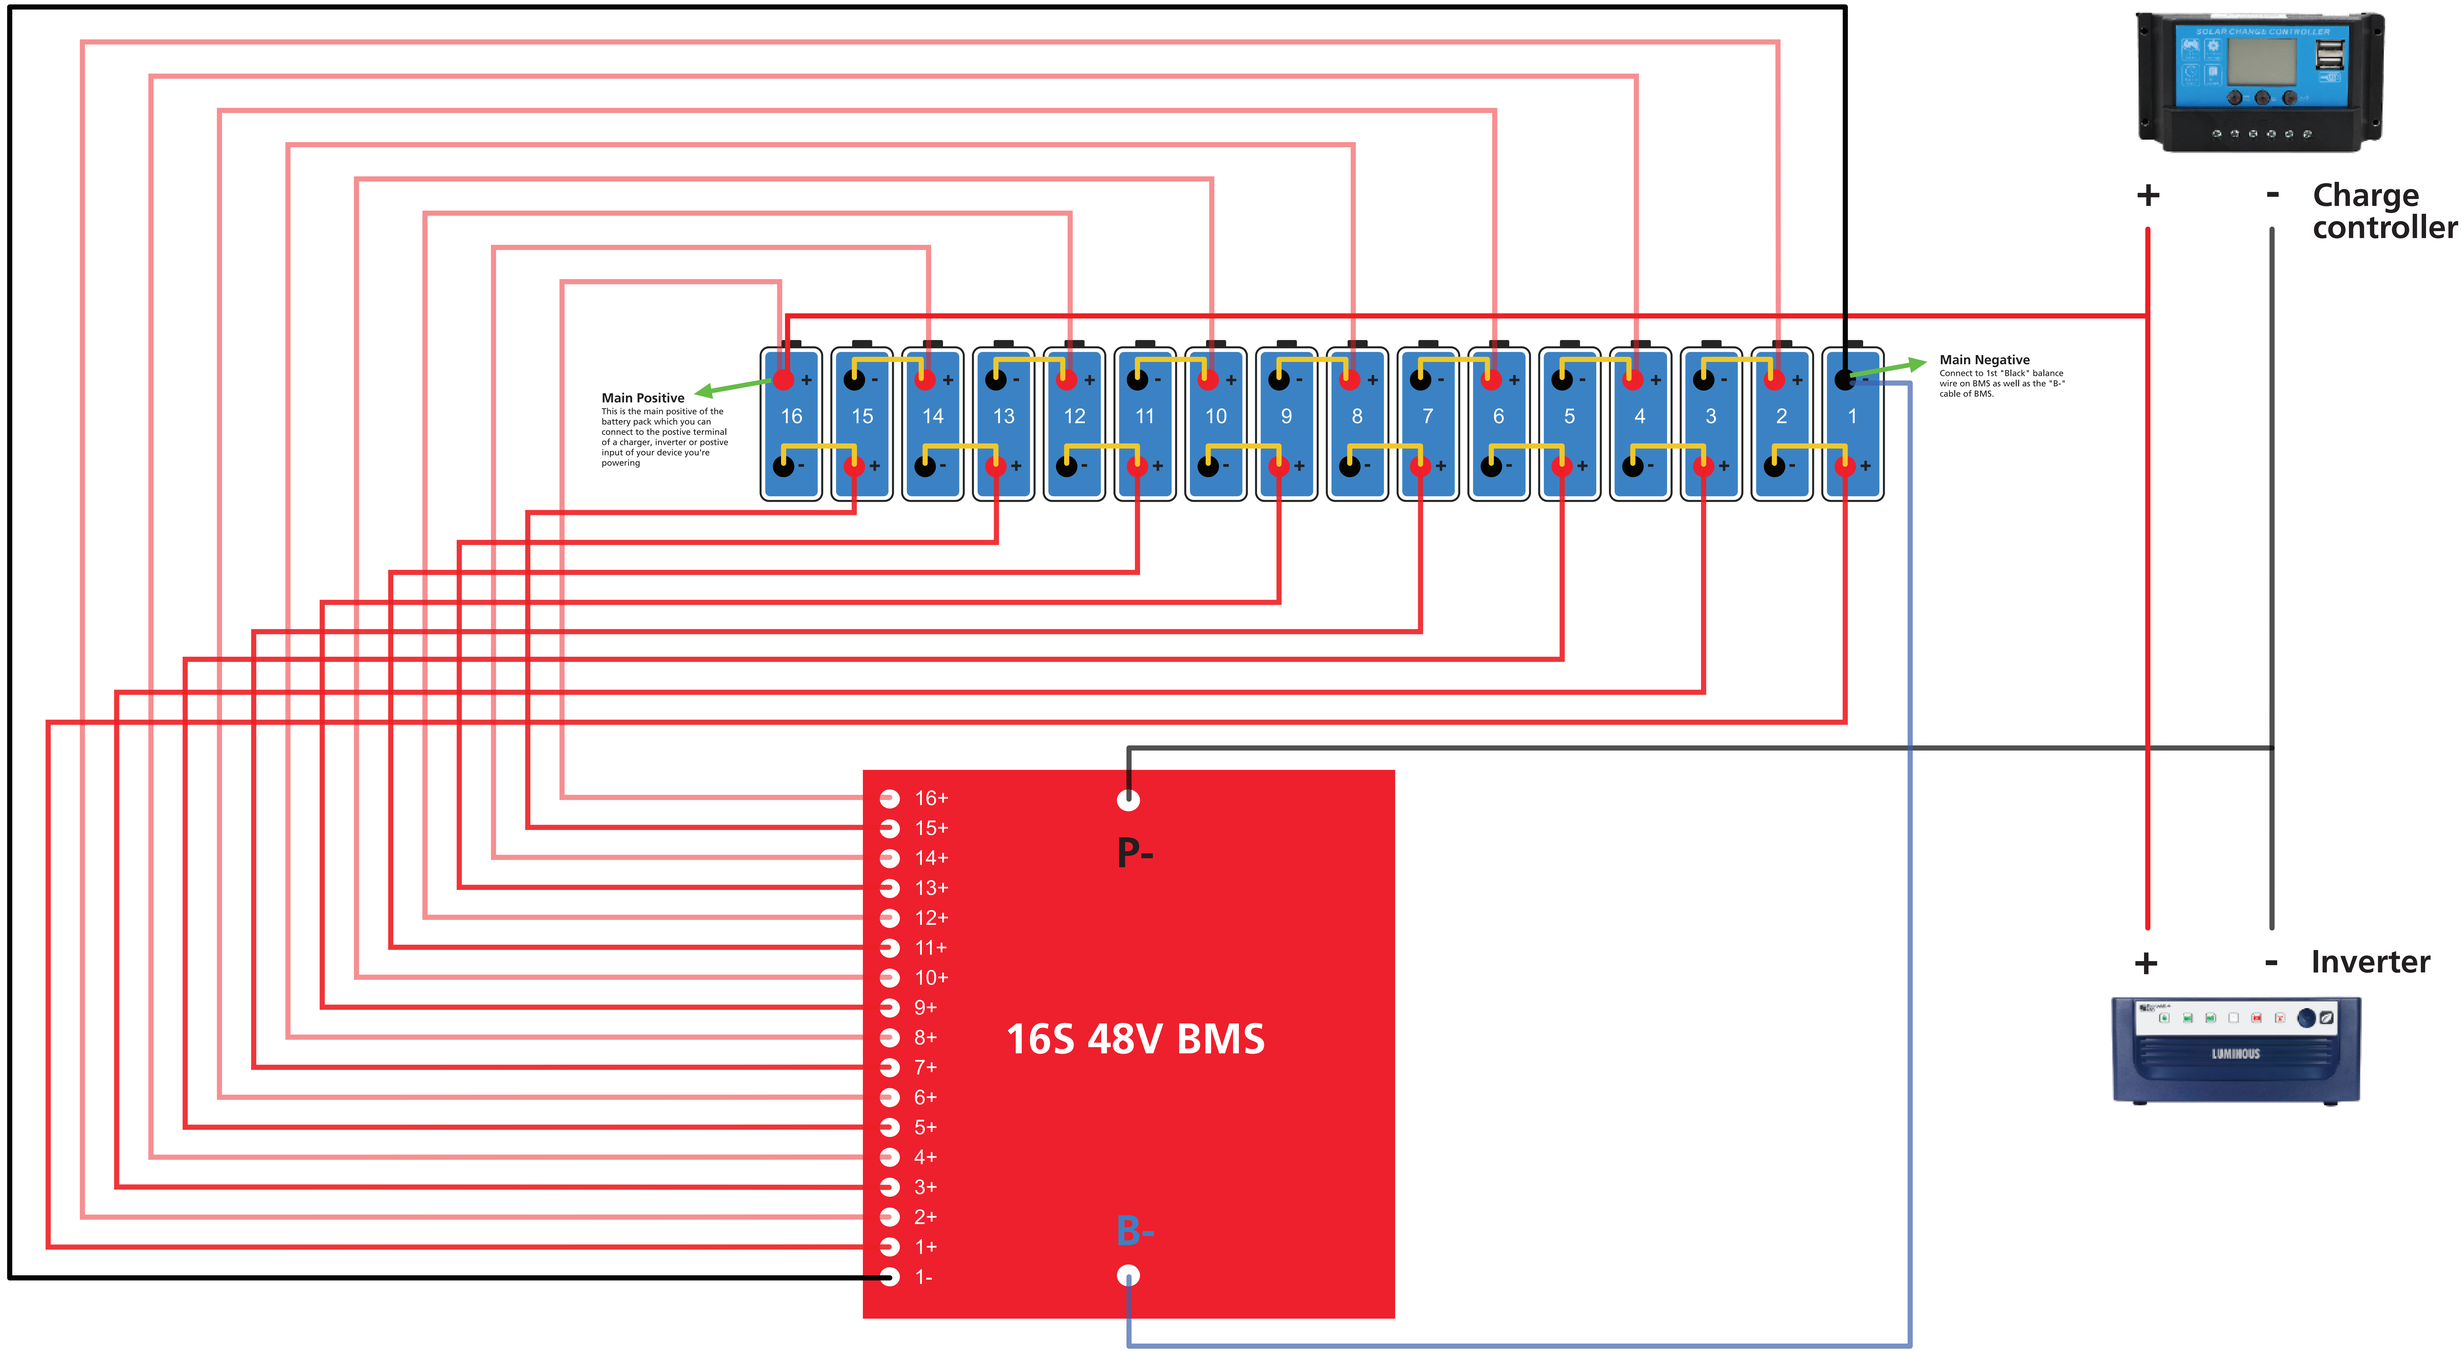
Main Positive
This is the main positive of the battery pack which you can connect to the postive terminal of a charger, inverter or postive input of your device you're powering
Main Negative
Connect to 1st "Black" balance wire on BMS as well as the "B-" cable of BMS.
16
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1
+
-
Charge controller
+
-
Inverter
16+
15+
14+
13+
12+
11+
10+
9+
8+
7+
6+
5+
4+
3+
2+
1+
1-
P-
B-
16S 48V BMS