FEMOBOOK

Instruction Manual for Coffee Grinder

電動磨豆機使用說明書

電動コーヒーグラインダー取扱説明書

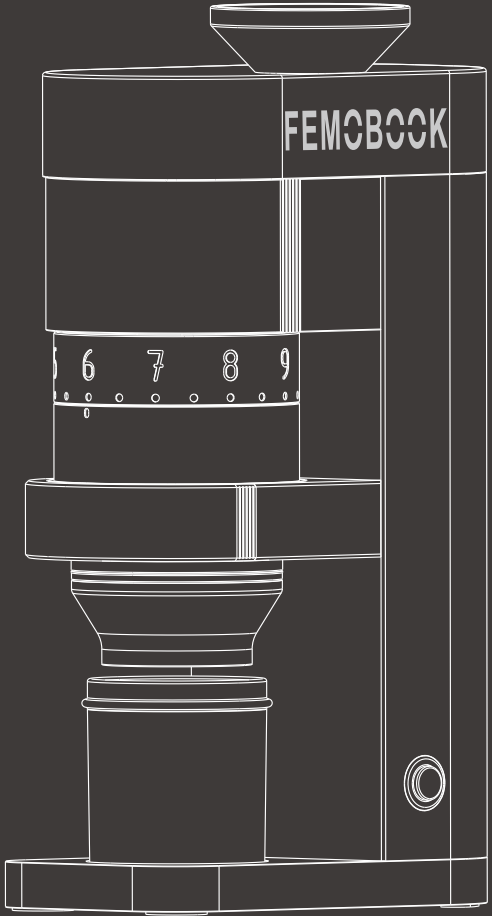

Overview

Model	A68	Capacity	40 ± 5g
Size	160*106*295mm	Weight	5.7 ± 0.2kg
Electrical specification	BDC Motor	Rated speed	60 ± 12%RPM

Power Supply Unit

Power: 192W

Power Supply Input: 100-240V~50/60Hz 3.5A

Power Supply Output: 24V ⎓ 8A

Use only with supply unit DZ252ADL2400800G

⚠ Notice

1. Do not turn on the grinder within 15 clicks to avoid damage to the burr set.
2. Do not put your finger into the grinder (burr set) while it’s grinding/turning on.
3. Other than the detachable parts, please do not disassemble or repair other parts by yourself.
4. This machine is equipped with precision parts and electrical components. It is strictly forbidden to wash with water.
5. Do not use solvents other than alcohol for cleaning.
6. For long-term storage, it is recommended to clean up the residue and store it in a dry environment.
7. It must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
8. This appliance is not intended for use by persons (including children) with reduced physical,sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

9. Children should be supervised to ensure that they do not play with the appliance.
10. This appliance is intended to be used in household and similar applications such as:
    - staff kitchen areas in shops, offices and other working environments;
    - farm houses;
    - by clients in hotels, motels and other residential type environments;
    - bed and breakfast type environments.

Product Components

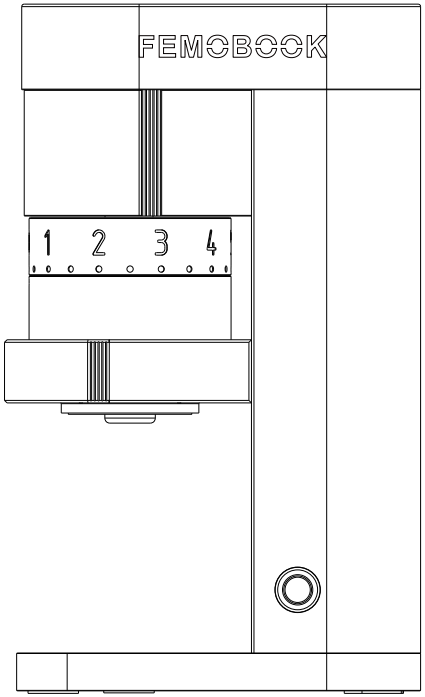

Grinder Body*1



Bean Funnel*1



Grind Chute*1



Grind Cup*1



Power Cord*1



Power Supply Unit*1



Brush*1

Air blower*1

Instruction Manual*1

Instructions for use

1. Before grinding
   Plug in and install the bean funnel, grind chute and grind cup.

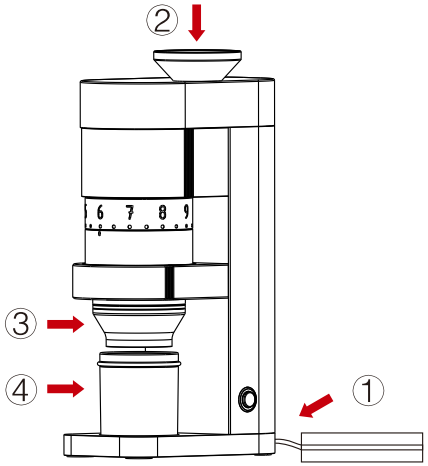

2. Adjust the dial ring
   Turn the adjustment dial ring counter-clockwise to align the #0 with the scale mark as in the image below. Turn clockwise 75-95 clicks for espresso. Turn clockwise 170-190 clicks for pour-over.

* When the scale is set, press the power button and then put the beans in.

* With 10 numbers and 100 clicks per round, the burr moves by 8 microns each click.

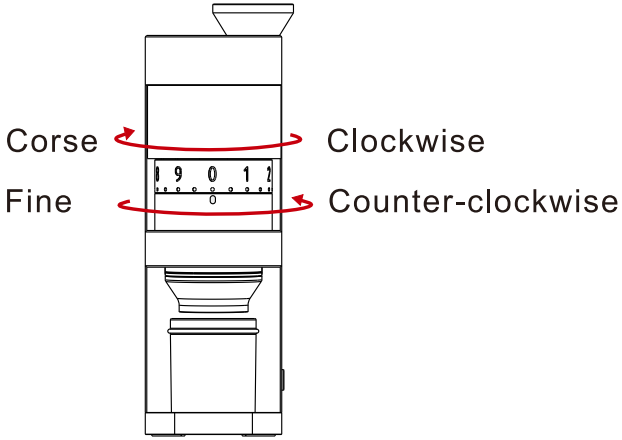

Daily Maintenance

1. Disassemble the components: slide unit/grind chute/ grind cup.

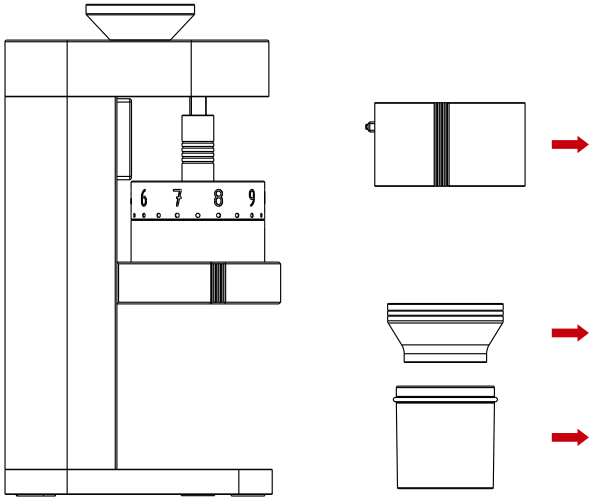

2. Clean with the air blower and a dry brush.

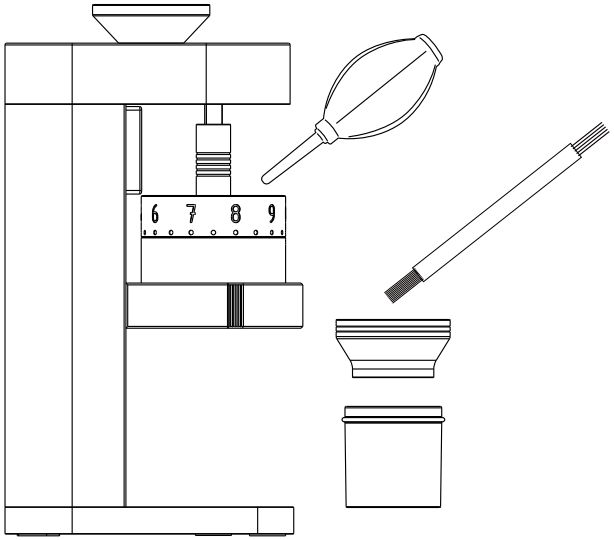

Disassembly, Assembly, and Maintenance

1. Remove the front bracket of the burr set.

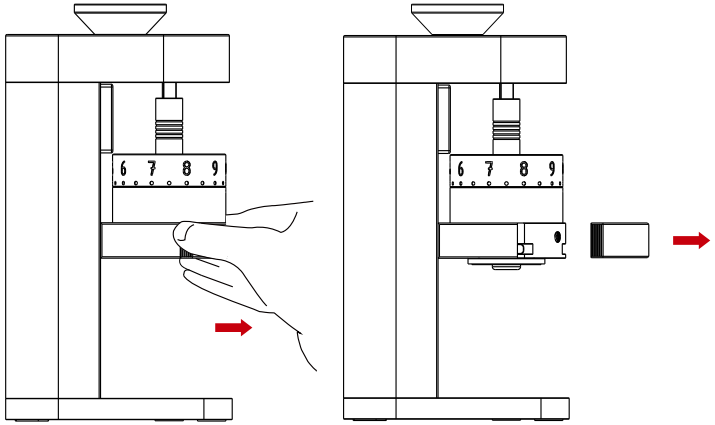

2. Remove the whole burr set while lifting the sleeve and clean it with the air blower.

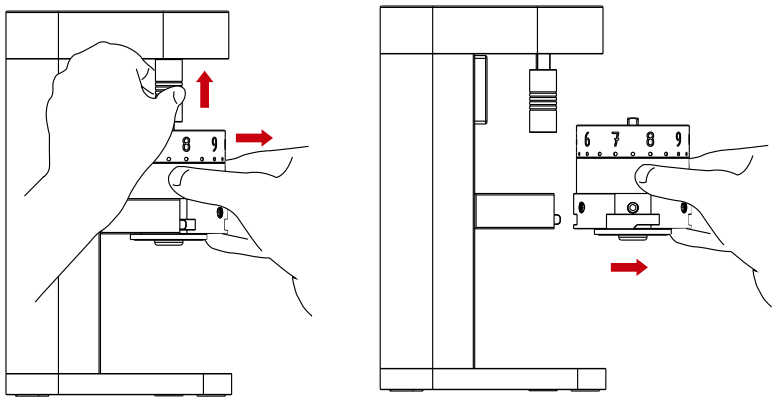



3. The zero point of the burr set is facing outward, and the grooves of the burr set and the back bracket are aligned. While lifting the sleeve, put the burr set back into the machine body, and check that the sleeve is inserted into the central shaft.

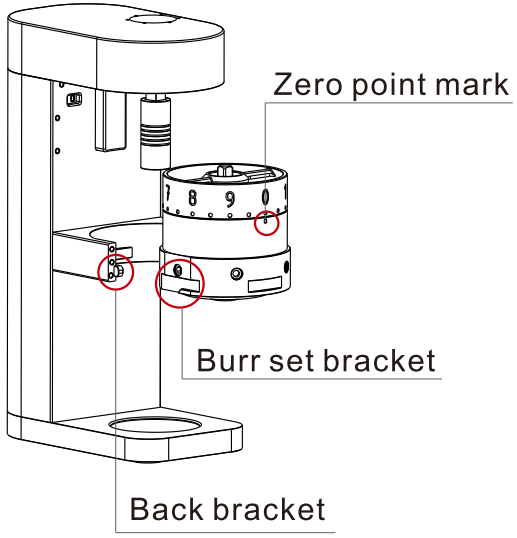

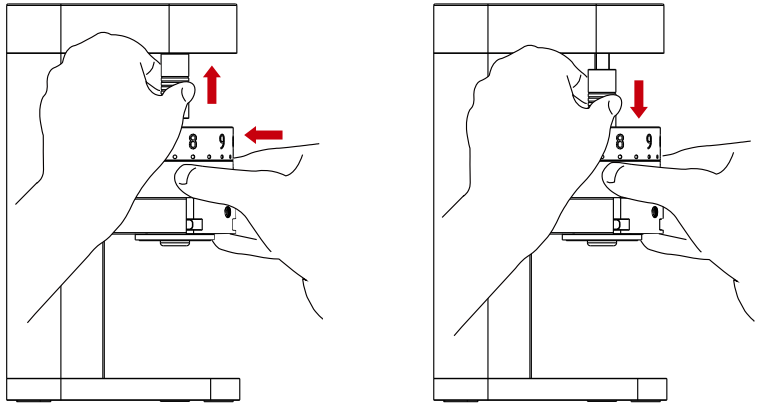

* If the adjustment ring must be reset to zero, please follow the steps below, and do not disassemble the rest of the parts.

1. Turn the adjustment ring counter-clockwise to the end. If the scale mark does not align with #0, pull out the adjustment ring.





2. The zero reset is completed if #0 is aligned with the zero point and the adjustment ring is clicked on.





Guarantee

Dear customer,
Thank you for your support for the product, which is guaranteed for one year from the purchase date. It is only valid if there are quality problems under normal use according to the instruction manual. If the damage is caused by abnormal use or human force majeure, the warranty will not be provided, and the corresponding fee will be charged according to the situation.

Purchase Date:

Maintenance Date	Cause of Issue	Handling Approach

Contact us
Please get in touch with us at
hello@femobook.com if you have any questions.

產品參數

型號	A68	容量	40 ± 5g
净尺寸	160*106*295mm	主機净重	5.7 ± 0.2kg
電機規格	有刷直流電機	額定轉速	60 ± 12%RPM

電源供應器規格

消耗功率：192W

電源供應器輸入：100–240V ~ 50/60Hz 3.5A

電源供應器輸出：24V ⎓ 8A

本產品僅能使用供應器型號：DZ252ADL2400800G

⚠ 注意事項

1. 請勿在15小格以內啓動，避免內外刀互磨。
2. 啓動後禁止將手指放到機身（刀座）任何位置。
3. 除說明可拆零件外，其它零件請勿自行拆機或維修。
4. 本機裝配精密零件及電器件，嚴禁水洗。
5. 請勿使用酒精以外溶劑進行清潔。
6. 長期存放建議清理殘留物後儲存於乾燥環境中。
7. 本電器不預期供生理、感知、心智能力、經驗或知識不足之使用者（包含孩童）使用，除非在對其負有安全責任的人員之監護或指導下安全使用。
8. 孩童應受監護，以確保孩童不嬉玩電器。
9. 請勿研磨除咖啡豆以外的物品。
10. 須依電器標示之安全超低電壓供電。
11. 本產品可使用於家用、商店/辦公室及其他工作環境之員工廚房區域、農莊、旅館/汽車旅館及其他居住型環境、民宿型態之環境。

產品清單

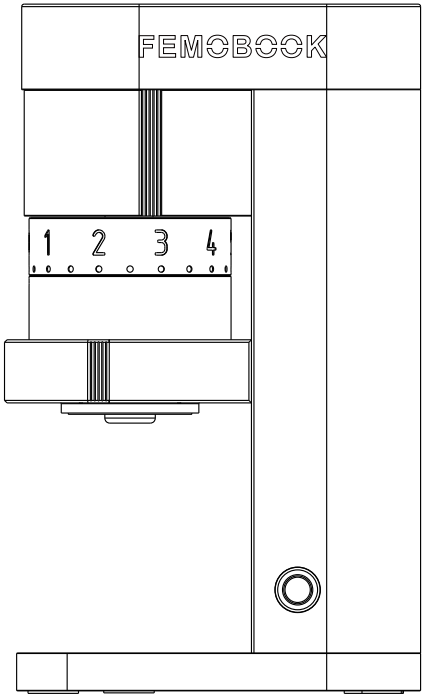

主機*1



入豆環*1



集粉器*1



粉杯*1



電源線*1



電源供應器*1

毛刷*1



吹球*1

說明書*1

使用說明

1. 準備工作

   插上電源，裝好入豆環/集粉器/粉杯。

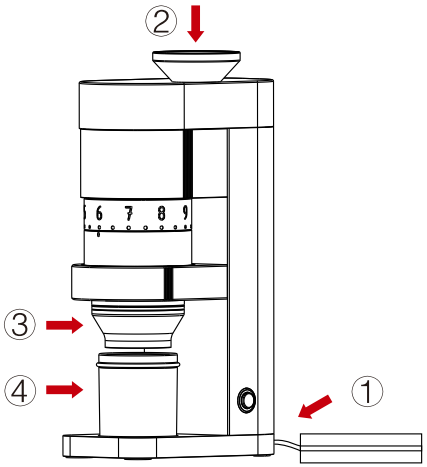

2. 刻度調節

   如下圖，調節環逆時針轉到有阻力，參考數字0爲歸零點，順時針轉調節環，義式轉75–95格，手沖轉170–190格。

* 刻度調好建議先按下電源開機，再放豆研磨。

* 一圈100格調整，每格約0.008mm極細微調。

* 操作時間因豆種和烘焙程度、粗細都略有不同，故研磨時間沒有定値。

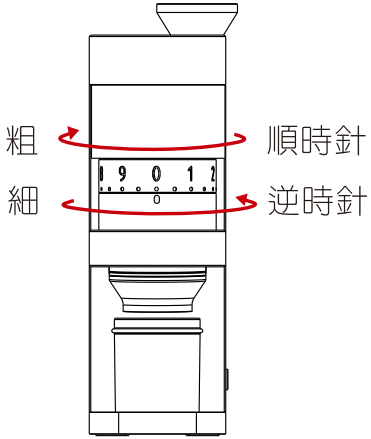

日常輕度清潔

1. 取下：滑豆槽/集粉器/粉杯。

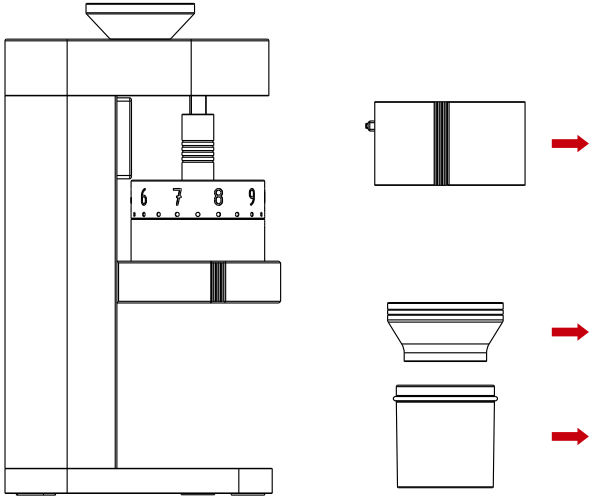

2. 使用隨附吹球、毛刷分別清潔即可。

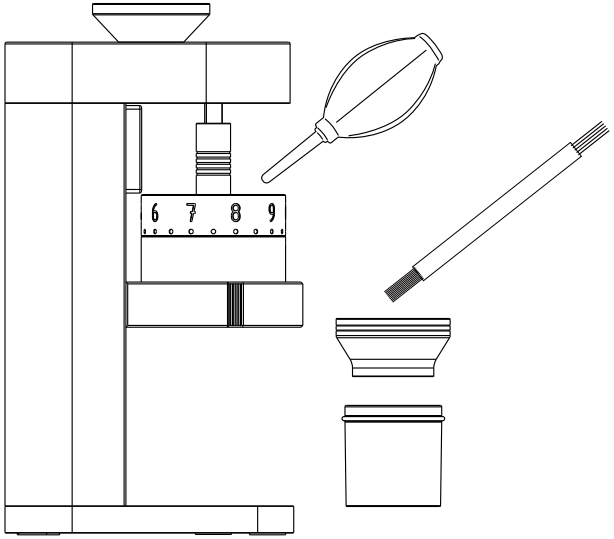

拆裝與保養

1. 取下刀座前支架。

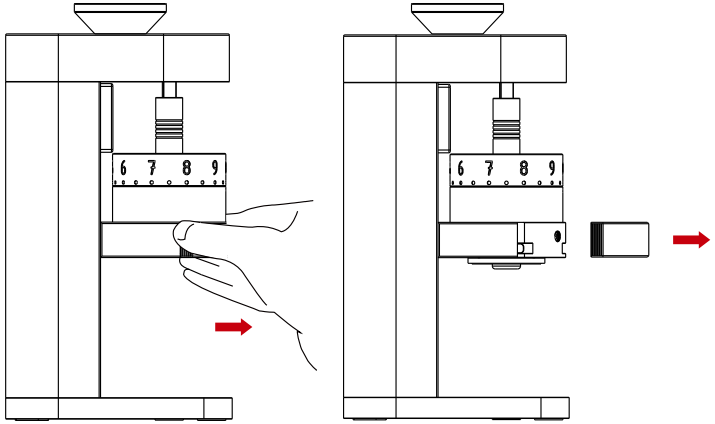

2. 提起套筒同時，取出刀座，使用毛刷、吹球清潔。

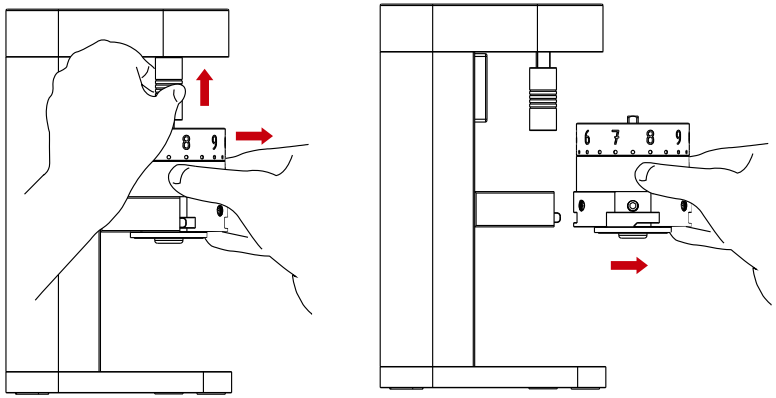



3. 刀座歸零點朝外，刀座和後支架槽位對準，提起套筒同時推入機身，檢查套筒確實套入中軸。

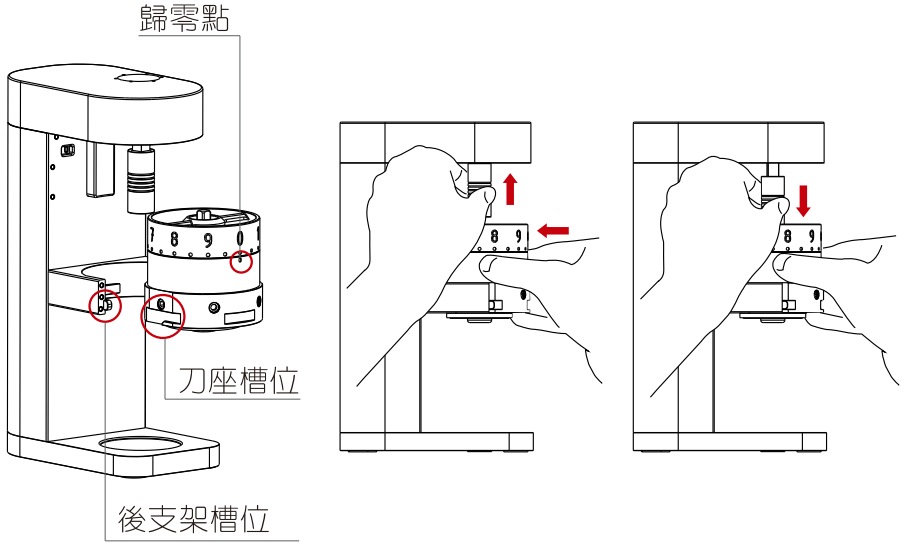

* 調環如需歸零可參考下列步驟，其餘零件請勿拆裝。

1. 調節環逆時針轉到底刻度如未指向0，拔下調環。

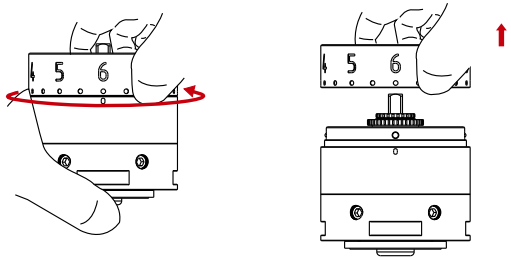

2. 0對準歸零點卡入即歸零完成。

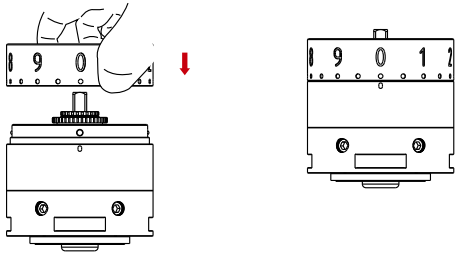

保固卡

尊敬的客戶:
自購買日起享有一年保固。
僅限按照說明書正常使用下，產品出現故障異常問題，即提供保固服務。
註：刀盤屬於消耗品，不在保固範圍內。

以下任一情況導致產品故障或損傷，將無法提供保固服務：

1. 未按照說明書操作使用而導致的產品故障。
2. 不可抗力導致的產品故障。
3. 擅自拆開主機或刀座等零件導致的產品故障。
4. 擅自改裝或使用非本公司的配件而導致的產品故障。

購買日期：

維修時間	故障原因	處理方法

聯絡資訊
有任何問題歡迎來信hello@femobook.com
或加入Line官方帳號@femobook與我們聯繫

設備名稱：電動磨豆機　　型號（型式）：A68

單元	限用物質及其化學符號					
	鉛 （Pb）	汞 （Hg）	鎘 （Cd）	六價鉻 （Cr^{+6}）	多溴聯苯 （PBB）	多溴二苯醚 （PBDE）
電源線	○	○	○	○	○	○
開關	○	○	○	○	○	○
外殼	○	○	○	○	○	○
馬達	○	○	○	○	○	○
金屬部件（螺絲、刀具...等）	○	○	○	○	○	○

備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。
備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。
備考3. “—”係指該項限用物質爲排除項目。

製品仕様

型番	**A68**	容量	**40±5g**
本体サイズ	**160*106*295mm**	本体重量	**5.7±0.2kg**
電源装置	**ブラシ付きDCモータ**	回転数	**60±12%RPM**

ACアダプター仕様

電源：192W
電圧：100-240V~50/60Hz 3.5A
消費電力：24V ⎓ 8A

本製品において下記のACアダプターのみに適用：DZ252ADL2400800G

⚠ ご注意

1. 内刃と外刃を傷つけないように、調整ダイヤルの設定が15段階以下の場合作動しないでください。
2. 動作中の部品（特にミル刃）には触らないでください。
3. 取り外し可能な部品を除いて、他の部品の分解・修理は絶対にしないでください。
4. 本製品は電気製品のため、絶対に水洗いしないでください。
5. お手入れの際、アルコール以外の溶剤を使用しないでください。
6. 長期保管の場合は、残留物を除去し、乾燥した環境で保管することをお勧めします。
7. 本製品は、生理的、感覚的な能力が減少している方、あるいは製品の操作に不慣れ、経験または知識が不十分な方(お子様を含む)が使用する場合は、必ず使用上の安全を確認できる方が付き添い、使用監督、指示を行いながら使用してください。
9. コーヒー豆以外でのご使用はお控えください。
10.本製品に記載されている定格電圧以外で使用しないでください。
11.本製品は家庭用、営業場所/オフィスの給湯室、または農場、ホテル/モーテル、民宿などの環境で使用できます。

商品内容

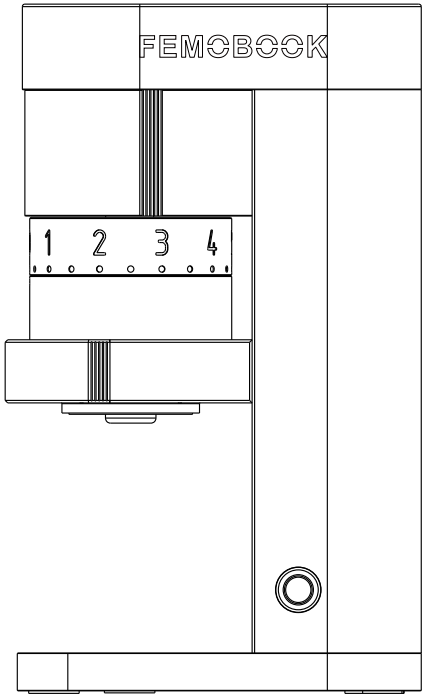

本体*1



豆ファネル*1



粉受けファネル*1



粉受け*1



電源コード*1



Acアダプター*1

ブラシ*1

エアブロアー*1

取扱説明書*1

ご使用方法

1.ご使用の前に
ACアダプターを本体に接続し、豆ファネル/粉受けファネル/粉受けをセットしてください。

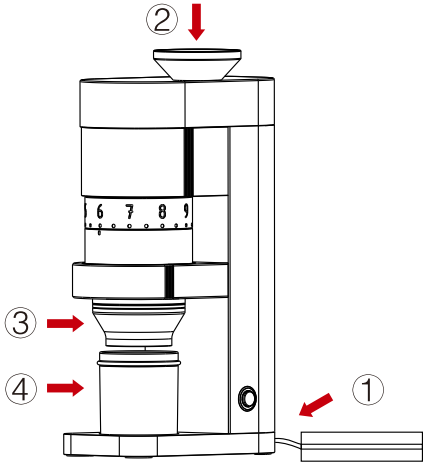

2.メッシュの調整
下図のように、調整ダイヤルを反時計回りに回し、目印が数字の0のところまで来ます。そしてお好みに応じて調整ダイヤルを時計回りに回してください。エスプレッソは75ー95段階、ドリップは170-190段階が目安です。

＊ 電源スイッチを入れてから、豆をお入れください。
＊ 一周あたり100段階があります、1段階が約0.008mmの微調整ができます。
＊ 所要時間は豆の種類、焙煎度合い、メッシュによって差はあります。

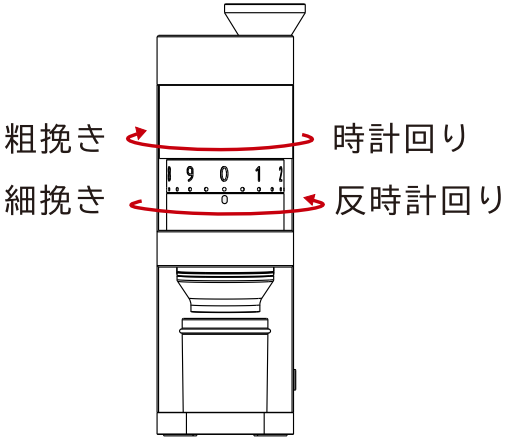

日常のお手入れ

1.豆ファネル/粉受けファネル/粉受けを取り外す

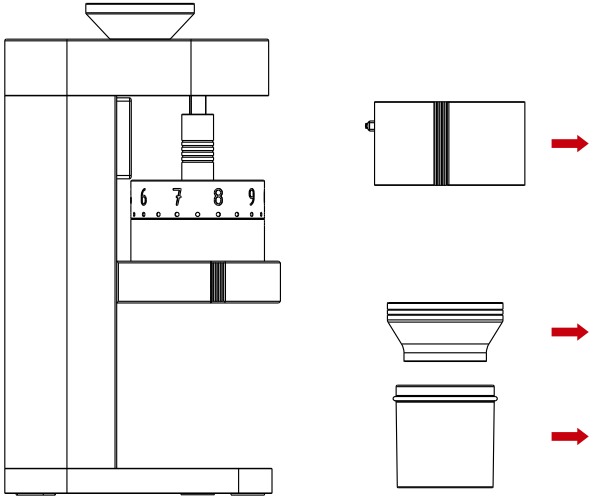

2.付属のブラシ、エアブロアーで掃除してください。

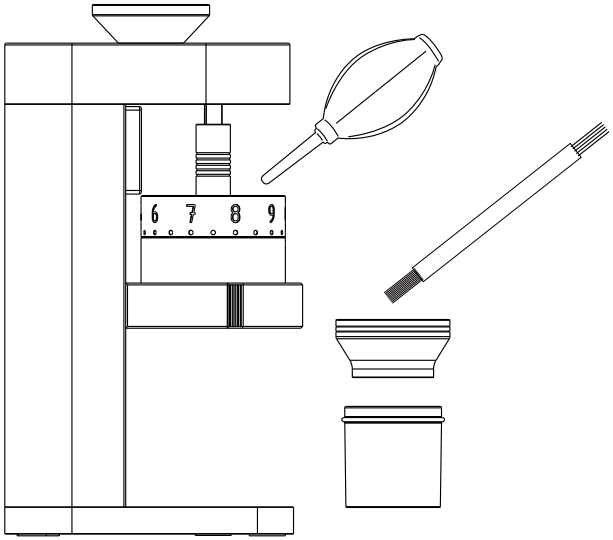

念入りなお手入れ

1. ミル刃カバーを取り外す

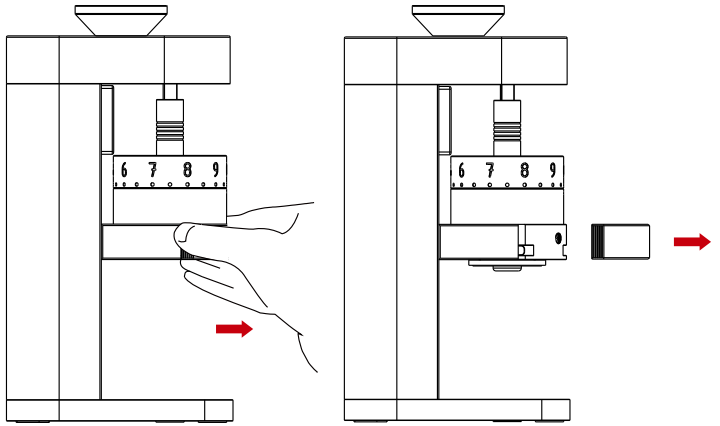

2. スリーブを引き上げながら、ミル刃を取り外す。付属のブラシ、エアブロアーで掃除してください。

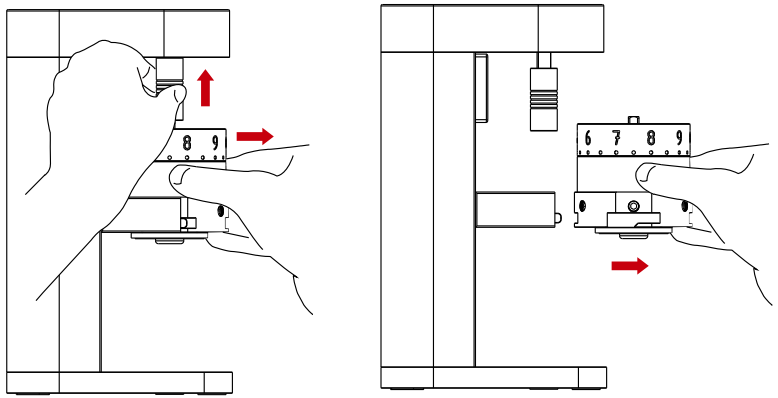



3. 調整ダイヤルにある確認用目印が正面に来るように、スリーブを引き上げながらミル刃ブラケットをブラケットサポートに取り付ける。スリーブがちゃんと回転軸に嵌め込んでいないかをご確認ください。

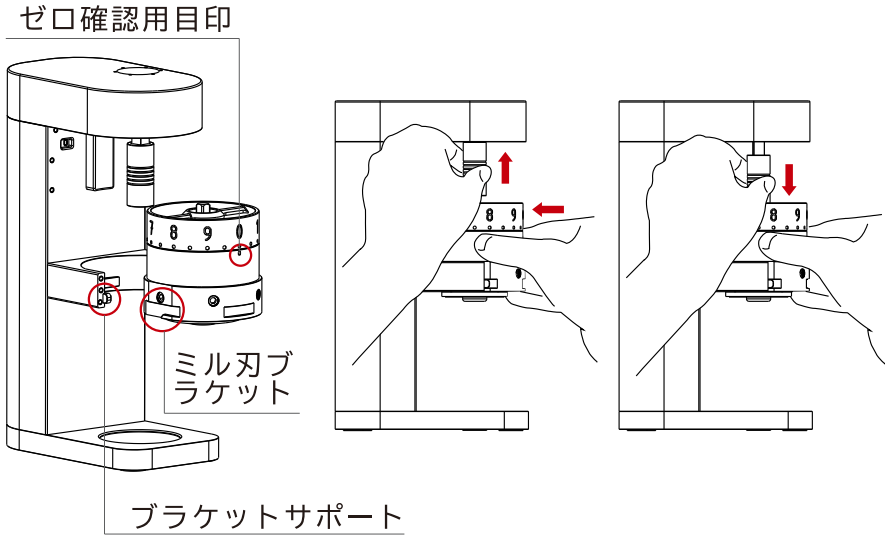

* 調整ダイヤルをゼロに戻す方法は下図をご参考ください。それ以外の部品は取り外さないでください。

1. 調整ダイヤルを反時計回りに止まるまでに回して、数字の0が目印のところに来ていない場合、目盛りを取り外す。

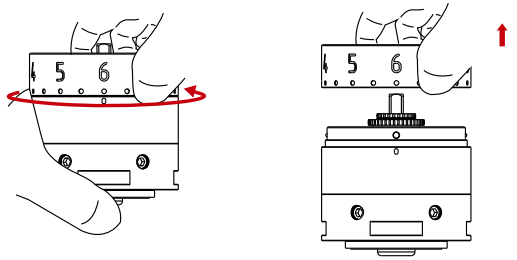

2. 数字の0が目印に合わせるよう目盛りを取り付ける。

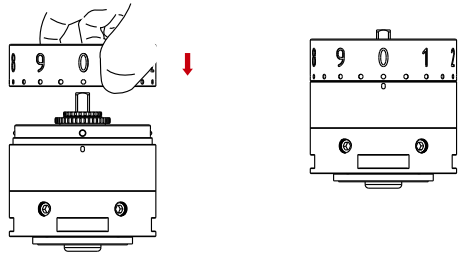

保証書

この度はお買い上げいただき、誠にありがとうございます。保証期間はお買い上げ日より1年間です。指示に従った正常な使用状態で故障した場合、アフターサービスを提供します。ご注意：ミル刃は消耗品であり、保証対象外です。

次のいずれかの状況が発生した場合、保証対象外となります。

1. 指示に従って本製品を操作および使用しない場合。
2. 不可抗力による製品の故障の場合。
3. 本体、ミル刃等の部品を無断で分解による製品の故障。
4. 無断で改造または専用の付属品以外を使用したことによる故障及び損傷。

購入日：

日付	修理内容	処置方法

お問い合わせ
商品に関するご質問はメールまで
hello@femobook.com
或いはライン @femobookまでお気軽にお問い合わせください。

FEMOBOOK.COM