140mm

180mm

ALLPOWERS

Portable Power Station

Model R3500

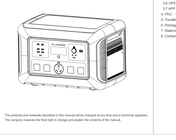

The products and materials described in this manual will be changed at any time due to technical upgrades. The company reserves the final right to change and explain the contents of the manual.

CONTENTS

1. Safety Instructions - [1]
2. Specifications - [2]
3. User Guide - [3]
3.1 Product appearance introduction - [3]
3.2 Introduction of Display (Touch) Icons - [3]
3.3 AC charging - [3]
3.4 Solar charging - [3]
3.5 Smart Extra Battery - [3]
3.6 UPS function (uninterruptible power supply) - [3]
4. APP operation guide - [4]
5. Troubleshooting - [4]
6. Troubleshooting - [4]
7. Package Contents - [4]
7. Statement - [5]
8. Contact us - [5]

1. Safety Instructions

[1]

1. Please read the instructions before use.
2. Be sure to operate the product in a dry and well-ventilated place, and if it gets wet, dry it thoroughly before use.
3. To reduce the risk of injury, close attention is required when using this product near children.
4. Do not alter your life safety or property, otherwise it may cause electric shock or fire or other dangers.
5. Do not use this product in harsh environments such as high temperatures, otherwise it may cause electric shock, fire or other dangers.
6. During charging or using the product, do not block the product vents, otherwise it may cause permanent damage to the product.
7. Please do not expose the product to rain and snow.
8. It is forbidden to use the product in the environment of strong static electricity or strong magnetic field, otherwise it may cause the electronic components of the product to be damaged.
9. Do not disassemble the product yourself, otherwise it will void the warranty and the manufacturer will not be responsible for the damage caused by the third-party maintenance.
10. Do not disassemble the product yourself. If the product needs service or maintenance, please find a qualified repairer.
11. Improper use, falling or excessive force may cause damage to the product.
12. When disposing of used batteries, please separate batteries of different electrochemical systems.
13. In case of fire, do not use the extinguisher can be used or immersed in water.
14. Be sure to keep the product away from fire and heat sources.

2. Specifications

[2]

General Information

Product Dimensions: 14.2*10.6*9inc
Net weight:Approximately 27.5(lbs)
Battery capacity: 3500Wh (90~100%)
Wi-Fi: Support
Bluetooth: Support
UPS: Uninterruptible power supply2 - Support

Input Ports

AC Input: 120~132V/15A, 1800W Max (120~240V~10A, 2000W Max)
Solar Input: 12V~150V~40A, 2000W Max

Output Ports

AC Output: 120V~132V 3200W Max (Surged 6000W) 220~240V 3000W Max (Surged 6000W)
USB-A*2: 5V~2.4A, 12W Max
USB-C*2: 5V~5A, 9V~3A, 12V~3A, 20V Max
Car port(DC5521): 12V~10A, 120W Max
Car port(DC8020):Max 12V~10A,120W Max

Battery Info

Battery type: LiFP (Lithium Iron Phosphate
Battery Protection: High temperature protection, Low temperature protection, Over discharge protection, Over charge protection, Overload protection, Short circuit protection, Over current protection

Environmental Operating Temperature

Charge Temperature: 0°C~40°C(32°~104°F)
Discharge Temperature: -20°C~40°C(-4°F~104°F)recommend 20~30°C
Operating Humidity range: 20~90%

Certification

CE FC RoHS IC UL

3.User guide

[3]

3.1 Product appearance introduction

3.2 Introduction of Display (Touch) Icons

Number	Function Introduce	Number	Function Introduce
1	Percentage of charge	10	High temperature mark
2	The number of input Power	11	Battery pack margin icon
3	The number of output Power	12	AC indicates the icon
4	AC output ports number	13	AC indicates the icon
5	Car port output ports number	14	The UPS indicates the ID
6	Power saving mode icon	15	Fan operating ID
7	Fast charge mode icon	16	Car charge output icon
8	Mute mode icon	17	Bluetooth connection icon
9	Output overload icon	18	WIFI connection icon

3.3 AC charging

The AC power of this product adopts AF POWER Fast charging technology, and the charging power can be adjusted through the AC charging mode and Ultra Standard/Ultra Mode. The maximum input of Fast Mode can reach 120-132V/12-15A 1200-1800 Watt, the maximum input of charging in Standard Mode can reach 120-132V/8-10A 1000-1300 Watt, the maximum input of Ultra Mode 120-132V/5-7A 600-800 Watt. The default input power of product is Ultra charging in Ultra Mode, and the charging power can be adjusted through the APP or the touch screen of the product.

When the AC input current exceeds the allowed range, the product will protect itself, and the overload protection function will automatically pop up. After confirming that the product is not faulty, press the AC control button, charging can be resumed. When the AC input current is too high, it may cause the power socket to overheat and even cause a fire. It is recommended that the product is used in a well-ventilated place. If the product feels hot, please pay attention.

Please use the original standard AC charging cable of the product, ALLPOWERS will not bear any responsibility for any damage caused by using non-standard charging cables. When the product is connected directly to the wall power socket, it is also recommended to pay attention to the power socket temperature, at the same time, pay attention to whether the household fire can last for 24 hours. If the above conditions are met, please switch to standard mode or turn mode for charging.

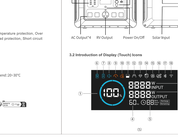

3.4 Solar charging

Users can charge the product by connecting solar panels in series as shown in the figure.

When using this product for solar panel charging, please connect according to the user manual specifications.

Before connecting the solar panel, please confirm that the output voltage specification of the solar panel is within 150V, the maximum current is 40A, and the maximum charging power is within 2000W.

3.5 Smart Extra Battery

This R3500 power station can use one or two extra batteries for expansion connection, which can increase the capacity of the power station.

When using this product for extra battery connection, please connect it according to the specifications of the user manual.

Please pay attention to the power status and battery connection, and then connect other components. Please note that if the connection status, the rated maximum output power does not change, the extra battery will not work properly.

Please pay the connection cable protection well, and avoid damage to the cable, which may cause electric shock or other dangers. Please refer to the specifications shown in the figure below.

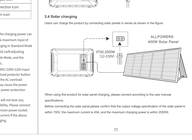

3.6 UPS function (uninterruptible power supply)

This product supports UPS (Uninterruptible Power Supply) function. You connect the power grid and the product to the AC input port, and the product will be in the state of pass-through charging. When the power grid is cut off, the product will automatically switch to the power output state, and the battery will be used to supply power to the electrical appliances connected to the product. When the power grid is suddenly cut off, the product will automatically switch to the battery power output state, and the switching time is less than 20 milliseconds. Please ensure that the electrical appliances connected to the product do not exceed the rated output power of the product. If the power grid fails to operate normally or data is lost if the operation is not in accordance with the instructions, or improper use, the manufacturer will not bear any responsibility.

Note: When connecting to the power grid, you need to turn on the AC output first, and make sure that the UPS function turn to battery power off and keep off in the APP operation.

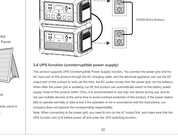

4. APP

[4]

3.7 Bluetooth connection power station

① Confirm that the power station and the mobile phone Bluetooth are turned on;
② Open the APP and antomatically search for "ALLPOWERS";
③ Click the R icon in the Bluetooth section or the "+" in the upper right corner of the Bluetooth connection interface;
④ Select the corresponding power station and click to connect;
⑤ Enter the corresponding Bluetooth password (the default password is 123456) and click "Confirm" to complete the Bluetooth connection.

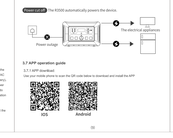

3.7 APP connection

①Click the pen in the power station, and slide the ALLPOWERS name to pop up the WIFI connection page.The way to turn on WIFI: See To FAQ 12(P)
②Click the R icon in the Bluetooth section or the "+" in the upper right corner of the Bluetooth connection interface to enter the Bluetooth connection page.
③ After the binding is successful, the name of the power station and whether the power station is online will be displayed as shown in the figure below.

3.7 Mobile APP Operation Instructions

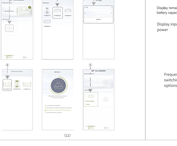

①Charging power working mode setting: can be set to Fast Mode/Standard Mode/Ultra Mode.
②Operation mode setting: set to power saving mode, you can set the AC or DC off time to 1 hour or 2 hours , 4 hours, 6 hours, the power station working in this mode,AC or DC will be turned off after the set time.

5. Troubleshooting

[4]

The fault code is displayed on the product. If, after the display screen, and the related fault type and solution are displayed as shown below.

Indicator	Problem	Solution
E1 01	USB-A overcurrent protection	Remove abnormal load and manually turn on DC again
E2 01	USB-C overcurrent protection	Remove abnormal load and manually turn on DC again
E3 01	USB-C overcurrent protection	Remove abnormal load and manually turn on DC again
E4 01	USB-C overcurrent protection	Remove abnormal load and manually turn on DC again
E7 01	USB-C2 overcurrent protection	Remove abnormal load and manually turn on DC again
E8 04	High temperature protection	Stop using the product after an hour's after cooling down, and manually turn on the AC or DC switch to restart the product
E9 04	Low temperature protection	Place the product in a place with a suitable temperature recovery
E0 04	Input over-voltage protection	Please remove the load, and the battery will automatically recover after the temperature recovery
E0 05	The temperature in the high temperature protection state is not in the appropriate range.	Please ensure the ambient temperature of the product is in the appropriate range.
E0 05	Input over-current protection	Please ensure that the equipment that exceeds the rated power is unplugged
E0 05	Low-voltage protection	Remove the abnormal load and manually turn on the AC or DC switch
E0 05	The temperature of the inverter module is too high, and the fan is unstable.	Please confirm whether the air inlet and outlet of the product are blocked, and ensure that the fan is unblocked, and then manually start the machine.
Other faults not listed in the fault number	Please contact customer service for details.	

6. Package Contents

[4]

ALLPOWERS R3500	AC Charging cable	MC4 to XT60 charging cable	User Manual and Warranty Card

7. Statement

[5]

Before using the product, please read the user manual of the product to ensure correct use and full understanding. If you do not operate the product correctly, you could cause serious injury to yourself and others or result in product damage and property loss. Please keep your manual for future reference. If you lose the manual, please contact the manufacturer to obtain a copy of the manual. The user guarantees that the product is used safely. The manufacturer is not responsible for the use and loss of the product caused by the user's negligence or violation of the instructions. The manufacturer is not responsible for other losses caused by the use of the product. If the product is used in accordance with laws and regulations, the company reserves the right of final interpretation of this document and all related documents of this product.

The product and its accessories are subject to the final interpretation and modification by ALLPOWERS official website for the latest product information.

This product is not intended for use in applications that require extremely high reliability and security, such as medical equipment, aviation equipment, nuclear facilities, critical infrastructure, and other occupational and medical equipment. Please make a judgment after fully understanding the suitability of this product and this device by yourself. If this product is used in the above equipment or applications, the manufacturer does not guarantee its suitability, fitness, or malfunction of the product and does not bear any responsibility.

8. CONTACT US

[5]

If you have any questions or need assistance with our products and services, please contact: support@allpowers.com
Our official website: www.allpowers.com

ALLPOWERS

ポータブル電源

型番:R3500

製品・マニュアルに記載されている内容は、技術の進歩により変更されることがあります。
ユーザーの安全と財産を守るため、マニュアルの内容を変更することがあります。
本書の内容を理解した上で使用し、取扱説明書のすべてを理解することを推奨します。

目 录

[1]

1. 安全ご注意 - [1]
2. 仕様説明 - [2]
3. 使用説明 - [3]
3.1 製品外観説明 - [3]
3.2 充電方法 - [3]
3.3 太陽光充電 - [3]
3.4 スマートエクストラバッテリー - [3]
3.5 電源装置 - [3]
3.6 UPS（無停電電源装置）機能について - [3]
3.7 アプリ操作 - [3]
4. アプリ操作説明 - [4]
5. 故障から修復方法 - [4]
6. 同梱品一覧 - [4]
7. 免責事項 - [5]
8. お問い合わせ - [5]

1. 安全ご注意

[1]

本製品を使用する前に、説明書を熟読し、内容を理解してください。
1.お子様の安全確保のため、子供の近くで使用する際は、特に注意が必要です。
2.内容物を理解せずに、本製品を使用しないでください。
3.本製品を改造しないでください。改造した場合、感電や火災などの危険性があります。
4.高温環境下、または強い静電気や強い磁場のある環境下では、本製品を使用しないでください。
5.本製品を分解しないでください。分解された場合、保証対象外となり、メーカーは一切の責任を負いません。
6.分解・修理が必要な場合は、専門の修理業者にご依頼ください。
7.本製品を雨や雪にさらしないでください。
8.使用後、または過度な力が加わった場合、本製品に損傷を与えるおそれがあります。
9.使用済みバッテリーを廃棄する場合は、バッテリーの種類ごとに分別して廃棄してください。
10.万一、火災が発生した場合、消火器を使用しないでください。
11.本製品を常に火から遠ざけてください。

2. 仕様説明

[2]

一般情報

製品サイズ:14.2*10.6*9inc
正味重量:Approximately 27.5(lbs)
バッテリー容量: 3500Wh (90~100%)
Wi-Fi機能: 対応
Bluetooth: 対応
UPS機能:(無停電電源装置）: 対応

入力ポート

AC入力: 120~132V/15A, 1800W Max (120~240V~10A, 2000W Max)
PV入力: 12V~150V~40A, 最大2000W

出力ポート

AC出力: 120V/132V 3200W Max (サージ6000W) 220~240V 3000W Max (サージ6000W)
USB-A出力:5V~2.4A, 12W Max
USB-C出力:5V~5A, 9V~3A, 12V~3A, 20V Max, 合計最大24W
シガーソケット(DC5521)アクセサリ出力: 12V~10A, 合計最大120W
シガーソケット(DC8020)アクセサリ出力: 12V~10A, 合計最大120W

バッテリースペック

バッテリー: リン酸鉄リチウムイオン(LiFePO4)
保護機能: 高温保護, 低温保護, 過電圧保護, 放電保護, 過負荷保護, 短絡保護, 過電流保護

動作温度

充電温度範囲: 0°C~40°C
放電温度範囲: -20°C~40°C
推奨温度範囲: 20°C~40°C (68°F~104°F)
推奨充電温度範囲: 20°C~30°C
相対湿度範囲: 20~90%

認証

CE FC RoHS IC UL

3. 使用説明

[3]

3.1 製品外観説明

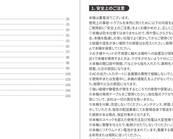

3.2 画面アイコン説明部分

番号	機能紹介	番号	機能紹介
1	バッテリー容量	10	高温警告マーク
2	入力電力	11	バッテリー残量
3	出力電力	12	DC出力マーク
4	節電モード	13	AC出力マーク
5	出力ポート数(電源接続数)+シガーソケット数	14	UPS電源マーク
6	三つ充電モード	15	ファン稼働マーク
7	静音モード	16	シガーソケット出力マーク
8	静音充電モード	17	Bluetoothマーク
9	過負荷警告マーク	18	WiFi接続マーク

3.3 AC充電

AC充電は、AF POWERの高速充電技術を採用しており、最高充電モードの最高電力は、最大120-132V/12-15A 1200-1800ワットに達します。標準充電モードの最高電力は120-132V/8-10A 1000-1300ワットに達します。超高速充電モードの最高電力は120-132V/5-7A 600-800ワットです。本製品のデフォルト充電は超高速充電モードで、充電電力は本製品のアプリまたはタッチスクリーンを通じて調整することができます。

AC入力電流が許容範囲を超えると、本製品は自動的に保護されます。過負荷保護機能が自動的にポップアップします。確認されたら、AC電源ボタンをもう一度押すと、充電を再開することができます。AC入力電流が高すぎると、電源コンセントが過熱し、火災を引き起こすおそれがあります。本製品を通常の環境で使用することを推奨します。本製品が発熱している場合、注意を払ってください。

本製品の専用純正AC充電ケーブルを使用してください。ALLPOWERSは、非純正充電ケーブルを使用することによって生じる損害に対して、一切の責任を負わません。本製品をコンセントに直接接続する場合、電源コンセントの温度に注意することも推奨します。上記の条件を満たす場合、または通常モードまたはターンモードで充電してください。

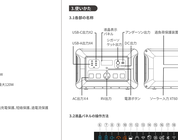

3.4 ソーラー充電

以下の接続ポイントにソーラーパネルを直列接続して、充電を実現できます。

ALLPOWERSソーラーパネルを使用し、本製品に電力を供給します。誤使用や過負荷による損傷を防ぐため、接続する前に、ソーラーパネルの出力電圧が150V以内、最大電流が40A以内、最大充電出力が2000Wであることを確認してください。

3.5 増設装置

R3500は、増設バッテリーを1台または2台接続することで、バッテリーの容量を増やすことができます。

増設バッテリーを使用する場合は、ユーザーマニュアルの仕様に従って接続してください。

接続状態と最大出力を確認した後、接続ケーブルを配置してください。

ケーブルの保護を良好に行い、ケーブルの損傷を防ぐ。感電や火災などの危険を防ぐため、以下の仕様を参照してください。

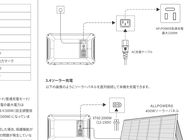

3.6 UPS機能（無停電電源装置）

本製品はUPS機能を搭載しています。ユーザーはAC電源ケーブルを接続して電源コンセントを接続のAC入力ポートに接続すると、充電状態（パススルー充電）になります。電源が切れると、本製品は自動的に電力供給状態に切り替わり、接続された家電製品に電力を供給します。電源が突然切れると、本製品は自動的に電力供給状態に切り替わり、切り替え時間は20ミリ秒未満です。接続された家電製品の定格出力を超えないようにしてください。電源が正常に動作しない場合、または説明書に従って操作しない場合、または不適切な使用、落下、または過度の力が加わった場合、製造業者は一切の責任を負わません。

ご注意：電源コンセントにACを接続する前に、ACを先にオンにしてください。また、UPS機能をバッテリー電源オフ状態にしてください。

Bluetooth機能をオンにすると、ウェブ上で「ALLPOWERS」という名前のBluetooth信号を検索します。ペアリングが完了すると、UPSの状態、残量、および接続されている家電製品の情報が表示されます。

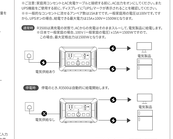

3.7 アプリ操作

①アプリのダウンロード方法
下記のQRコードをスキャンしてAPPをダウンロードしてください。
ALLPOWERSアプリをインストールしてください。

Bluetooth
Bluetooth接続インターフェイスの右上にある「+」をクリックしてBluetooth接続ページを開きます。
Bluetooth接続ページに入ったら、「ALLPOWERS」という名前のBluetooth信号を検索してください。
ペアリングが完了すると、UPSの状態、残量、および接続されている家電製品の情報が表示されます。
ECO モード
ECO モードは、ECO モードをオンにすると、ECO モードがオンになります。
ECO モードをオフにすると、ECO モードがオフになります。
接続されている家電製品は、ECO モードの影響を受けません。
ECO モードは、ECO モードがオフになっている場合、ECO モードがオンになります。

3.7 アプリ操作

①アプリの使用

②アプリの使用

③アプリの使用

4. アプリ操作説明

[4]

3.7 アプリ操作

①アプリのダウンロード方法
下記のQRコードをスキャンしてAPPをダウンロードしてください。
ALLPOWERSアプリをインストールしてください。

②現在の電源状態を確認する。

5. 故障から修復方法

[4]

故障コード	問題説明	解決方法
E1 01	USB-A過電流保護	USB-A負荷を切り離し、再びDCをオンにする
E2 01	USB-C過電流保護	USB-C負荷を切り離し、再びDCをオンにする
E3 01	USB-C過電流保護	USB-C負荷を切り離し、再びDCをオンにする
E7 01	USB-C2過電流保護	USB-C負荷を切り離し、再びDCをオンにする
E8 04	高温保護	動作を停止し1時間冷却後、再びACまたはDCをオンにして再起動してください。
E9 04	低温保護	適切な温度の場所に製品を設置してください。
E0 04	入力過電圧保護	負荷を取り除いてください。温度が回復すると、バッテリーは自動的に復旧します。
E0 05	高温保護状態の温度が適切な範囲外です。	製品の周囲温度が適切な範囲内であることを確認してください。
E0 05	入力過電流保護	定格出力を超えた機器を接続しないでください。
E0 05	低電圧保護	負荷を切り離してACまたはDCをオンにする
E0 05	インバーターモジュールの温度が高すぎます。ファンが不安定です。	製品の吸気口と排気口が塞がれていないか確認してください。ファンが塞がれていないことを確認してから、手動で再起動してください。
上記に記載されていない故障コード	お問い合わせください。	

6. 同梱品一覧

[4]

ALLPOWERS R3500	AC充電ケーブル	MC4 to XT60 充電ケーブル	取扱説明書&保証カード

7. 免責事項

[5]

本製品を使用する前に、説明書をお読みになり、内容を理解されていることを確認してください。誤った使用方法は、ご自身や他の人に重大な怪我を負わせたり、製品や財産に損失を与えたりするおそれがあります。説明書は大切に保管してください。説明書を紛失された場合は、メーカーにお問い合わせください。ユーザーは、製品の安全な使用を保証します。ユーザーの過失や違反により、製品や財産に損失が生じた場合、メーカーは一切の責任を負わません。製品の使用により、他の損失が生じた場合、メーカーは一切の責任を負わません。製品が法令に従って使用される場合、当社は本書および関連するすべての文書の最終的な解釈を留保します。

製品およびその付属品は、ALLPOWERS公式サイトの最新の製品情報に基づいて、最終的な解釈および修正の対象となります。

本製品は、医療機器、航空機器、原子力施設、重要インフラ、およびその他の職業用および医療用機器など、極めて高い信頼性とセキュリティが要求される用途を想定した設計ではありません。本製品をご自身で十分に理解した上で、本製品およびこのデバイスの適合性を判断してください。本製品を上記の機器または用途で使用した場合、メーカーは本製品の適合性、フィットネス、または誤作動に対する保証を一切行わず、責任を負わません。

8. お問い合わせ

[5]

ご質問やご支援が必要な場合は、当社の製品およびサービスに関するご質問やご支援が必要な場合は、当社までご連絡ください。
support@allpowers.com
公式ウェブサイト: www.allpowers.com

ALLPOWERS

便携式储能系统

Model R3500

本文中的所有产品和说明书内容均会因技术升级而发生变化，请以最终说明书内容为准。

目 录

[1]

1. 安全说明 - [1]
2. 规格参数 - [2]
3. 使用指南 - [3]
3.1 产品外观介绍 - [3]
3.2充电方式 - [3]
3.3太阳能充电 - [3]
3.4 智能扩展电池 - [3]
3.5电源装置 - [3]
3.6 UPS功能（不间断电源） - [3]
3.7 APP操作 - [3]
4. APP操作说明 - [4]
5. 故障排除 - [4]
6. 包装 - [4]
7. 免责声明 - [5]
8. 联系我们 - [5]

1. 安全说明

[1]

本产品使用前请先阅读说明书，以确保正确使用和全面理解。

1.为保证安全使用，请仔细阅读说明书。

2.为确保安全使用，请在干燥的地方使用产品，如果受潮，请先晾干。

3.为减少受伤风险，在儿童附近使用本产品时需要特别注意。

4.请勿改变您的生命或财产安全，否则可能会导致电击或火灾等其他危险。

5.请勿在高温环境下使用产品，否则可能会导致电击、火灾等其他危险。

6.在产品充电或使用期间，请勿堵塞产品通风口，否则可能会导致产品永久性损坏。

7.请勿让产品接触雨水或雪。

8.请勿在强静电或强磁场环境中使用产品，否则可能会导致产品电子元件损坏。

9.请勿自行拆卸产品，否则保修将失效，且制造商对第三方维修造成的损坏不承担责任。

10.请勿自行拆卸产品。如需维修或保养，请联系合格的维修人员。

11.滥用、跌落或施加过度压力可能会导致产品损坏。

12.报废电池时，请根据不同电化学体系分类处理。

13.发生火灾时，切勿使用灭火器或浸入水中。

14.请确保产品远离火源和热源。

2. 规格参数

[2]

基本信息

产品尺寸:355*269*245mm
电池容量: 3500Wh (90~100%)
Wi-Fi: 支持
蓝牙: 支持
UPS:不间断电源: 支持

输入端口

AC输入:120~240V~10A,2000W Max
太阳能输入:12~150V~40A, 2000W Max

输出端口

AC输出:120~240V/整机功率3200W(峰值6000W)
USB-A输出:5V~2.4A,12W~12W
USB-C输出:5V~5A, 9V~3A, 12V~3A,20W Max
USB-C2输出:5V~5A,20V~3A,20W Max
车载口(DC5521)可调输出:12V~10A,120W Max

电池规格

电池类型: LiFP磷酸铁锂
保护类型: 高温保护, 低温保护, 过电压保护, 过放保护, 过载保护, 短路保护, 过电流保护

运行温度

充电温度范围:0°C~40°C
放电温度范围:-20°C~40°C
存储温度范围:-20°C~40°C (-20°~104°F)
工作湿度范围:20~90%

认证

CE FC RoHS IC UL

3. 使用指南

[3]

3.1 产品外观介绍

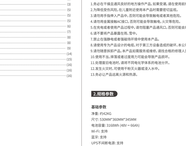

3.2 显示屏图标介绍

编号	功能介绍	编号	功能介绍
1	电量百分比	10	高温警告图标
2	输入功率数	11	电池电量
3	输出功率数	12	DC输出标识
4	省电模式图标	13	AC输出标识
5	输出端口数（插电数）+汽车点烟器数	14	UPS电源标识
6	三充模式图标	15	风扇工作标识
7	静音模式图标	16	车载输出图标
8	静音充电图标	17	蓝牙连接标识
9	输出过载图标	18	WIFI连接图标

3.3 交流充电

本产品交流充电采用AF POWER快充技术，充电功率最大可达120-132V/12-15A 1200-1800瓦。标准充电模式的最大输入功率为120-132V/8-10A 1000-1300瓦，超级充电模式的最大输入功率为120-132V/5-7A 600-800瓦。本产品的默认充电模式为超级充电模式，充电功率可通过APP或触摸屏调整。

当交流输入电流超出允许范围时，产品将自动保护，过载保护功能将弹出。确认产品无故障后，按交流开关按钮即可恢复充电。交流输入电流过高，可能导致插座过热甚至引起火灾。建议产品在通风良好的环境中使用。如产品发烫，请注意。

请使用产品原装标准交流充电线。ALLPOWERS对因使用非正规交流充电线造成的损害不承担任何责任。直接将插座接入电源插口，也建议关注插座温度，同时关注家庭插座是否能连续24小时。如满足上述条件，请切换至标准模式或涡轮模式进行充电。

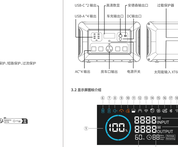

3.4 太阳能充电

用户可以按照以下方式将多个太阳能板连接起来为产品充电。

使用本产品进行太阳能充电时，请按说明书中的规格进行连接。

连接太阳能板前，请确认太阳能板的输出电压规格在150V以内，最大电流为40A，最大充电功率在2000W以内。

3.5 智能扩展电池

本产品可使用两块电池来实现扩展功能，这可以增加产品的容量。

使用扩展电池时，请按照产品说明书的规格进行连接。

请注意电源状态和电池连接，然后连接其他组件。请注意，如果连接状态和额定最大输出功率没有变化，扩展电池将无法正常工作。

请妥善保护连接电缆，以免电缆受损，这可能会导致电击或其他危险。请参考以下规格。

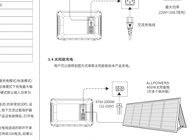

3.6 UPS功能（不间断电源）

本产品支持UPS（不间断电源）功能。您连接电源线和电源插头到产品的AC输入端口，电源将以旁路模式充电。当电源断电时，产品将自动切换至电池供电状态，电池将为连接到产品的电器设备供电。当电源突然断电，电池将自动切换至电池供电状态，切换时间小于20毫秒。请确保连接到产品的电器设备的额定输出功率不超过产品的额定输出功率。如果电源无法正常运行或数据丢失，或未按照说明书操作，或因不当使用、跌落或过度用力造成损坏，制造商不承担任何责任。

注：连接电源时，需先开启AC输出，并确保UPS功能处于关闭状态。

3.7 APP操作

①APP下载
可将手机扫描下面二维码下载安装APP

②APP操作

③现在电源状态查看。

4. APP操作说明

[4]

3.7 APP操作

①APP下载
可将手机扫描下面二维码下载安装APP

②APP操作

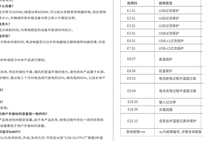
AP 0F0000 C2
Device Info
Device Info
Device Info