注意：
本手册描述的产品及其附件的某些特征和功能，仅供参考。
十度数码科技保留随时修改本手册中任何信息的权利，无需进行任何提前通知且不承担任何责任。

无担保声明：
本手册中的内容，除非适用法律要求，十度数码科技对本手册中的所有内容不提供任何明示或暗示的保证。
在法律允许的范围内，十度数码科技在任何情况下，都不对因使用本手册相关内容而产生的任何特殊的、附带的、间接的、惩发性的损害进行赔偿，也不对任何利润、数据、商誉或可预期的损失进行赔偿。

进出口管制：
若需将此产品手册中描述的产品出口、再出口、或者进口，您应遵守适用的进出口管制法律法规。

深圳市十度音响科技有限公司 Shenzhen SHIDU Digital Co.,Ltd 电话/FTEL:+2103588485 传真/FAX:+2103588485
EMAIL: 4008 939 488
官方网址 WWW.10SHIDU.COM

本说明书所示产品图片及文字内容仅供参考使用，若出现印刷错误，本公司不承担因此产生的损害。
产品图片及详细功能参数请以实物为准。
"10+DIGIT"、"十度"、"十度音响"、"四位数编码"、"爱知灯产品"等词，均为本公司的商标或注册商标。
本公司保留对产品更改及修改的权利，届时恕不另行通知。在法律允许范围内，最终解释权归深圳市十度音响科技有限公司所有。

十度音响

扩音器

使用说明书

USER MANUAL

关注十度微信公众号
回复型号获取设备
使用教程

安全警告：
1、请勿将产品及配件置近火源或任何过热的环境中。
2、请勿将产品及配件接触水及油气，不要在雨天户外的地方使用本设备，也不要将产品浸入任何液体中，避免产品及配件受到水渍或水珠。
3、请勿自行打开或任意拆解、维修电池组件，如果电池要换不当会有爆炸危险，严禁将电池投入水、火中或靠近任何过热的环境中。
4、本产品由外接电源适配器（5V 1.5A电源）充电后使用，充完电后可方便的通过拔掉电源适配器插头断开电网电源。
5、当用户暂不使用本产品时，请将产品电源开关旋转至关闭状态关闭电源（参见产品操控示意图），避免电池电量的流失。
6、当禁止使用无线设备或设备的使用会引起电子设备的干扰与安全隐患时，请关闭本产品。
7、在易燃易爆区域，请关闭本产品，并遵守相关标示说明，以免引起爆炸或火灾。易燃易爆区域包括但不限于：加油站、易燃或化工制品运输及储存设施、有爆炸危险标志的区域，有"无线双向无线电设备"标志的区域。
8、乘坐飞机时，请遵守航空公司有关规定和条例，在飞机起飞前关闭本产品，以免造成安全隐患。

产品操控示意图：



主机操作说明：
1：上一曲：按住M键或时，短按为上一曲，长按为快退
2：模式键：短按为模式切换；UHF模式时，长按为重新配对频点
3：数码显示屏
4：下一曲：按住M键或时，短按为下一曲，长按为快进
5：播放/暂停键
6：TF卡插槽
7：电源开关；音量控制旋钮
8：有线麦克风输入口（本机支持有线麦克风输入，标配不含有线麦克风）
9：U盘插口（仅限数据传输读取U盘数据）
10：DC 5V电源输入孔

产品卖点：
· UHF高频无线扩音技术，传输距离可达50米
· 炫彩显示屏，支持MP3显示
· 专利外观，人体工学设计，手感舒适，携带方便，外观时尚
· 采用高保真双喇叭，高、低音加深有力，中频饱满
· 采用十度原声扩音电声系统
· MP3音频解码技术：支持TF卡/U盘/蓝牙
· 无线麦克风智能省电模式
· 峰值高达10W

注意：因为本机为大功率扩音器，在小面积范围使用时，请在接麦克风期间，扩音音量请节至最小位置，不要将麦克风靠近扩音器喇叭，需将麦克风和主机间55CM外的空间距离，以免声音过大或麦克风距离喇叭太近造成回声、啸叫的现象。

TF卡/U盘操作：
按照机身标示的方向将TF卡/U盘正确插入TF卡/U盘槽口，按"M"键调整至音频模式，即可正常播放TF卡/U盘中的音频文件。
（注：在播放音乐时长按"M"键屏幕显示"ONE"可切换为单曲循环播放，再次长按"M"键屏幕显示"ALL"可切换为全部循环播放）。

为主机充电：
先将麦电源适配器插入主机的充电孔，另一端USB接头与充电器连接，再接较电量（220V）插座充电；显示屏电池容量符号将会不停的闪烁，充满电后，电池符号将停止闪烁。
注意：第一次使用主机时，电池有小部分电量，但为了达到最好的效果，建议先充满电再使用。充电时，主机将停止其它功能操作；充完电后可方便的通过拔掉电源适配器插头断开电网电源。

无线蓝牙操作说明：
第一步：先用无线开机，按"M"键切换至蓝牙模式，主机会提示"蓝牙已准备好，正在等待配对"，同时显示屏上显示"bLUE"在不停闪烁；
第二步：打开手机，进入手机的"设置"菜单，找到蓝牙功能选项，打开手机的蓝牙功能，点"扫描"按钮，待搜索到"S611"点击"S611"连接即可，同时，主机会提示配对成功；
第三步：连接成功后，即可通过主机播放手机教学教材，培训资料，歌曲播放等。



UHF头戴式无线麦克风配对及使用方法：

1.UHF头戴式无线麦克风开/关机：
将开关拨至"ON"状态，指示灯蓝灯长亮表示头戴已开机。
将开关拨至"OFF"状态，指示灯蓝灯熄灭，表示头戴处已关机。

2.UHF头戴式无线麦克风手动配对（此操作方法适用于出现无声时手动配对）
第一步：打开主机后进入到"M"键状态，长按"M"键至时，UHF灯闪烁表示已进入UHF无线配对状态；
第二步：将打开头戴式无线麦克风，长按"🎙"一键配对键3秒，就可以重新配对无线麦克风，配对成功后UHF字样停止闪烁，可开始试讲话。
注：在UHF无线扩音使用过程中长按"🎙"一键配对键为断开UHF无线扩音连接，需要再次使用UHF无线扩音时要重新长按M以上方法进行配对模式，在UHF无线扩音状态下，短按"+"键为单格音量加，短按"-"键为单格音量减。

3.为头戴麦克风充电：
当无线麦克风显示电量示灯不停的闪烁时，表示无线麦克风电量低电，当无线麦克风显示电量示灯不停的闪烁时，表示无线麦克风，请将无线麦克风DC 5V接口连接麦克风type-C接头，另一端连接充USB接头与DC 5V的USB充源接口连接；充电时无线麦克风红色指示灯长亮，充满电后红色指示灯熄灭，充电时间约3-5小时充满，充电完成后请及时拔掉充电插座断开电网电源。

数据参数：

输出功率	10W
输出阻抗	4Ω
充电电压	DC 5V 1.5A
使用音乐时间	6-10小时
频率响应	80Hz-18000Hz
工作温度	-10℃-45℃
使用扩音时间（有线麦克风）	6-10小时
充电时间	3-5小时

产品使用注意事项：
1、为了达到话筒扩音最佳效果，请将味头放置离正面前方1-2CM处对准味头处发音，若有啸叫，可适当调小音量或将机器与味头的距离稍微拉开，以防互相干扰。
2、尽量避免频繁插拔麦克风插口，以免造成插口松动而引起接触不良，不可调话筒和音频插口。
3、为保证锂电池使用寿命，建议使用完两充电，频繁充电将加速电池芯片老化，长时间不用时应每隔两个月充一次电；
4、因响机硬件故障，不可将机器和银行卡等等磁性的东西放一起，以免造成夹磁而带来不必要的麻烦；
5、本产品所有配件智能本机工作需要设计，如需更换配件尽量使用本公司原装配件，以达到最佳工作状态；
6、本产品在充电和正常使用过程中可能会轻微发热，这属于正常现象；
7、请使用抗静电布来清洁擦拭本产品，在清洁本产品时请先关闭电源开关，并断开所有外部连接，请勿用化学物质擦拭（如：酒精、苯等化学洗剂或有腐蚀性的清洁擦拭剂）；
8、请勿摔落、挤压或者踩踏本产品，请勿擅自拆解本产品，否则不能享受本公司的免费保修服务。

9、符合"微功率短距离无线电发射设备目录和技术要求"的具体条款和使用场景,采用的天线类型和性能,控制、调整及开关等使用方法；
10、不得擅自改变使用场景或使用条件,扩大发射频率范围,加大发射功率(包括额外加装射频功率放大器),不得擅自更改发射天线；
11、不得对其他合法的无线电台（站）产生有害干扰,也不得提出免受有害干扰保护；
12、应当承受辐射射频能量的工业、科学及医疗（ISM）应用设备的干扰或其他合法的无线电台（站）干扰；
13、如对其他合法的无线电台（站）产生有害干扰时,应立即停止使用,并采取措施消除干扰后方可继续使用；
14、在航空器内和依据法律法规,国家有关规定,标准划设的射电天文台、气象雷达站、卫星地球站（含测控、测轨、接收、导航站）等军民用无线电台（站）机场等的电磁环境保护区域内使用微功率设备,应当遵守电磁环境保护及相关行业主管部门的规定；
15、禁止在以机场跑道中心为圆心,半径5000米的区域内使用各类模型遥控器；
16、确功率设备使用时温度和电压的环境条件。
17、制造型号:S611 销售型号:S20/S611（具体型号以实物为准）

常见问题的自我解决：
1、开关开启，扩音器没有声音
A、显示屏不亮，电池没电，充电解决；
B、检查话筒是否插错位置。
2、扩音器有明显噪叫
A、正确配戴话筒，将麦头远号轻处对准嘴角方向，麦克风与主机保持60-70CM距离；
B、空间受少时应适当调低音量以减少回声造成啸叫。

产品保修须知：
为了让您更好的享受我公司的各项服务，请详细阅读以下内容：十度数码科技产品的保修服务由全国各地的十度数码授权术服务中心负责提供。本产品自销售之日起计保修期和"三包"有效期，在"三包"有效期内，正常状态下使用本产品而发生故障，可依据"三包"规定予以维修、更换、退货。在产品保修期内，可依照本保修条款的内容，在十度数码授权技术服务中心享受无偿维修服务（随机附件不在保修范围内）。本品保修期限规定为一年。

在保修期（含"三包"有效期）内以下情况将实施有偿维修服务，同时不享受"三包"服务：
1）不能出示有效保修卡部件和有效发票。
2）购买产品日期、销售单位名称（盖章有效）等项目未能完整填写或涂改保修卡。
3）由于不可抗拒的自然灾害造成的故障。损伤。
4）在运输、搬卸过程中造成的故障、损伤。
5）由于未能按照《产品使用说明书》上所写的使用方法和注意事项操作而造成的人为故障。
6）未经本公司授权地进行的产品拆卸、维修、改装而造成的故障。

需要保修时请将机器与本保修卡（原件）及购机凭证（复印件）一起送往十度数码科技有限公司授权技术服务中心，运输费由用户承担。

产品保修卡

购买产品时，请认真填写此卡，并予以妥善保存。

用户档案

用户姓名	
性别	
通讯地址	
邮编	
联系电话	
购买地点	
购买日期	
品名及规格	
销售单号	
机身编号	
经销商签名	
用户签名	

经销商盖章处

Please read the instructions carefully before using it.
Note:
Before turn on the amplifier, ensure that the MIC don't point at the amplifier, this will eliminate any annoyance associated with howling. For ensure better amplification, aim at the headset MIC capsule when speaking, and keep the distance between the voice amplifier and the MIC more than 60 cm to avoid howling.
Simply tucking the speaker around waist, and mounting headphone over head can help achieve the required distance.

Main features:
1.SHIDU patented appearance;
2.Stylish, ergonomic and comfortable design;
3.10W power output, sound coverage up to 300 ㎡ ;
4.Support Bluetooth function;
5.Support TF card & USB flash drive music play;
6.UHF wireless microphone, long wireless distance and clear sound.

Technical Parameters:

Power output:	10W	Frequency response:	80Hz-18KHz
Output Impedance:	4Ω	Working temperature:	-10℃-45℃
Recharging voltage:	DC 5V 1.5A	Amplifiercurrent use time:	6-10hours
Musicuse time:	6-10hours	Charging time:	3-5 hours

Structure Instruction:

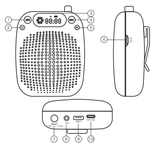

1.Previous: Short press to play previous song, long press to songs fast rewind.
2.Mode: A) Short press to switch to TF card play / USB flash drive play / Bluetooth mode / UHF mode.
B) In UHF mode, long press to enter into UHF pairing status.
C).In music playing mode, long press for single repeat, LCD shows "ONE", Long press again for all repeat, LCD shows "ALL".
3.Digital display
4.Next: Short press to play next song; long press to fast forward.
5.Play/Pause: Short press it to pause or play the song.
6.TF card slot: Insert the TF card to play mp3. It is compatible with most brands, the maximum capacity is 32GB.
Note: It may be unreadable when the file is large or complex.
7.Power switch / volume control
8.Ø3.5mm Microphone Jack: Insert the wired microphone in any mode to amplify with current mode simultaneously. To avoid howling please do not point the microphone toward the speaker. (Wired microphones are not included.)
9.USB flash drive slot: Insert the USB flash drive to play mp3. It is compatible with most brands, the max capacity is 32GB.
10.Type-C Port (DC 5V): Use the charger with DC 5V output connect with Type-C cable to charge the PA system.
Unplug the charger as soon as it is fully charged.

TF/USB flash drive:
Insert the TF card/USB flash drive as showed on the device correctly, then press "M" key to switch to the audio (MP3) mode, and you can play the audio files in the TF card/USB flash drive.
Note: Long press " M " key when playing music, then the LCD screen display " ONE", which means single loop. Long press " M " key again, then the LCD screen display "ALL", which means to play all. (In USB/TF card mode only)

How to charge the amplifer:
When battery symbol on the screen flashes means low power. Please charge through Type-C cable with DC 5V output adaptor. The battery symbol will flash when charge, and when battery symbol stop flash means fully charged. Please remember to unplug after it is fully charged.
Note: We suggest fully recharge the amplifier before you using it at the first time.



Bluetooth Instruction:
Please pair with your Bluetooth device as follows:
Step 1: Turn on the amplifier and press "M"key to switch to Bluetooth mode, A voice will prompt "Bluetooth is waiting for connection" and the"bLUE"display on the screen will flash.



Step 2: From your mobile setting,turn on the Bluetooth function.Then search for "S611"and connect, Bluetooth pairing is complete with a voice prompt "Bluetooth is connected",
When playing music, please keep the amplifier close to the Bluetooth-enable device to maintain a stable connection.

UHF Wireless microphone:



The wireless microphone factory setting have been paired sucessfully, you can use it directly. If the microphone has no sound or the microphone is disconnected, you need to manually pair it.

Pair the UHF manually:
Step1: Turn on the amplifier and switch to UHF mode, long press the "M" key, the "UHF" icon will flash and a voice prompt will say, "UHF is waiting for connection".
Step2: Turn on the wireless microphone and long press "🎙" key for 5 seconds. The "UHF" icon will stop flashing, and a voice prompt will say, "UHF is connected".

Volume Control :
1.If amplifier howling or in a small volume, adjust the volume by press "+" or "-" on the wireless microphone.
2.You can also adjust the volume on the voice amplifier by rotate the volume control.

How to charge the wireless microphone:
When the microphone blue indicator light flashes means low battery. Please turn it off and charging through Type-C with DC 5V 500mA+ adapter. The red indicator light will be on all the time when charging, and it will go out after fully charged.

Notes:
1.The normal charge time is 3~5 hours. Unplug the charger as soon as it is fully charged.
2.Full charge before first use of the microphone to ensure best results.
3. Turn off the UHF wireless microphone when not in use.

Trouble shooting:
1.Turn on the power switch, but the amplifier has no sound.
A.The LCD is not light: it means no power and you should charge the amplifier.
B.Turn the volume up on the voice amplifier, and also on the microphone.
2.Talk to the wireless microphone, but the amplifier has no sound.
A.Please confirm both voice amplifier and microphone is power on.
B.Please confirm whether the wireless microphone has been paired with the amplifier successfully or not. Pair the UHF manually again if necessary.
3.The voice amplifier has distinct howling.
A.Wear the microphones correctly: put the microphone in front of the mouth.
B.In a small room, please turn down the volume properly to avoid howling.

SHIDU After sales service:
If you have any questions, please feel free to contact us, we will try our best to provide best service.
www.10shidu.com Email: service@10shidu.com